


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

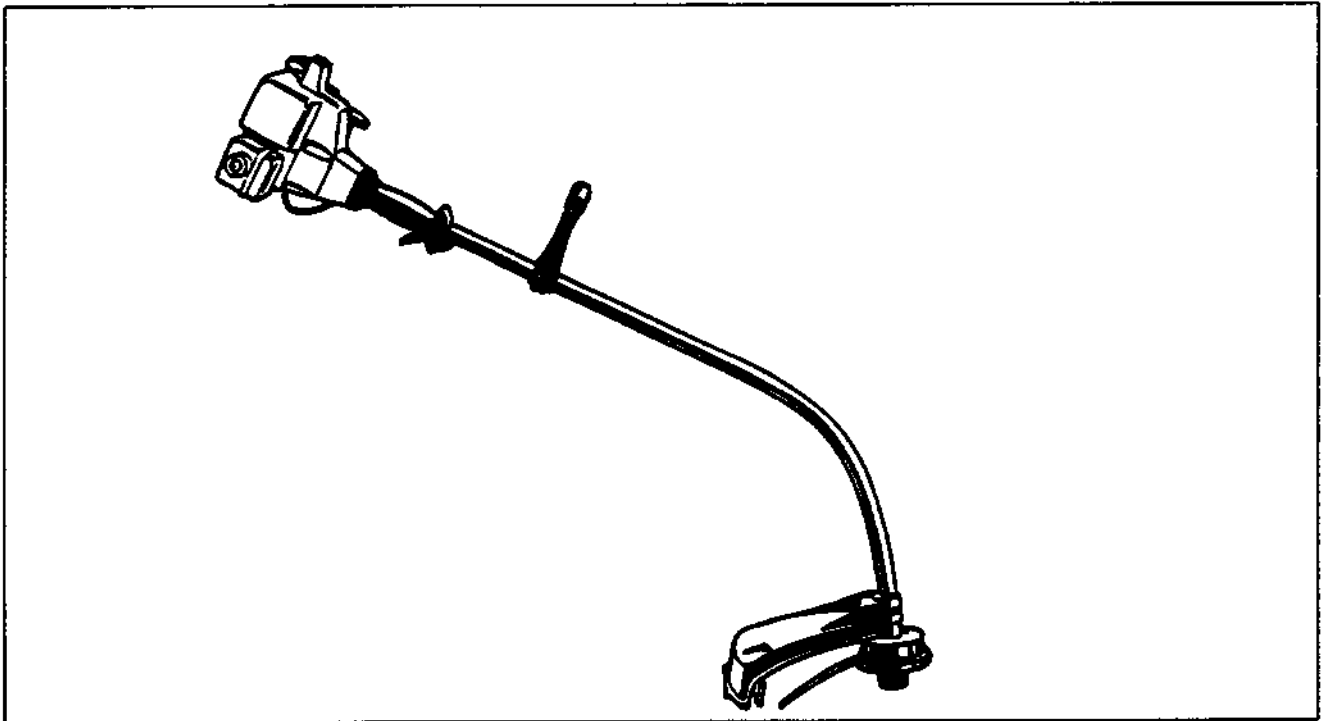

21LCN




1.1995


Spare parts

Pièces détachées



⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

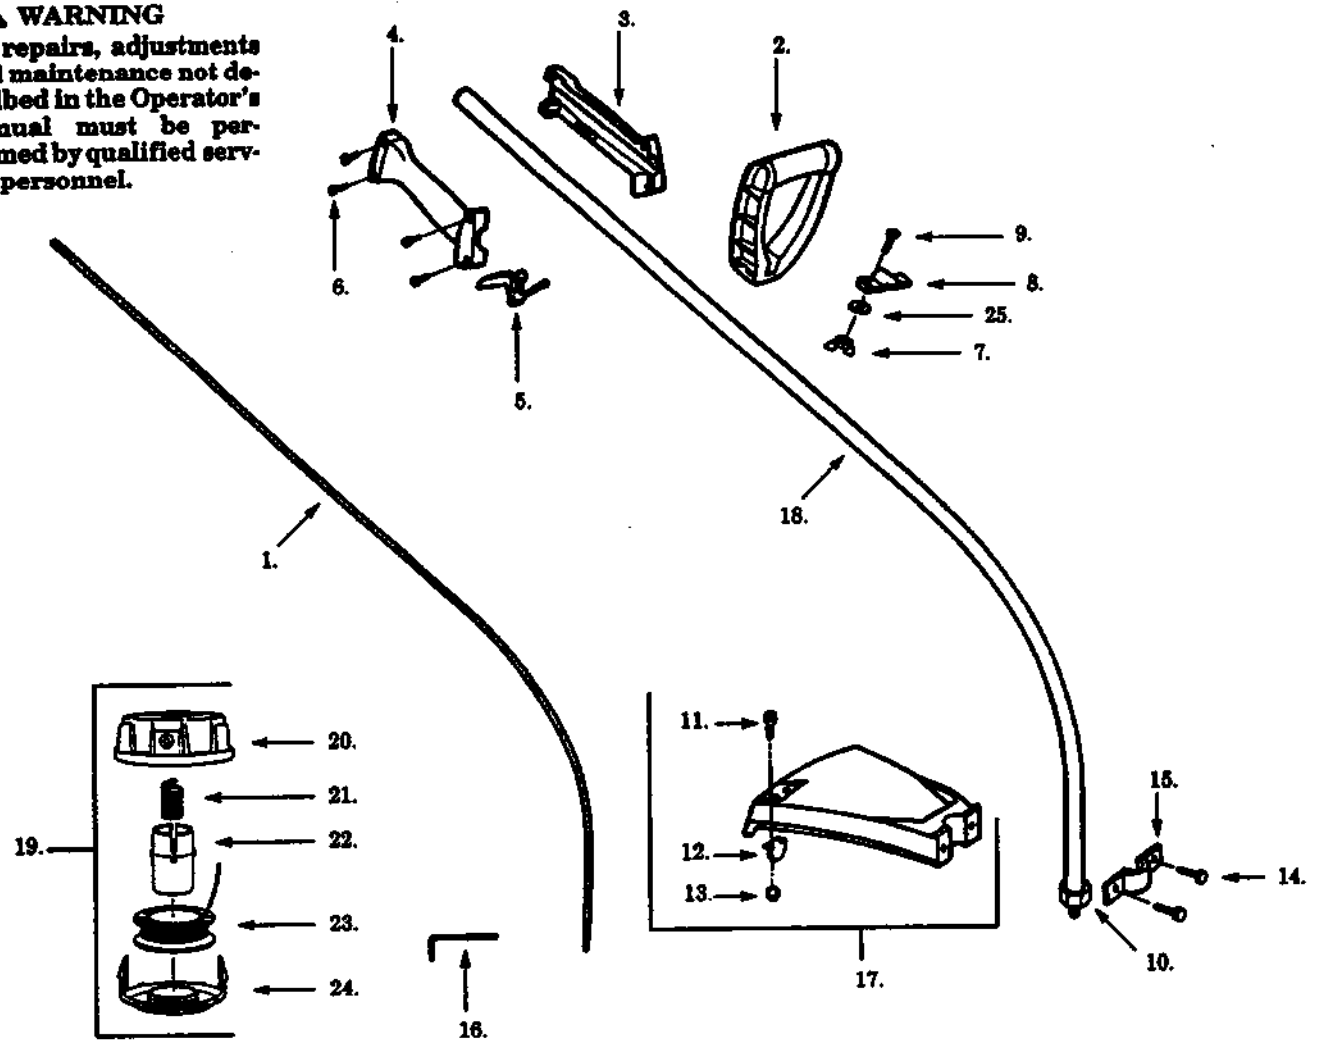

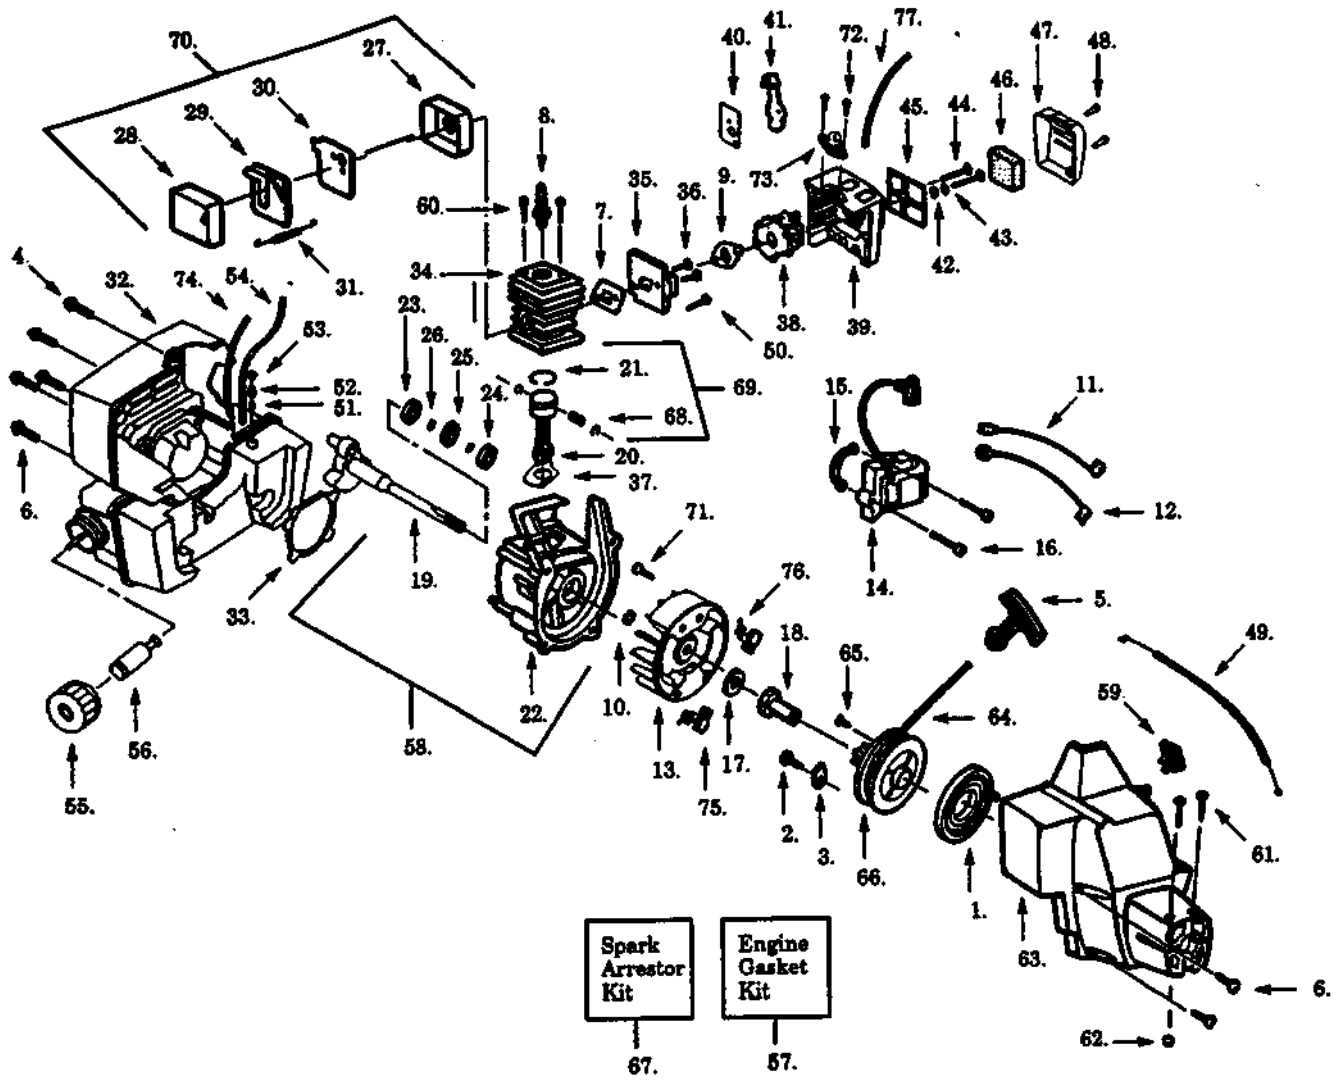


For Husqvarna Parts Call 606-678-9623 or 606-561-4983								
Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 02 93-95	starter spring	27.	530 03 65-78	Muffler Body	54.	530 06 95-71	Fuel Line-Prim./Tnk
2.	530 01 57-75	screw-pulley	28.	530 03 65-77	Muffler Cover	55.	530 01 43-47	Fuel Cap Ass'y.
3.	530 02 75-23	Retainer-pulley	29.	530 03 86-02	Muffler Baffle-Exit	56.	530 01 43-62	Fuel Pickup Ass'y.
4.	530 01 59-34	Screw-Shrd/Fan Hsg.	30.	530 03 65-79	Muffler Baffle-First	57.	530 06 96-25	Engine Gasket Kit
5.	530 02 75-69	Starter Handle	31.	530 02 99-30	Muffler Spring			(† Indicates Content)
6.	530 01 58-10	Screw-Fan Housing	32.	530 04 73-25	Shroud & Tank AMY.	58.	530 01 47-29	C'case & C'shaft Assy.
7.	530 01 91-85	Gasket-Cylin./Carb.	33.	530 01 91-81	Gasket-C'case			(Incl. 10,19,22-26)
8.	530 03 00-75	Spark Plug-RCJ-8Y	34.	530 06 96-19	Cylinder	59.	530 03 81-14	Switch
9.	530 01 91-94	Gasket-Carb.	35.	530 06 95-64	Carb. Adaptor	60.	530 01 59-53	Screw-Cylinder
10.	530 01 59-45	Retainer-Crankcase	36.	530 01 60-14	Straw-Carb. Adaptor	61.	530 01 60-72	Screw-Pinch Clamp
11.	530 01 46-63	Lead Wire	37.	530 01 92-23	Gasket-Cylinder	62.	530 01 57-68	Locknut-Pinch Clmp
12.	530 01 46-62	Ground Wire	38.	530 06 96-47	Carburetor	63.	530 06 96-75	Fan Housing/Shroud
13.	530 03 91-48	Flywheel			w/Limiter Cap			Ass'y.
14.	530 03 91-63	Ignition Module	39.	530 03 89-44	Air Box	64.	530 06 92-32	Rope Kit
15.	530 03 61-45	Spacer-Ignition Mod.	40.	530 03 73-26	Choke Plate	65.	530 01 60-80	Screw-Rope Retain.
16.	530 01 59-54	Straw-Ignition Mod.	41.	530 03 81-02	Choke Shutter	66.	530 06 94-00	Starter Pulley Kit
17.	530 01 58-28	Washer-Flywheel	42.	530 01 52-54	Wave Washer			(Incl 65)
18.	530 02 79-53	Drive coupling	43.	530 01 58-52	Choke Spacer	67.	530 06 93-80	Spark Arrestor Kit
19.	530 01 45-32	Crankshaft Ass'y.	44.	530 01 58-87	Screw-Carb.	68.	530 01 51-62	Piston Pin Retainer
20.	530 06 96-15	connecting Rod Ass'y	45.	530 03 74-13	Filter Plate	69.	530 06 96-21	Piston Kit
21.	530 03 64-04	Piston Ring	46.	530 03 73-31	Air Filter Foam			(Incl. 21 ,68 & Pin)
22.	530 01 48-61	Crankcase Ass'y. and. 10 & 23-25)	47.	530 03 72-92	Air Falter Cover	70.	530 06 96-60	Muffler Kit
23.	530 03 21-25	Inner Bearing	48.	530 01 59-66	straw-Fdter cover	71.	530 01 58-82	Screw-Flywheel
24.	530 03 21-24	Outer Bearing	49.	530 03 67-44	Throttle Cable Ass'y.	72.	530 01 60-90	Screw-Primer Ass'y
25.	530 01 91-79	C'case seal	50.	530 01 58-14	Screw-Carb. Adaptor	73.	530 03 79-72	Primer Bulb Ass'y.
26.	530 01 59-41	Retain. Ring-C'shaft	51.	530 02 61-19	Check Valve	74.	530 06 92-47	Fuel Line-Carb./Tank
			52.	530 02 97-17	Element-Falter	75.	530 02 99-39	Starter Dog
			53.	530 02 96-96	Retainer	76.	530 03 77-30	Starter Dog Spring
						77.	530 06 92-16	Fuel Line-Carb./Prim

✓ = NEW PART NUMBER FOR THIS IPL ★ = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)



Carburetor Assembly Kit Number #530 05 96-47 - WA - 218

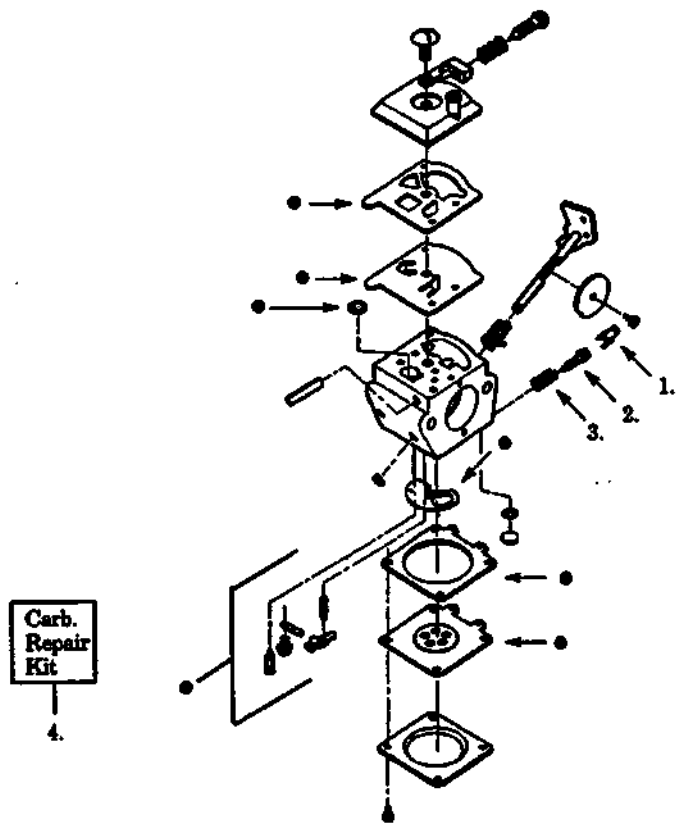

Ref.	Husqvarna Part No.	Description
1.	530 03 53-41	Sinter Cap
2.	530 03 53-41	Idle Needle
3.	530 03 53-45	Spring Idle Needle
4.	530 06 96-68	Carburetor Repair Kit (● Indicates Contents)