

# EL 1400, 1600

**Spare parts**

Replaces

**Ersatzteile**

Ersetzt

**Pièces détachées**

Remplace

**Reserve onderdelen**

Vervangt



**Repuestos**

Reemplaza

**Reservdelar**

Ersätter

106 23 73-63

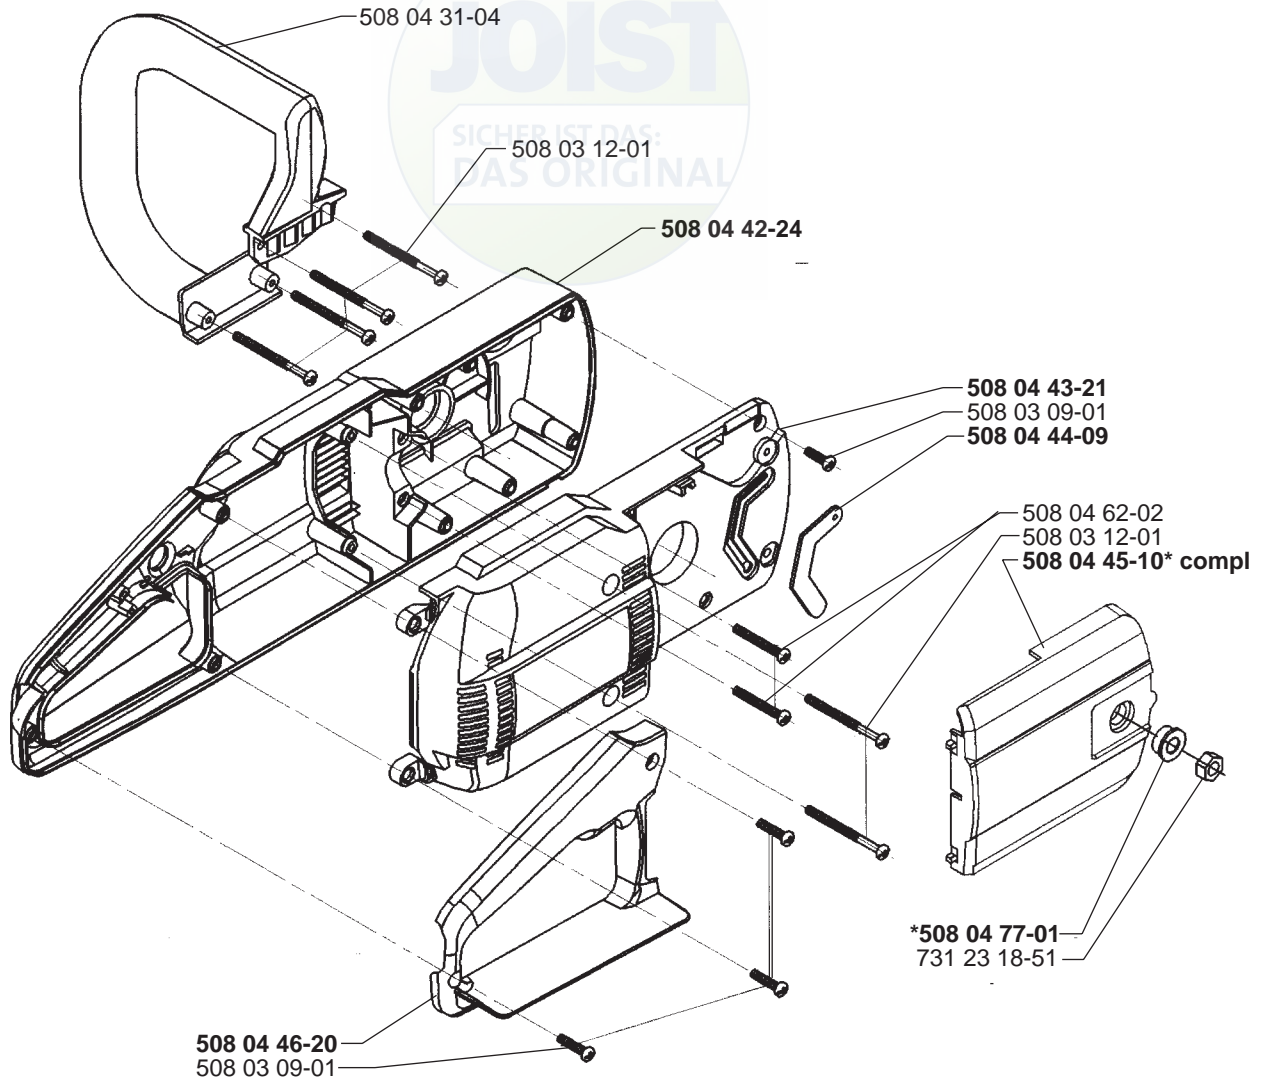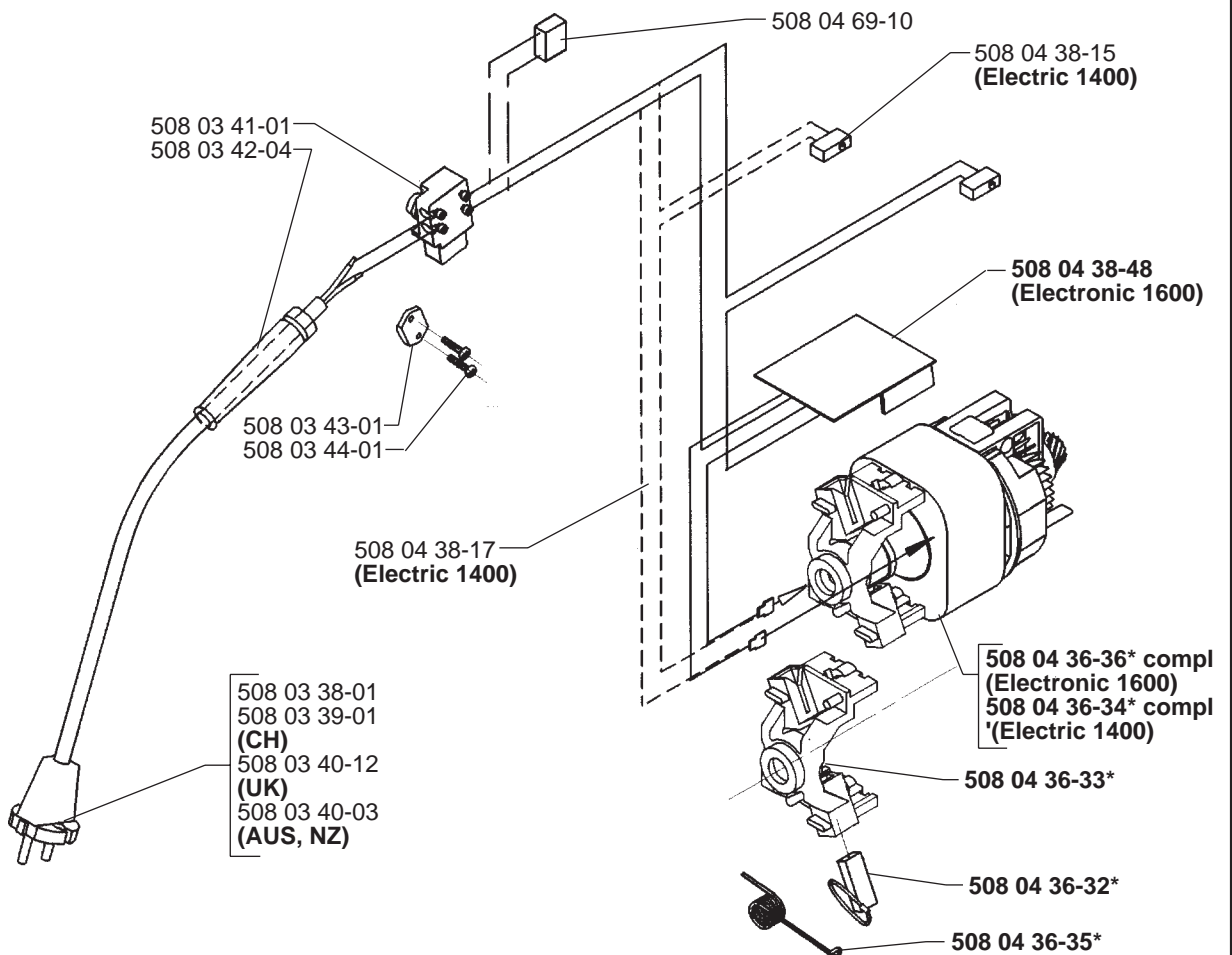**A****B**


**C**



508 03 86-08  
(1400)  
508 03 86-09  
(1600)


**F**

508 03 19-10  
508 03 18-10

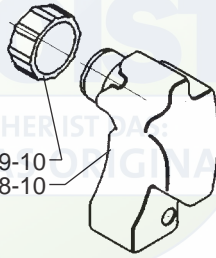

508 04 33-11 compl

508 04 35-03  
508 04 35-02  
508 04 35-05

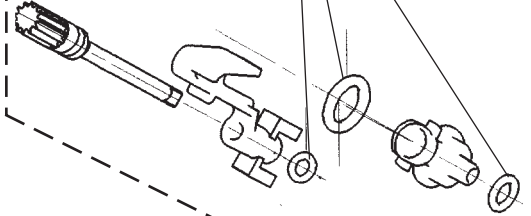

**D**

\*508 04 77-16

\*compl 508 04 23-23

508 04 54-01

725 24 57-76

738 21 01-02

508 04 22-14

729 52 79-01

508 04 61-10

723 13 39-76

508 04 60-01

508 04 63-01

508 04 66-10

508 03 09-01


508 04 66-14

729 52 93-71

508 04 62-02

508 04 30-05

**E**

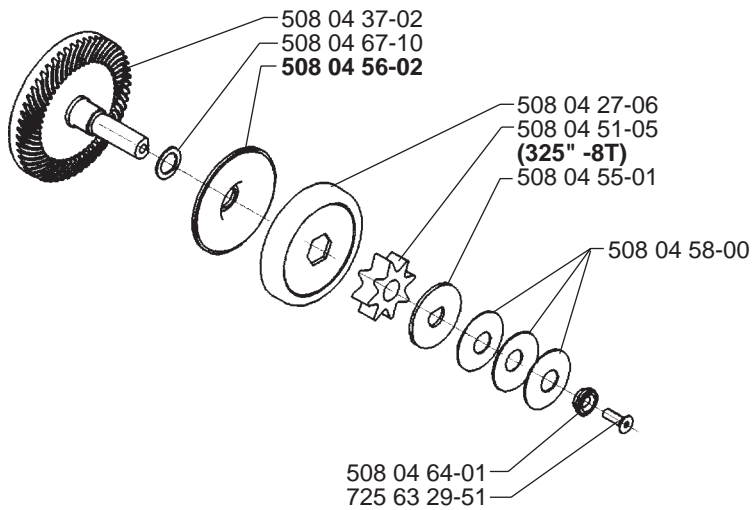

**G**

