

BV32

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

Model BV32


⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

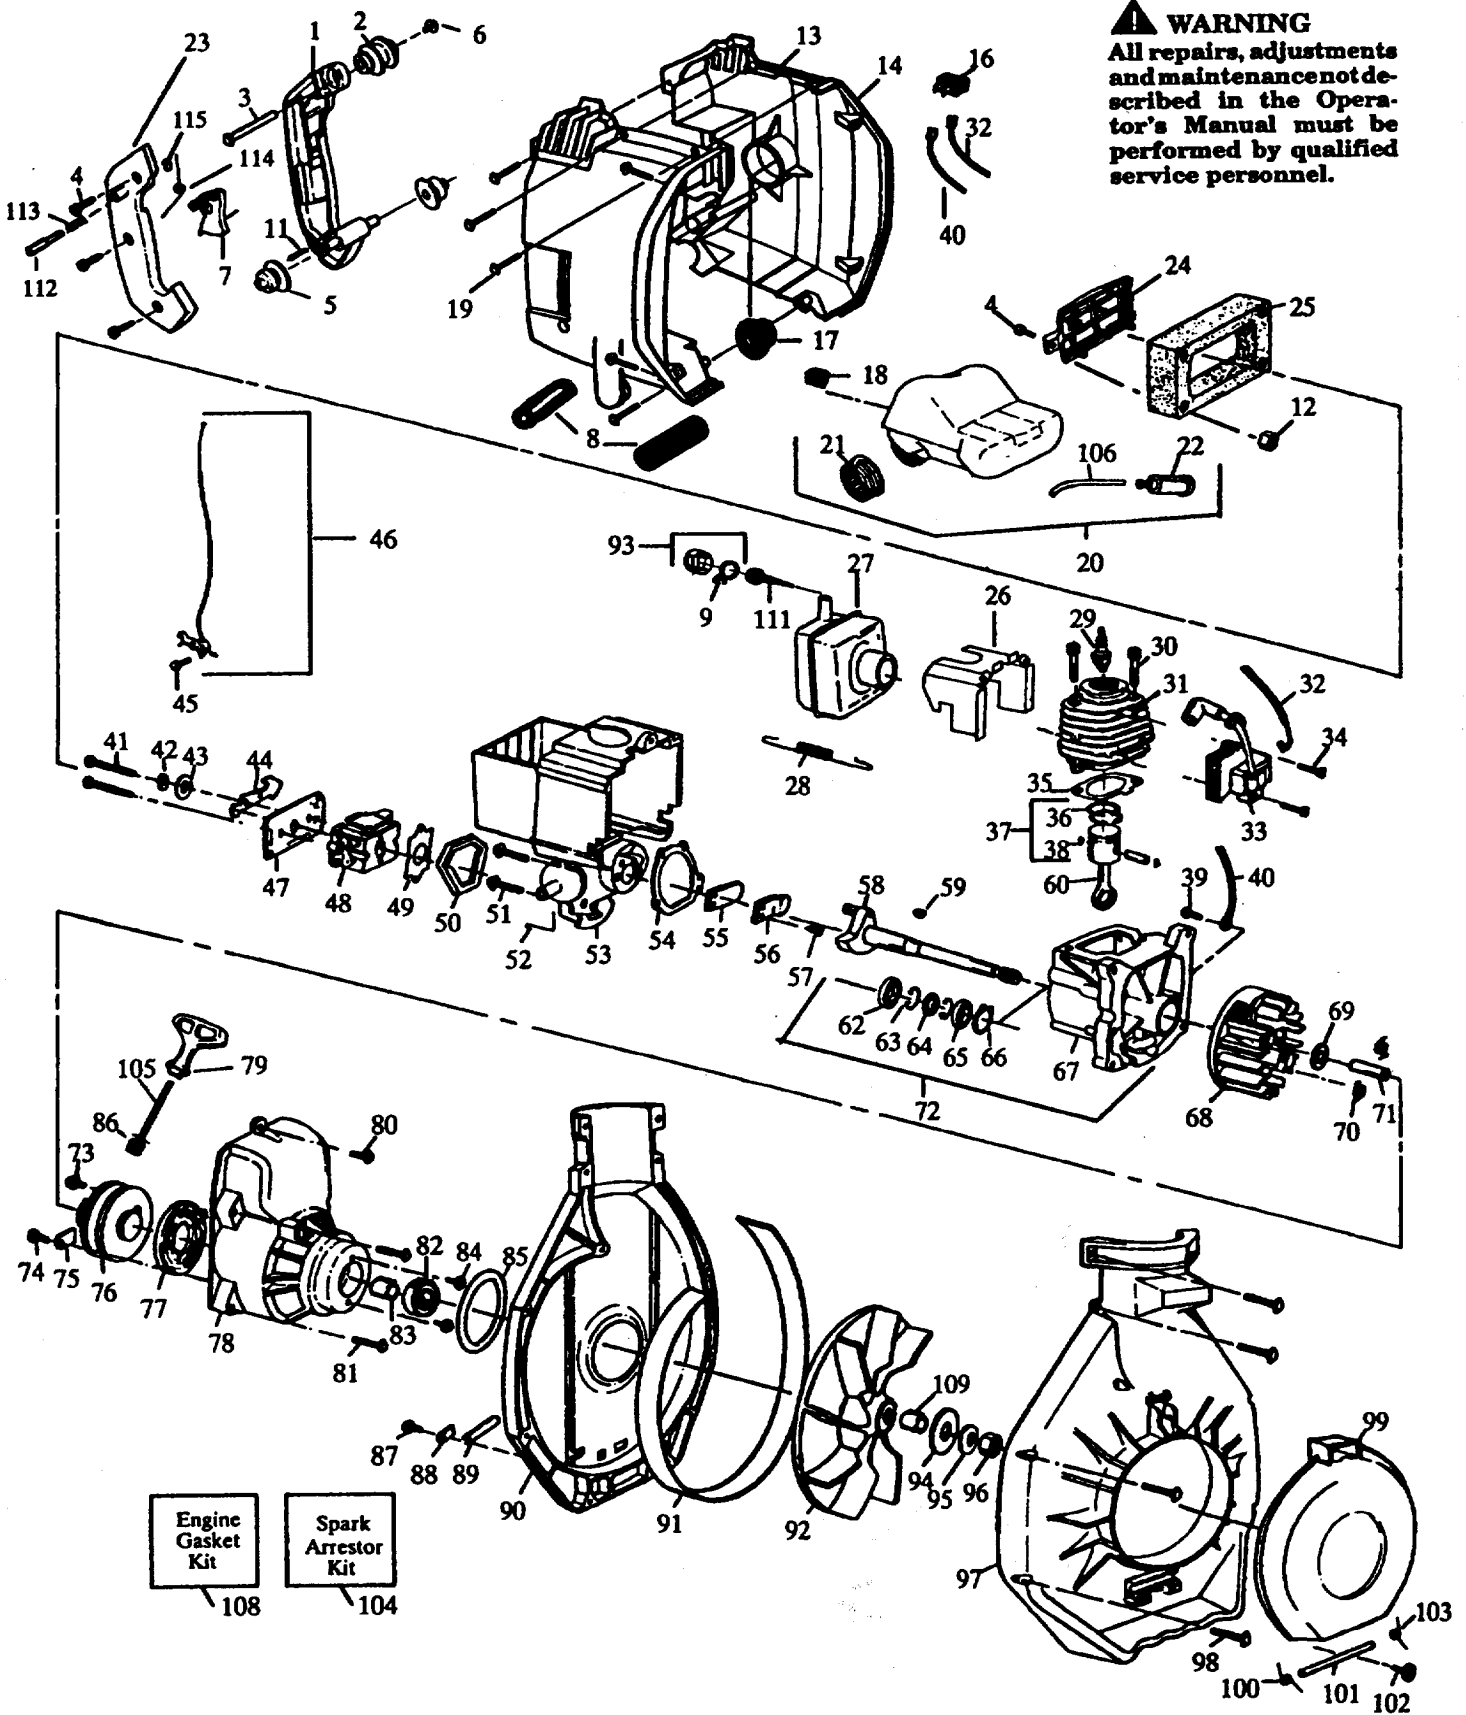

Model BV32

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	530 09 47-12	Handle	57	530 01 60-64	Screw
2	530 02 69-94	Front Isolator	58	530 01 40-33	Crankshaft
3	530 02 91-11	Spacer	59	530 01 51-26	Key
4	530 01 56-35	Screw	60	530 01 09-60	Connecting Rod Ass'y.
5	530 02 91-30	Rear Isolator	62	530 03 21-03	Inner Bearing
6	530 01 58-13	Screw	63	530 01 57-87	Retaining Ring
7	530 02 90-72	Trigger	64	530 01 91-58	Crankshaft Seal
8	530 03 75-95	Assist Handle Ass'y.	65	530 03 21-02	Outer Bearing
9	530 02 92-28	Spark ArrestorClamp	66	530 01 57-89	Retaining Ring
10	530 02 99-28	Exhaust Deflector Ass'y.	67	530 01 40-16	Crankcase
11	530 01 58-40	Pin	68	530 03 91-89	Flywheel
12	530 00 15-43	Nut	69	530 34 79-87	Washer
13	530 03 78-64	Shroud-Left	70	530 02 38-17	Spring
14	530 03 79-34	Shroud-Right	71	530 02 91-76	Spacer
16	530 06 95-72	Switch	72	530 01 41-56	Crankcase/Crankshaft Ass'y.
17	530 02 91-29	Isolator	73	530 01 60-80	Screw
18	530 02 92-95	Isolator	74	530 01 54-96	Screw
19	530 01 58-43	Screw	75	530 02 75-23	Retainer
20	530 01 41-62	Fuel Tank Ass'y. (Incl. #21, 22 & 106)	76	530 06 94-86	Starter Pulley (Incl. 73)
21	530 01 43-47	Fuel Cap (w/retainer)	77	530 02 93-95	Starter Spring
22	530 01 43-62	Fuel Pick-up Ass'y.	78	530 06 96-76	Fan Housing
23	530 01 41-60	Handle Cover	79	530 02 75-69	Starter Handle
24	530 03 78-65	Cover	80	530 01 57-75	Screw
25	530 02 91-12	Air Filter	81	530 01 57-69	Screw
26	530 02 94-04	Air Baffle	82	530 03 21-08	Bearing
27	530 06 92-93	Muffler	83	530 02 91-10	Spacer
28	530 02 91-16	Spring	84	530 01 58-86	Screw
29	503 23 50-08	Spark Plug (CJ-8Y)	85	530 01 91-67	"O" Ring
30	530 01 52-39	Screw	86	530 02 91-82	Eyelet
31	530 06 96-28	Cylinder	87	530 01 58-15	Screw
32	530 02 91-45	Lead Wire	88	530 02 75-23	Retainer
33	530 03 91-37	Ignition Module	89	530 02 91-19	Roll Pin
34	530 01 58-16	Screw	90	530 09 47-10	Blower Housing (Upper)
35	530 01 91-78	Gasket	91	530 02 91-73	Band
36	530 02 58-75	Piston Ring	92	530 01 41-57	Impeller
37	530 06 92-77	Piston Kit (Inc. #36, 38 & Pin)	93	530 01 43-39	Deflector & Clamp Ass'y.
38	530 01 51-62	Retainer	94	530 01 58-18	Washer
39	530 01 53-06	Screw	95	530 01 54-41	Washer
40	530 02 91-44	Ground Wire	96	530 00 17-33	Nut
41	530 01 58-49	Screw	87	530 01 41-58	Blower Housing (Lower) (Incl. 99-103)
42	530 01 52-54	Wave Washer	98	530 01 58-43	Screw
43	530 01 58-52	Spacer	99	530 09 47-15	Door
44	530 02 91-14	Choke Shutter	100	530 01 56-67	Spring
45	530 01 57-75	Screw	101	530 01 56-47	Pin
46	530 03 74-92	Cable Assembly	102	530 01 58-15	Screw
47	530 02 91-15	Plate	103	530 01 56-72	Spring
48	530 03 52-63	CarburetorType1(Wt141)	104	530 06 93-48	Spark Arrestor Kit
49	530 01 91-64	Gasket	105	530 06 92-32	Rope Kit
50	530 01 91-65	Seal	106	530 06 92-47	Line Kit
51	530 01 57-71	Screw	108	530 06 92-94	Gasket Kit
52	530 02 91-13	Ground Wire	109	530 02 91-18	Hub
53	530 02 90-70	Reed Block	111	530 02 92-27	Spark Arrestor Screen
54	530 01 91-66	Gasket	112	530 02 91-17	Throttle Lock Button
55	530 02 75-93	Reed Valve	113	530 02 47-72	Spring
56	530 02 75-94	Reed Stop	114	530 02 75-97	Spring
			115	530 01 57-02	"C" Clip


Model BV32

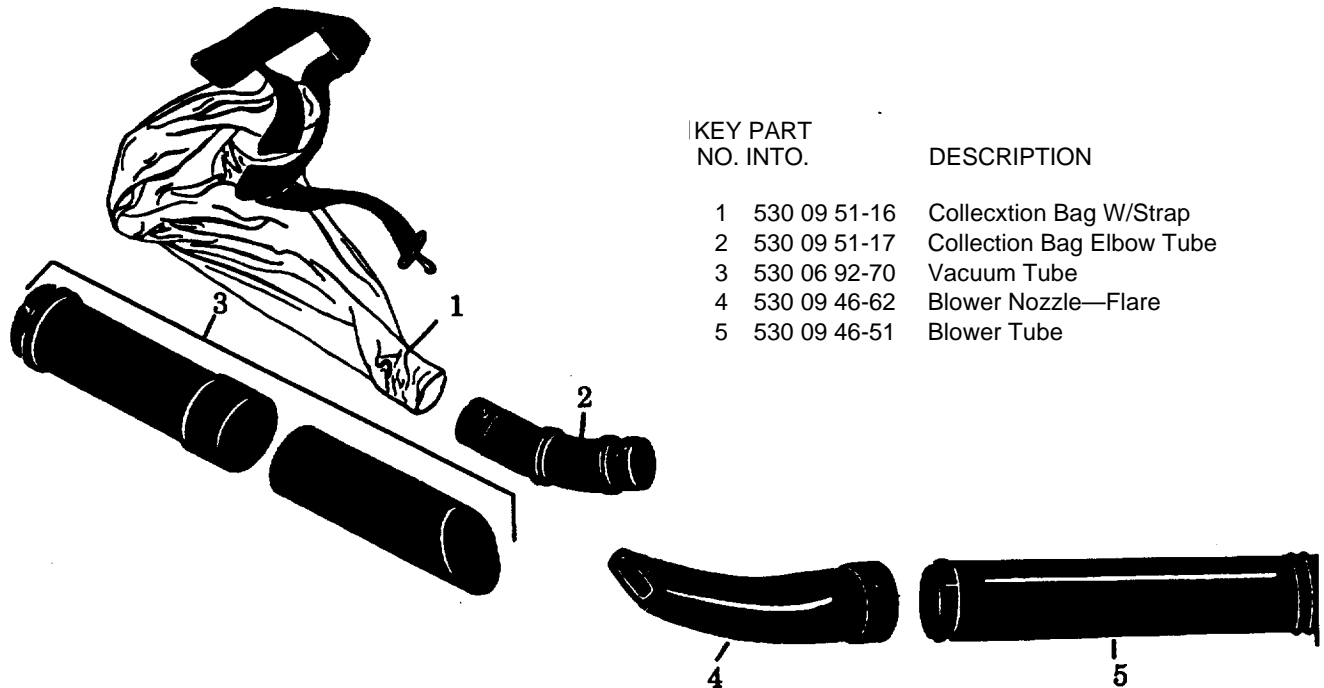

KEY PART NO. INTO.	DESCRIPTION
1 530 09 51-16	Collection Bag W/Strap
2 530 09 51-17	Collection Bag Elbow Tube
3 530 06 92-70	Vacuum Tube
4 530 09 46-62	Blower Nozzle—Flare
5 530 09 46-51	Blower Tube

Carburetor Assembly Part Number 530-035263 WT-141

Carburetor Assembly Number 530-069644 WT-141 A. Only for USA

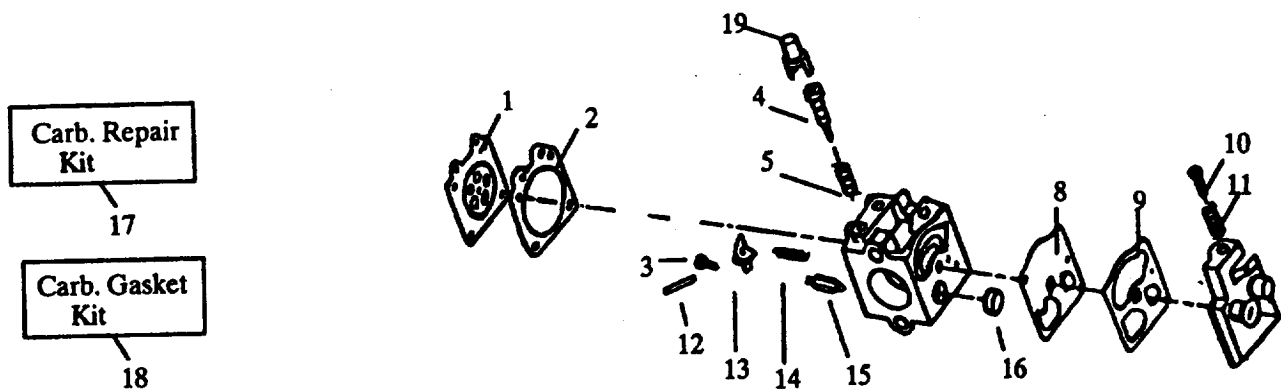

KEY NO.	PART NO.	DESCRIPTION
1	504 13 08-08	*+ Metering Diaphragm
2	530 03 51-51	*+ Metering Diaphragm Gasket
2B	530 03 53-78	USA
3	530 03 50-16	Metering Lever Pin Screw
4	530 03 52-68	Mixture Needle
4B	530 03 53-75	USA
5	504 21 00-50	Mixture Needle Spring
5B	530 03 53-76	USA
8	504 13 08-07	Fuel Pump Diaphragm
9	504 13 09-06	Fuel Pump Gasket
10	530 03 52-03	Idle Speed Screw
11	501 66 78-01	Idle Speed Spring

KEY NO.	PART NO.	DESCRIPTION
12	505 52 01-25	*+ Metering LeverPin
13	505 52 01-27	Metering lever
14	530 03 51-88	Metering lever Spring
14B	530 03 53-77	USA
15	503 11 70-01	* Inlet Needle Valve
16	530 03 51-78	* Fuel Inlet Screen
17	505 52 01-30	* Carb. Kwik Repair Kit (* Indicates Contents)
18	530 03 52-19	* Carb. Gasket/Diaphragm
19	530 03 84-03	Cap