


Jonsered

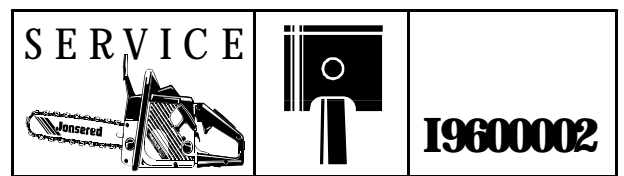

IPL, GT22 L, GT24 L, 1996.03.06-01, 108 07 02-88

GT22 L, GT24 L

Spare parts

Ersatzteile


Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

MODEL GT22L GT24L

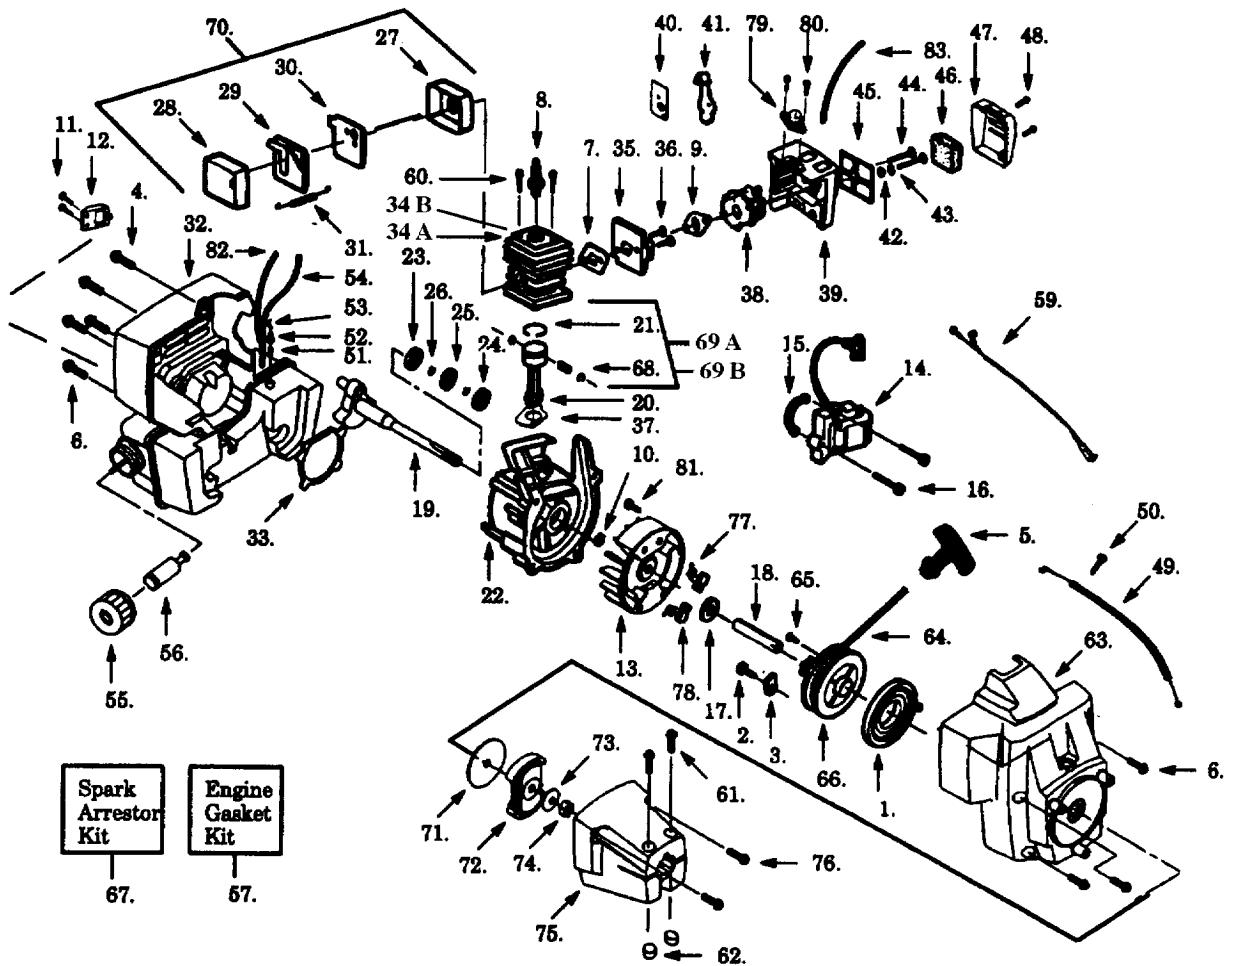


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 02 93-95	Starter Spring	30.	530 03 65-79	Muffler Baffle-First	57.	530 06 96-25	Engine Gasket Kit
2.	530 01 57-75	Screw	31.	530 02 99-30	Muffler Spring	59.	530 04 72-78	Lead Wire Ass'y.
3.	530 02 75-23	Retainer	32.	530 04 70-90	Shroud & Tank Assty.	60.	530 01 59-53	Screw
4.	530 01 59-34	Screw	33.	530 01 91-81	Gasket-C'case	61.	530 01 60-72	Screw
5.	530 02 75-69	Starter Handle	34. A	530 06 96-19	Cylinder GT22L	62.	530 01 57-68	Locknut
6.	530 01 58-10	Screw	34. B	530 06 96-18	Cylinder GT24L	63.	530 04 74-93	Fan Housing
7.	530 01 92-33	Gasket-Cyl./Carb	35.	530 03 84-76	Carb. Adaptor	64.	530 06 92-32	Rope Kit
8.	530 03 00-75	Spark Plug	36.	530 01 60-14	Screw	65.	530 01 6080	Screw
9.	530 01 91-94	Gasket-Carb.	37.	530 01 92-23	Gasket-Cyl nder	66.	530 06 94-00	Starter Pulley
10.	530 01 59-45	Retain. Ring C'case	38.	530 06 96-83	Carburetor WT-380 (Incl. Limiter Caps)	67.	530 06 93-80	Spark Arrestor Kit
11.	530 01 56-75	Screw-Muffler Guard	39.	530 03 79-66	Air Box	68.	530 01 51-62	Piston Pin Retainer
12.	530 03 70-45	Muffler Guard	40.	530 03 73-26	Choke Plate	69. A	530 06 96-21	Piston Kit GT22L (Incl. 21,68 & Pin)
13.	530 03 91-49	Flywheel Ass'y.	41.	530 03 81-02	Choke Shutter	69. B	530 06 96-20	Piston Kit GT24L
14.	530 03 91-63	Ignition Module	42.	530 01 52-54	Wave Washer	70.	530 06 96-61	Muffler Kit
15.	530 03 61-45	Spacer	43.	530 01 58-52	Choke Spacer	71.	530 01 56-11	Washer
16.	530 01 59-54	Screw	44.	530 01 58-49	Screw	72.	530 06 94-91	Clutch Ass'y. Kit
17.	530 01 51-49	Washer	45.	530 03 74-13	Filter Plate	73.	530 01 58-28	Washer
18.	530 03 74-14	Spacer	46.	530 03 73-31	Air Filter Foam	74.	530 62 66-05	Nut
19.	530 01 48-64	Crankshaft Ass'y.	47.	530 03 72-92	Air Filter Cover	75.	530 04 70-13	Clutch Hsg. Ass'y.
20.	530 06 96-15	Connecting Rod Ass'y.	48.	530 01 59-66	Screw	76.	530 01 58-86	Screw
21.	530 03 64-04	Piston Ring	49.	530 03 74-15	Throttle Cable Ass'y.	77.	530 02 99-39	Starter Dog
22.	530 01 48-61	Crankcase Ass'y.	50.	531 01 58-43	Screw	78.	530 04 75-70	Starter Dog Spring
23.	530 03 21-25	Inner Bearing	51.	530 02 61-19	Check Valve	79.	530 03 88-74	Primer Bulb Ass'y.
24.	530 03 21-24	Outer Bearing	52.	530 02 97-17	Element	80.	530 01 60-90	Screw-Primer Assty.
25.	530 01 91-79	C'case Seal	53.	530 02 96-96	Retainer	81.	530 01 58-82	Screw-Flywheel
26.	530 01 59-41	Retain. Ring-C'shaft	54.	530 06 92-47	Fuel Line-Tnk./Carb.	82.	530 06 95-71	Fuel Line-Prim./Tnk.
27.	530 03 65-78	Muffler Body	55.	530 01 43-47	Fuel Cap Ass'y.	83.	530 06 92-16	Fuel Line Carb./Primer
28.	530 03 65-77	Muffler Cover	56.	530 01 43-62	Fuel Pickup Ass'y.			
29.	530 03 86-02	Muffler Baffle-Exit						

MODEL GT22L

B05

⚠ WARNING
All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

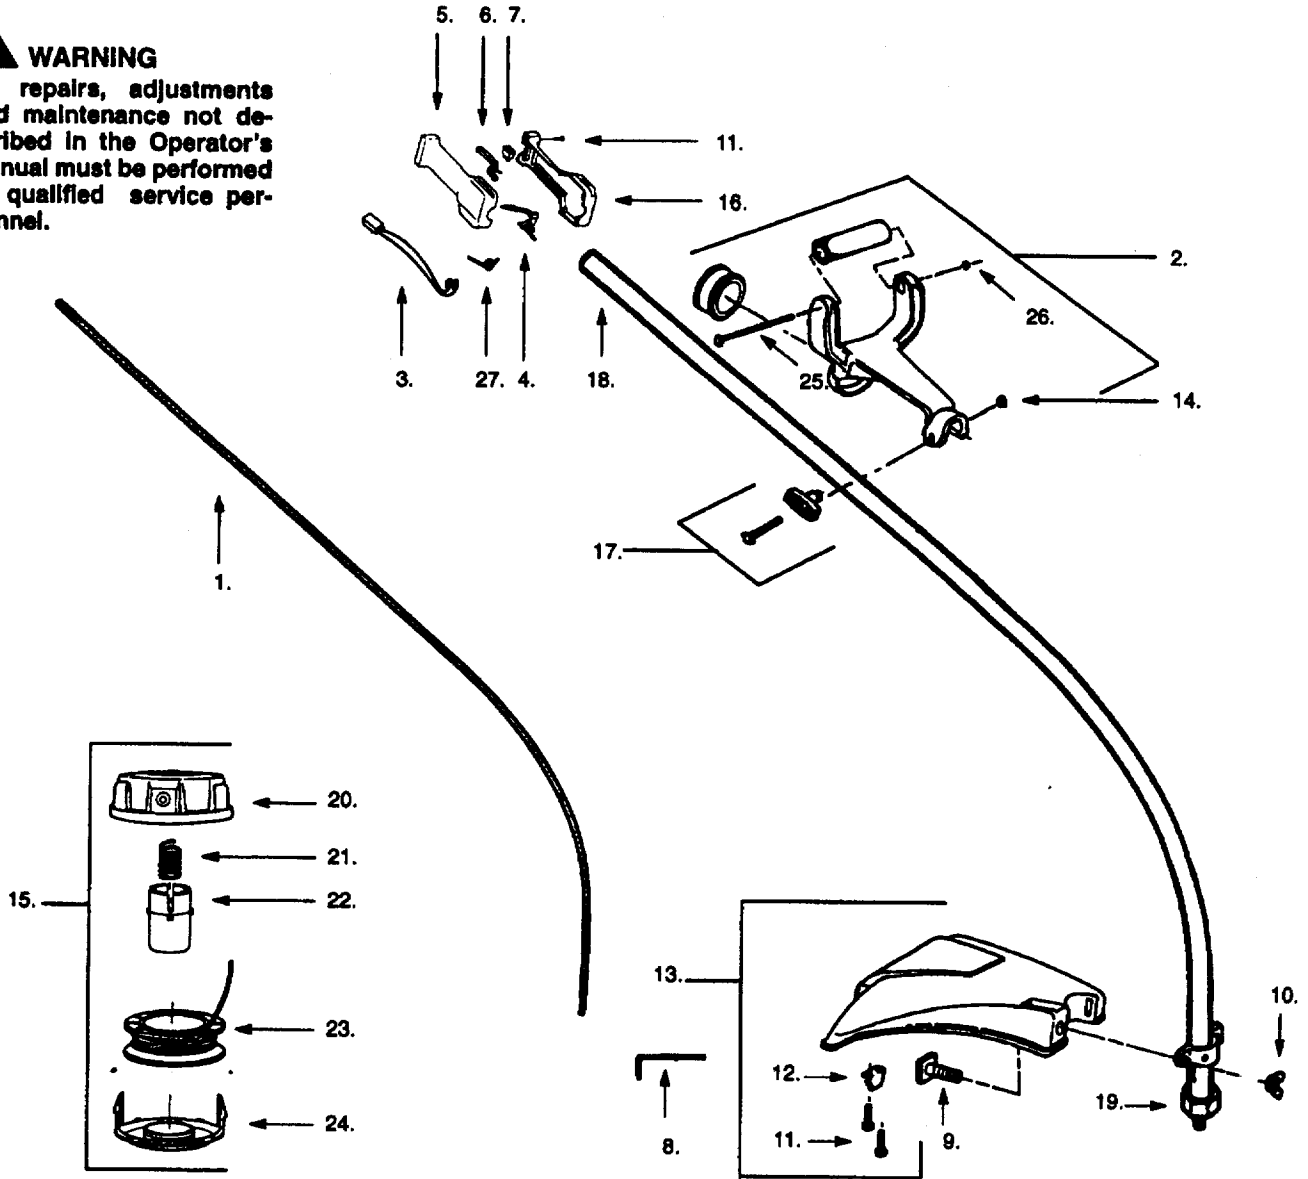


Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 09 45-51	Drive Shaft	14.	530 01 51-97	Nut-Handle
2.	530 01 09-58	Handle	15.	952 71 55-40	Cutting Head Ass'y. (Incl. 20-24)
3.	530 04 73-07	Lead Wire Assty.	16.	530 40 20-26	Throttle Housing (Left)
4.	530 40 20-27	Throttle Lever	17.	530 06 92-52	T-Handle Kit
5.	530 40 20-25	Throttle Housing (Right)	18.	530 09 53-00	Drive Shaft Hsg.
6.	530 40 20-28	Throttle Lock	19.	530 09 45-43	Dust Cup
7.	530 06 95-72	Switch	20.	530 09 48-78	Hub Ass'y.
8.	530 03 11-59	Hex Wrench	21.	530 09 48-30	Spring
9.	530 01 58-20	Bolt-Shield	22.	530 09 48-27	Release Button
10.	530 40 19-92	Nut-Shield	23.	952 71 55-44	Spool w/Line
11.	530 01 58-86	Screw-Line Limiter/ Throttle Hsg.	24.	530 09 48-28	Cover
12.	530 09 52-49	Line Limiter	25.	530 01 57-84	Screw-Handle
13.	530 06 96-66	Shield Kit Ass'y. (Incl. 11 & 12)	26.	530 01 57-85	Nut-Handle
			27.	530 02 75-97	Spring

MODEL GT24L

⚠ WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

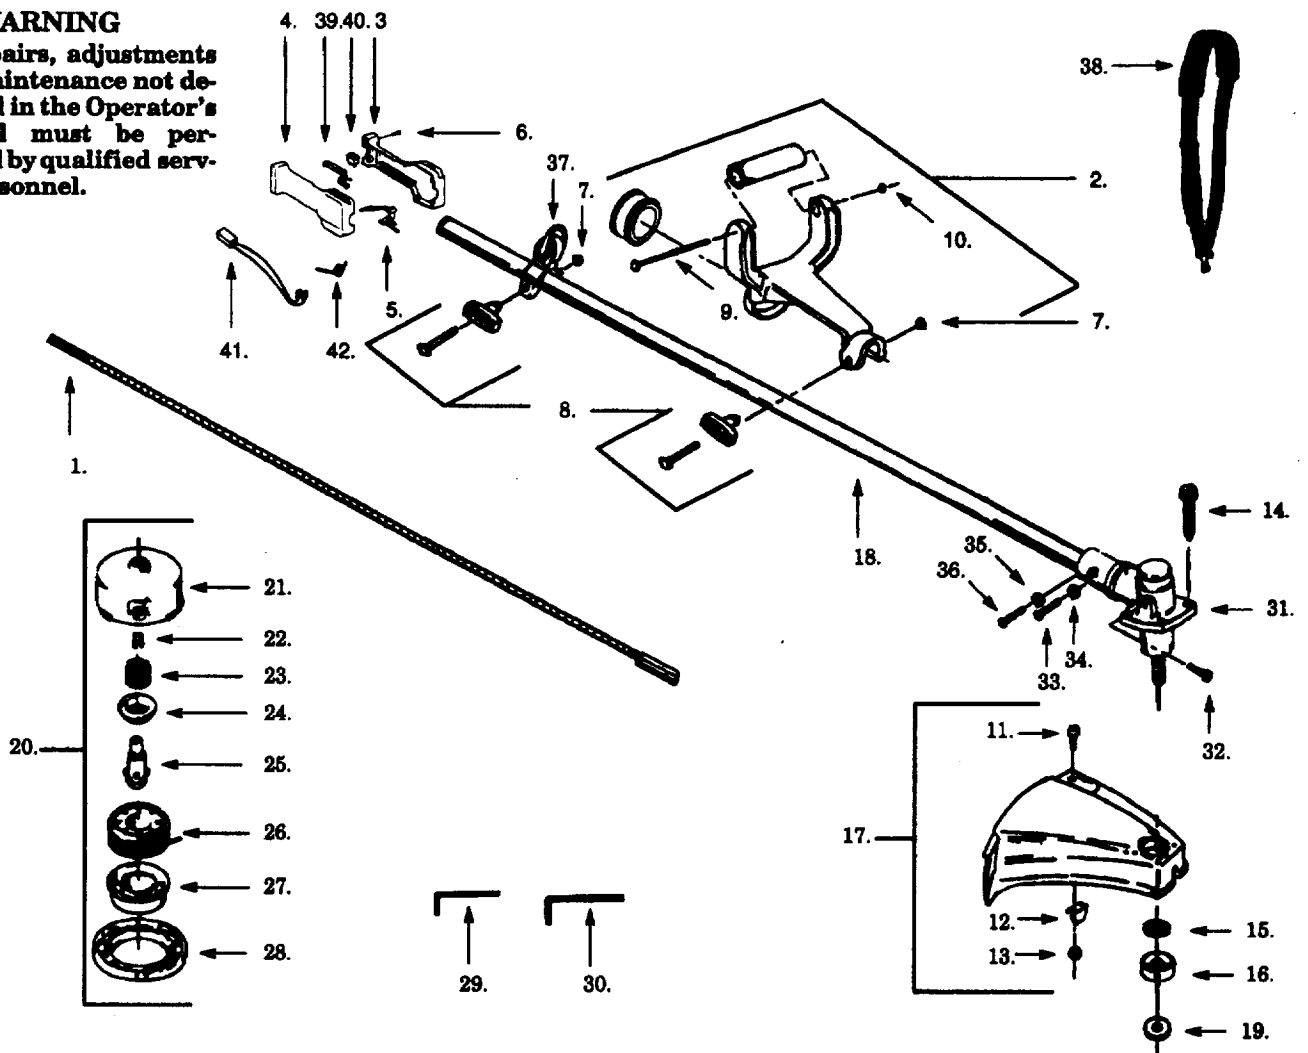

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530 09 45-66	Drive Shaft	21.	530 09 38-96	Hub Ass'y.
2.	530 01 09-58	Antivibe Handle Ass'y.	22.	530 09 38-98	Line Saver
3.	530 40 20-26	Throttle Hsg. (Left)	23.	530 34 00-07	Spring
4.	530 40 20-25	Throttle Hsg. (Right)	24.	530 09 20-68	Spring Cap
5.	530 40 20-27	Throttle Lever	25.	530 09 38-97	Drive Gear
6.	530 01 58-86	Screw	26.	952 71 55-48	Spool w/Line
7.	530 01 51-97	Nut	27.	530 40 11-83	Release Button
8.	530 06 92-52	"T" Handle	28.	530 09 21-33	Cover
9.	530 01 57-84	Screw	29.	530 03 11-59	Hex Wrench (5/32)
10.	530 01 57-85	Locknut	30.	530 03 10-98	Hex Wrench (3/16)
11.	530 01 53-37	Screw	31.	530 09 45-68	Gear Box Ass'y.
12.	530 09 45-70	Line Limiter	32.	530 09 46-16	Screw
13.	534 23 59-01	Locknut	33.	530 09 46-12	Screw
14.	530 01 61-07	Screw	34.	530 01 53-28	Lockwasher
15.	530 09 46-40	Seal	35.	530 00 16-42	Lockwasher
16.	530 09 4639	Dust Cup	36.	530 00 17-11	Screw
17.	530 06 92-56	Shield Kit Ass'y.	37.	530 09 46-86	Clamp Harness Ass'y.
18.	530 09 51-65	Drive Shaft Hsg.	38.	530 09 20-85	Shoulder Strap
19.	530 09 45-71	Grass Washer	39.	530 40 20-28	Throttle Lock
20.	952 71 55-46	Cutting Head Ass'y. (Incl. 21-28)	40.	530 06 95-72	Switch
			41.	530 04 73-07	Lead Wire Ass'y.
			42.	530 02 75-97	Spring


MODEL GT22L GT24L

B06

Carburetor Assembly – WT-380 #530-069683

Carb.
Repair
Kit

1.

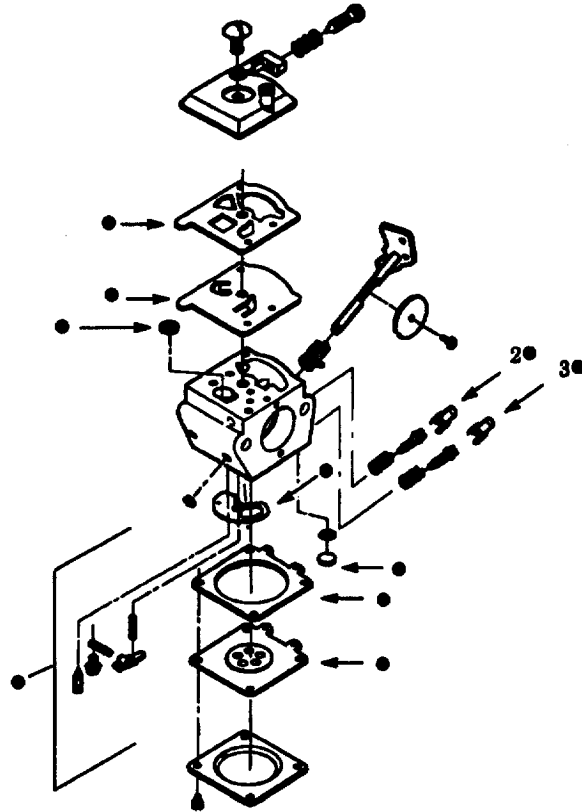

Ref.	Part No.	Description
1.	530 06 96-70	Carburetor Repair Kit (■ Indicates Contents)
2.	530 03 83-17	Limiter Cap-Low
3.	530 03 83-18	Limiter Cap-High