


Jonsered

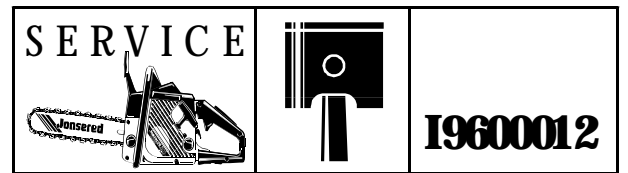

IPL, BV32, 1996.03.07-01, 108 07 01-67

BV32

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

Model BV32

⚠ WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

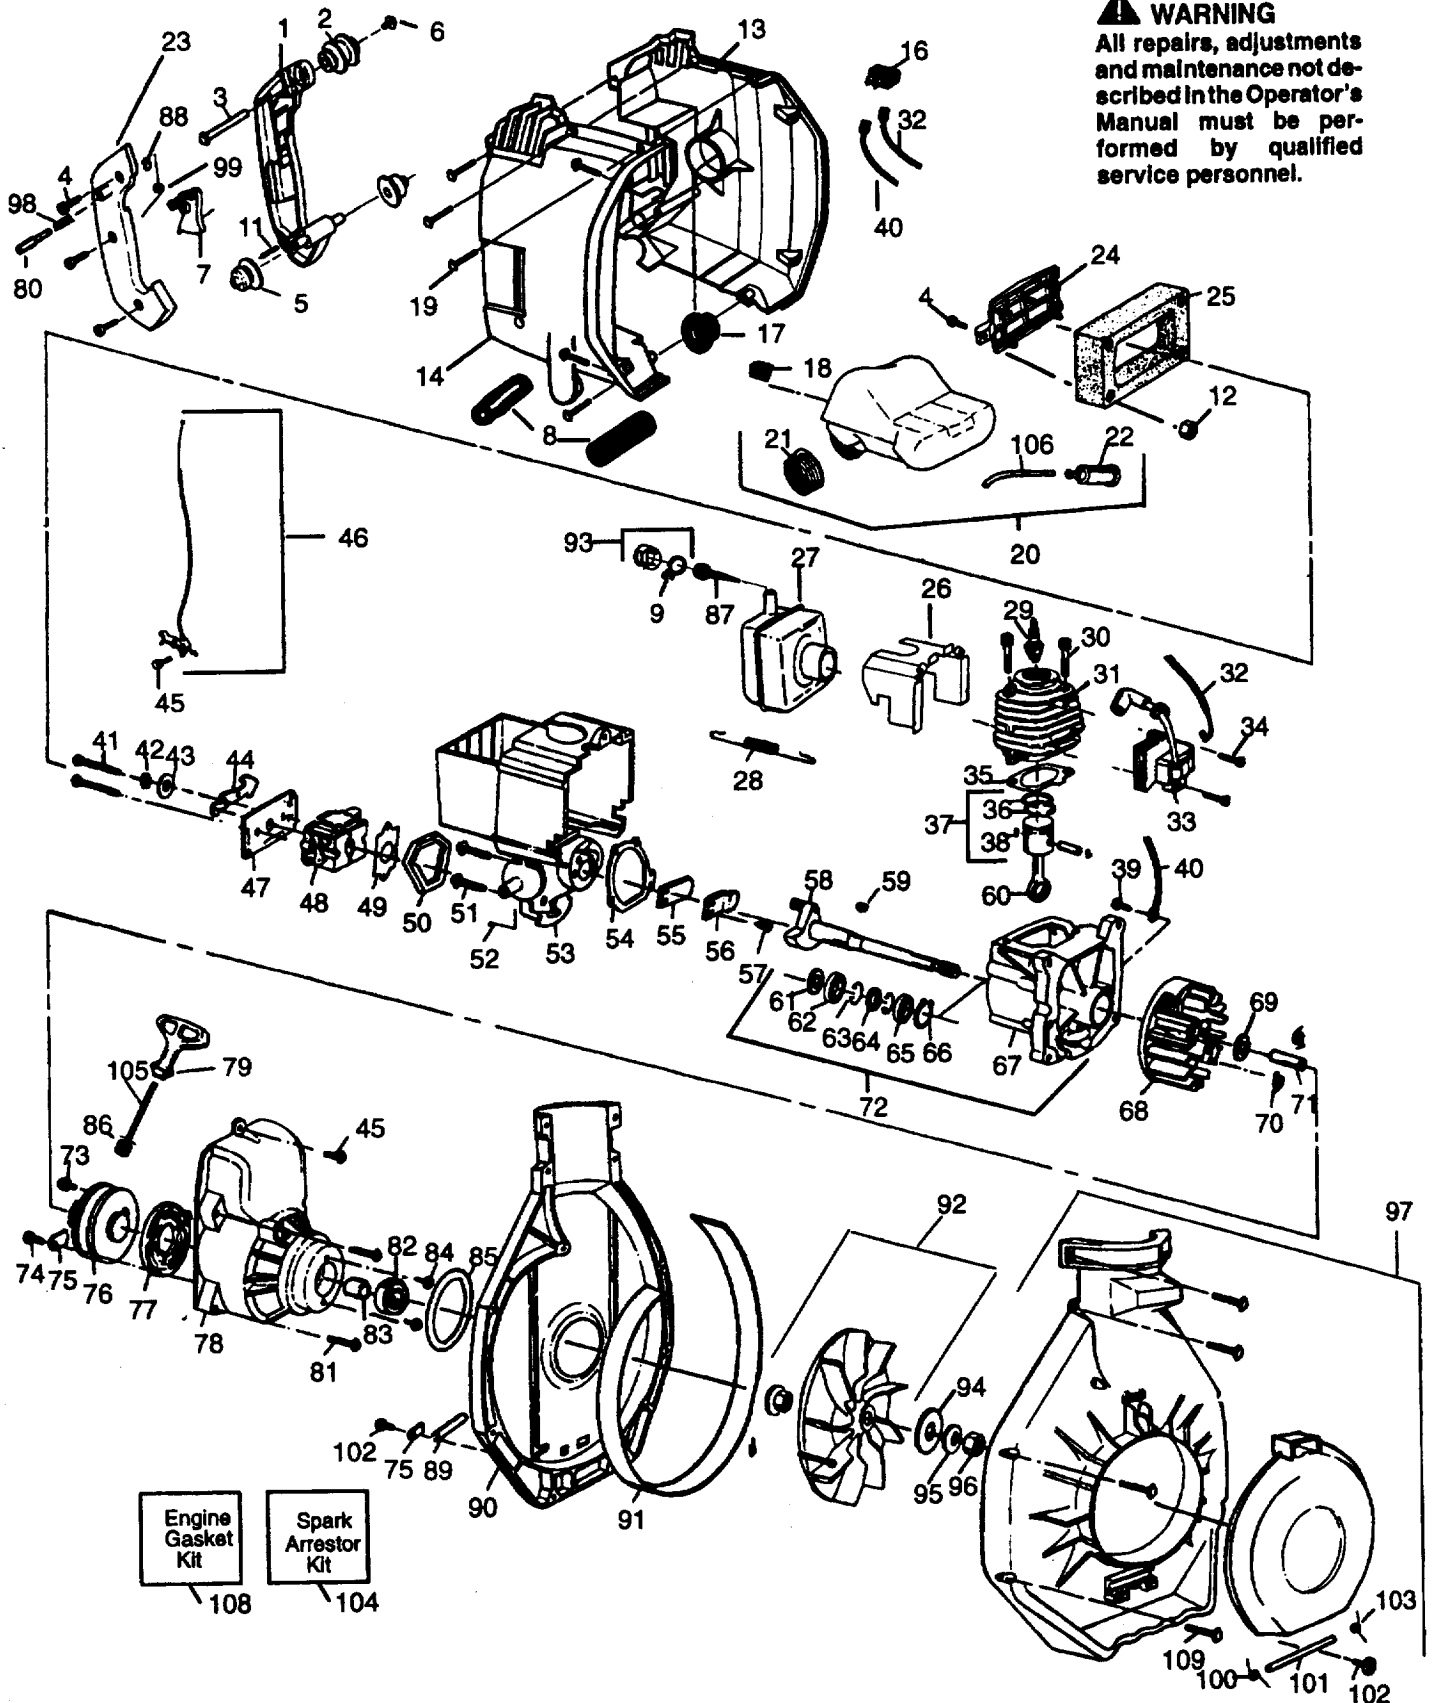


Model BV32

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	530 09 47-12	Handle	57	530 01 60-64	Screw
2	530 02 69-94	Front Isolator	58	530 01 40-33	Crankshaft
3	530 02 91-11	Spacer	59	530 01 51-26	Key
4	530 01 56-35	Screw	60	530 01 09-60	Connecting Rod Ass'y.
5	530 02 91-30	Rear Isolator	61	530 01 57-88	Spacer
6	530 01 58-13	Screw	62	530 03 21-03	Inner Bearing
7	530 02 90-72	Trigger	63	530 01 57-87	Retaining Ring
8	530 03 75-95	Assist Handle Ass'y.	64	530 01 91-58	Crankshaft Seal
9	530 02 92-28	Spark Arrestor Clamp	65	530 03 21-02	Outer Bearing
11	530 01 58-40	Pin	66	530 01 57-89	Retaining Ring
12	534 79 05-00	Nut	67	530 01 40-16	Crankcase
13	530 03 78-64	Shroud-Right	68	530 03 91-89	Flywheel
14	530 03 79-34	Shroud-Left	69	530 34 79-87	Washer
16	530 06 95-72	Switch	70	530 02 38-17	Spring
17	530 02 91-29	Isolator	71	530 02 91-76	Spacer
18	530 02 92-95	Isolator .	72	530 01 41-56	Crankcase/Crankshaft Ass'y.
19	530 01 58-43	Screw	73	530 01 60-80	Screw
20	530 01 41-62	Fuel Tank Ass'y. (Incl. #21, 22 & 106)	74	530 01 54-96	Screw
21	530 01 43-47	Fuel Cap ("retainer)	75	530 02 75-23	Retainer
22	530 01 43-62	Fuel Pick-up Ass'y.	76	530 06 94-86	Starter Pulley (Incl. 73)
23	530 01 41-60	Handle Cover	77	530 02 93-95	Starter Spring
24	530 03 78-65	Cover	78	530 06 97-14	Fan Housing Kit (Incl. 71, 73-77, 79, 82-84, 86 & 105)
25	530 02 91-12	Air Filter	79	530 02 75-69	Starter Handle
26	530 02 94-04	Air Baffle	80	530 02 91-17	Throttle Lock Button
27	530 06 92-93	Muffler	81	530 01 57-69	Screw
28	530 02 91-16	Spring	82	530 03 21-08	Bearing
29	530 03 00-75	Spark Plug (RCJ-8Y)	83	530 02 91-10	Spacer
30	530 00 16-24	Screw	84	530 01 58-86	Screw
31	530 06 96-28	Cylinder	85	530 01 91-67	"O" Ring
32	530 02 91-45	Lead Wire	86	530 02 91-82	Eyelet
33	530 03 91-37	Ignition Module	87	530 02 92-27	Spark Arrestor Screen
34	530 01 58-16	Screw	88	530 01 57-02	"C" Clip
35	530 01 91-78	Gasket	89	530 02 91-19	Roll Pin
36	530 02 58-75	Piston Ring	90	530 09 47-10	Blower Housing (Upper)
37	530 06 92-77	Piston Kit (Incl. #36, 38 & Pin)	91	530 02 91-73	Band
38	530 01 51-62	Retainer	92	530 01 41-57	Impeller (Includes Hub)
39	530 01 53-06	Screw	93	530 01 43-39	Deflector & Clamp Ass'y.
40	530 02 91-44	Ground Wire	94	530 01 58-18	Washer
41	530 01 58-49	Screw	95	530 01 54-41	Washer
42	530 01 52-54	Wave Washer	96	530 00 17-33	Nut
43	530 01 58-52	Spacer	97	530 04 77-36	Blower Housing (Lower) (Incl. 100-103 & door)
44	530 02 91-14	Choke Shutter	98	530 02 47-72	Spring
45	530 01 57-75	Screw	99	530 02 75-97	Spring
46	530 03 74-92	Cable Assembly	100	530 01 56-67	Spring
47	530 02 91-15	Plate	101	530 01 56-47	Pin
48	530 06 96-44	Carburetor (Wt 141A w/Limiter Cap)	102	530 01 58-15	Screw
49	530 01 91-64	Gasket	103	530 01 56-72	Spring
50	530 01 91-65	Seal	104	530 06 93-48	Spark Arrestor Kit
51	530 01 57-71	Screw .	105	530 06 92-32	Rope Kit
52	530 02 91-13	Ground Wire	106	530 06 92-47	Line Kit
53	530 04 76-96	Reed Block	108	530 06 92-94	Gasket Kit (Incl. 35, 49, 50 & 54)
54	530 01 91-66	Gasket	109	530 01 58-72	Screw
55	530 02 75-93	Reed Valve			
56	530 02 75-94	Reed Stop			

Model BV32




KEY NO.	PART NO.	DESCRIPTION
1	530 09 51-16	Collection Bag W/Strap
2	530 09 51-17	Collection Bag Elbow Tube
3	530 06 92-70	Vacuum Tube Ass'y.
4	530 03 85-08	Tube and Nozzle Ass'y.

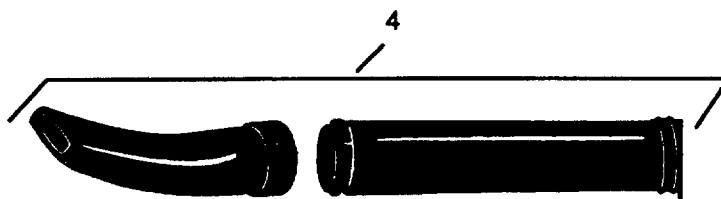


Carburetor Assembly

WT-141

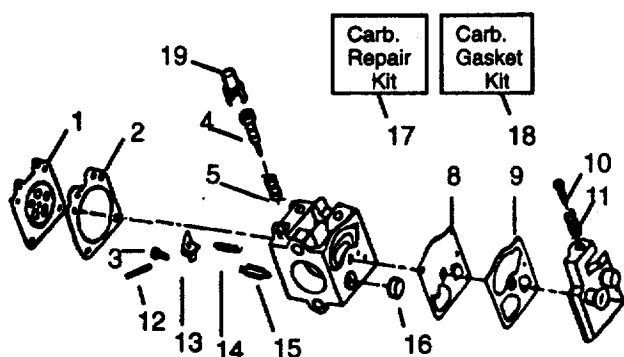

KEY NO.	PART NO.	DESCRIPTION
1	504 13 08-08	*+ Metering Diaphragm
2	530 03 51-51	*+ Metering Diaphragm Gasket
3	530 03 50-16	* Metering Lever Pin Screw
4	530 03 52-68	Mixture Needle
5	504 21 00-50	Mixture Needle Spring
8	504 13 08-07	Fuel Pump Diaphragm
9	504 13 09-06	*+ Fuel Pump Gasket
10	530 03 52-03	*+ Idle Speed Screw
11	501 66 78-01	Idle Speed Spring
12	505 52 01-25	* Metering Lever Pin
13	505 52 01-27	* Metering Lever
14	530 03 51-88	* Metering lever Spring
15	503 11 70-01	* Inlet Needle Valve
16	530 03 51-78	Fuel Inlet Screen
17	530 03 52-64	* Carb. Kwik Repair Kit (* Indicates Contents)
18	530 03 52-19	* Carb. GaskeVDiaphragm Kit (+ indicates Contents)

WT-141A #530-069644

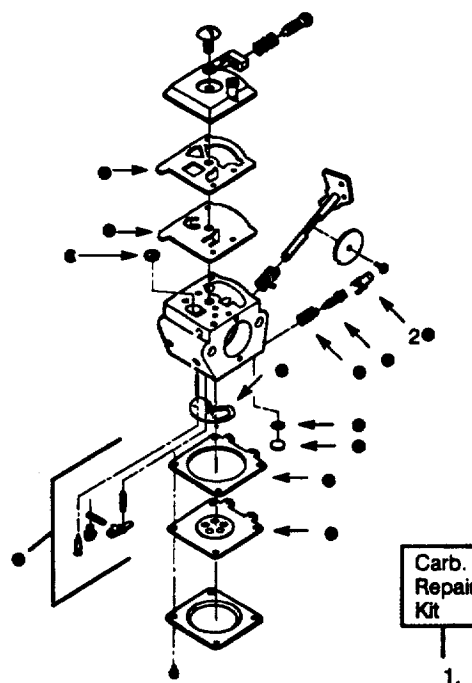

KEY NO.	PART NO.	DESCRIPTION
1	530 06 96-70	Carburetor Repair Kit (. indicates Contents)
2	530 03 84-03	Limitter Cap