


Jonsered

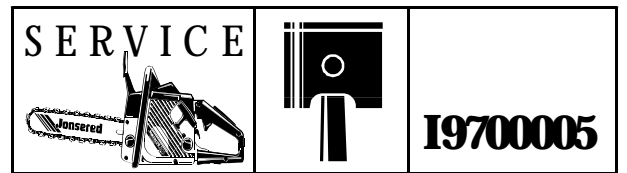

IPL, BV32, 1997.05.02-01, 106 24 57-61

BV32

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos


Reservdelar

Model BV 32


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	530 09 47-12	Handle	59	530 01 51-26	Key
2	530 02 69-94	Front Isolator	60	530 01 09-60	Connecting Rod Ass'y
3	530 02 91-11	Spacer	61	530 01 57-88	Spacer
4	530 01 56-35	Screw	62	530 03 21-03	Inner Bearing
5	530 02 91-30	Rear Isolator	63	530 01 57-87	Retaining Ring
6	530 01 58-13	Screw	64	530 01 91-58	Crankshaft Seal
7	530 02 90-72	Trigger	65	530 03 21-02	Outer Bearing
8	530 03 75-95	Assist Handle Ass'y	66	530 01 57-89	Retaining Ring
9	530 02 92-28	Spark Arrestor Clamp	67	530 01 40-16	Crankcase
10	530 02 99-88	Exhaust Deflector Ass'y	68	530 03 91-89	Flywheel
11	530 01 58-40	Pin	69	530 34 79-87	Washer
12	534 79 05-00	Nut	70	530 02 38-17	Spring
13	530 03 78-64	Shroud-Right	71	530 02 91-76	Spacer
14	530 03 79-34	Shroud-Left	72	530 01 41-56	Crankcase/Crankshaft Ass'y
16	530 06 95-72	Switch	73	530 01 60-80	Screw
17	530 02 91-29	Isolator	74	530 01 54-96	Screw
18	530 02 92-95	Isolator	75	530 02 75-23	Retainer
19	530 01 58-43	Screw	76	530 06 94-86	Starter Pulley (Incl.73)
20	530 01 41-62	Fuel Tank Ass'y (Incl.#21,22 & 106)	77	530 02 93-95	Starter Spring
21	530 01 43-47	Fuel Cap (w/retainer)	78	530 06 97-14	Fan Housing Kit (Incl. 71,73-77, 79, 82-84, 86 & 105)
22	530 01 43-62	Fuel Pick-up Ass'y			Starter Handle
23	530 01 41-60	Handle Cover	79	530 02 75-69	Throttle Lock Button
24	530 03 78-65	Cover	80	530 02 91-17	Screw
25	530 02 91-12	Air Filter	81	530 01 57-69	Bearing
26	530 02 94-04	Air Baffle	82	530 03 21-08	Spacer
27	530 06 92-93	Muffler	83	530 02 91-10	Screw
28	530 02 91-16	Spring	84	530 01 58-86	"O" Ring
29	530 03 00-75	Spark Plug (RCJ-8Y)	85	530 01 91-67	Eyelet
30	530 00 16-24	Screw	86	530 02 91-82	Spark Arrestor Screen
31	530 06 96-28	Cylinder	87	530 02 92-27	"C" Clip
32	530 02 91-45	Lead Wire	88	530 01 57-02	Roll Pin
33	530 03 91-37	Ignition Module	89	530 02 91-19	Blower Housing (Upper)
34	530 01 58-16	Screw	90	530 09 47-10	Band
35	530 01 91-78	Gasket			Impeller (Includes Hub)
36	530 02 58-75	Piston Ring	91	530 02 91-73	Deflector & Clamps Ass'y
37	530 06 92-77	Piston Kit (Incl.#36,38 &Pin)	92	530 01 41-57	Washer
38	530 01 51-62	Retainer	93	530 01 43-39	Washer
39	530 01 53-06	Screw	94	530 01 58-18	Nut
40	530 02 91-44	Ground Wire	95	530 01 54-41	Blower Housing (Lower)
41	530 01 58-49	Screw	96	530 00 17-33	(Incl. 100-103 & door)
42	530 01 52-54	Wave Washer	97	530 04 77-36	Spring
43	530 01 58-52	Spacer			Spring
44	530 02 91-14	Choke Shutter			Spring
45	530 01 57-75	Screw	98	530 02 47-72	Pin
46	530 03 74-92	Cable Assembly	99	530 02 75-97	Screw
47	530 02 91-15	Plate	100	530 01 56-67	Spring
48	530 06 96-44	Carburetor (Wt 141A w/Limiter Cap)	101	530 01 56-47	Spring
49	530 01 91-64	Gasket	102	530 01 58-15	Pin
50	530 01 91-65	Seal	103	530 01 56-72	Screw
51	530 01 57-71	Screw	104	530 06 93-48	Spring
52	530 02 91-13	Ground Wire	105	530 06 92-32	Spark Arrestor Kit
53	530 04 76-96	Reed Block	106	530 06 92-47	Rope Kit
54	530 01 91-66	Gasket	108	530 06 92-94	Line Kit
55	530 02 75-93	Reed Valve			Gasket Kit (Incl.35,49 50 & 54)
56	530 02 75-94	Reed Stop	109	530 01 58-72	Screw
57	530 01 60-64	Screw	111	530 04 91-85	Air Dam Sponge
58	530 01 40-33	Crankshaft	112	530 01 92-32	Muffler Gasket

Model BV 32

WARNING
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

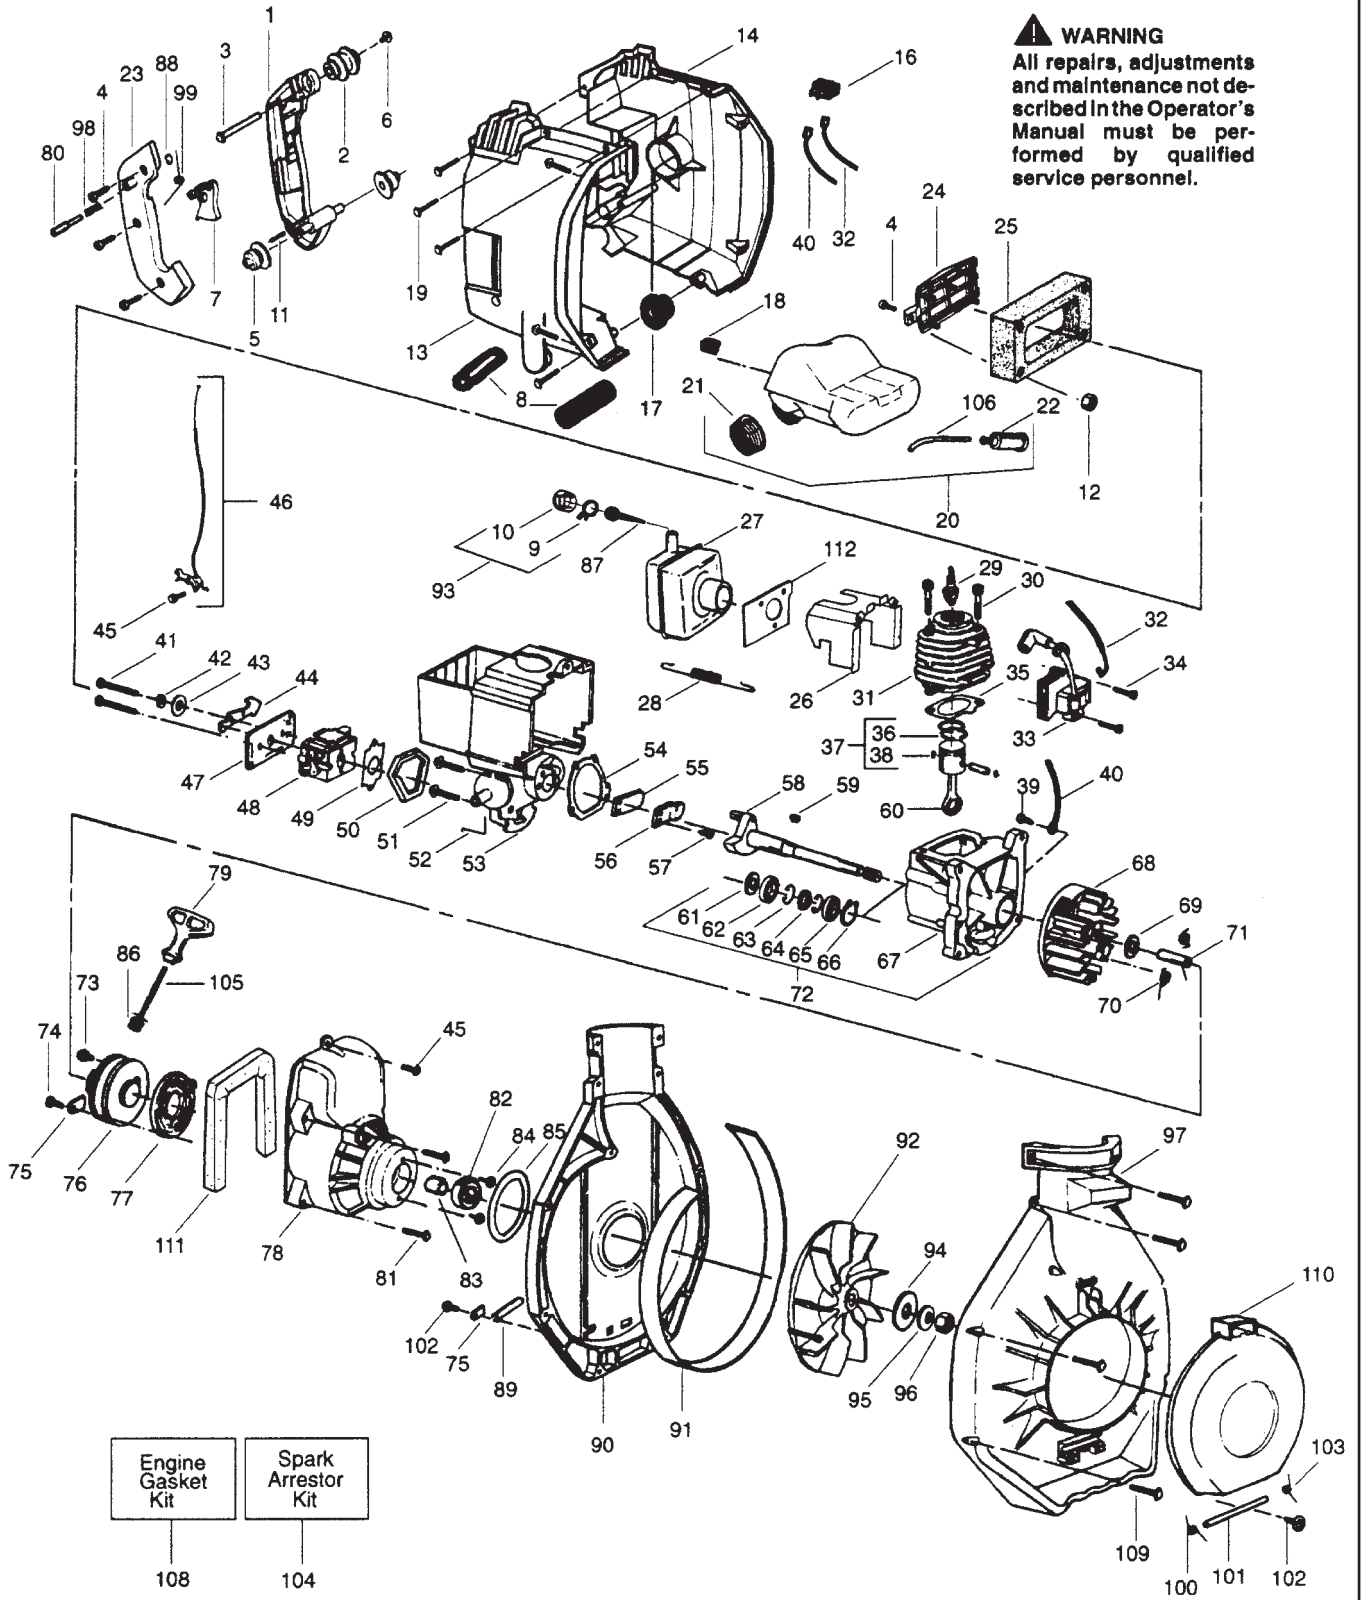


Model BV 32

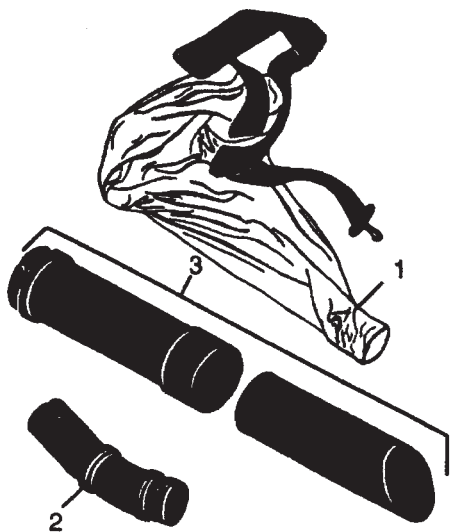

**KEY PART
NO. NO.**


DESCRIPTION

- 1 530 09 51-16 Collecxtion Bag W/Strap
- 2 530 09 51-17 Collection Bag Elbow Tube
- 3 530 06 92-70 Vacuum Tube Ass'y.
- 4 530 03 85-08 Tube and Nozzle Ass'y.

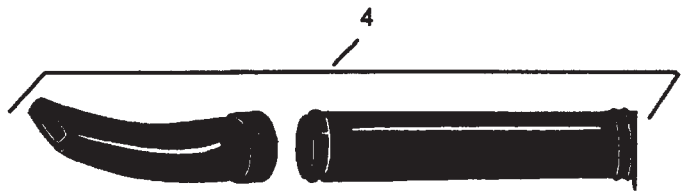

Carburetor Assembly

WT-141

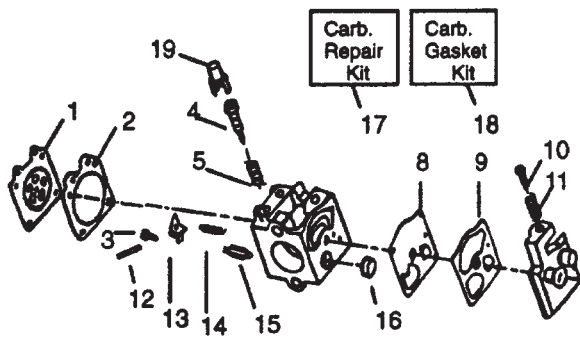


**KEY PART
NO. NO.**

DESCRIPTION

- 1 504 13 08-08 *+ Metering Diaphragm
- 2 530 03 51-51 *+ Metering Diaphragm Gasket
- 3 530 03 50-16 * Metering Lever Pin Screw
- 4 530 03 52-68 Mixture Needle
- 5 504 21 00-50 Mixture Needle Spring
- 8 504 13 08-07 Fuel Pump Diaphragm
- 9 504 13 09-06 *+ Fuel Pump Gasket
- 10 530 03 52-03 *+ Idle Speed Screw
- 11 501 66 78-01 Idle Speed Spring
- 12 505 52 01-25 * Metering Lever Pin
- 13 505 52 01-27 * Metering Lever
- 14 530 03 51-88 * Metering lever Spring
- 15 503 11 70-01 * Inlet Needle Valve
- 16 530 03 51-78 Fuel Inlet Screen
- 17 530 03 52-64 * Carb. Kwik Repair Kit (* Indicates Contents)
- 18 530 03 52-19 * Carb. Gasket/Diaphragm Kit (+Indicates Contents)

WT-141A #530-069644

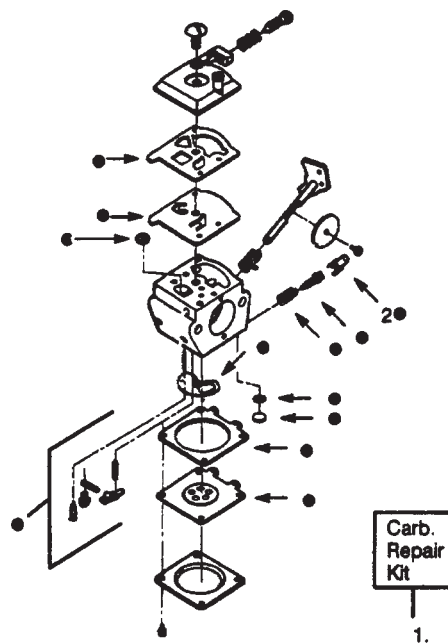

**KEY PART
NO. NO.**

DESCRIPTION

- 1 530 06 96-70 Carburetor Repair Kit (•Indicates Contents)
- 2 530 03 84-03 Limiter Cap

