

# ICT19 A

**Spare parts**

**Ersatzteile**

**Pièces détachées**


**Reserve onderdelen**

**Repuestos**

**Reservdelar**

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
ELECTRICAL

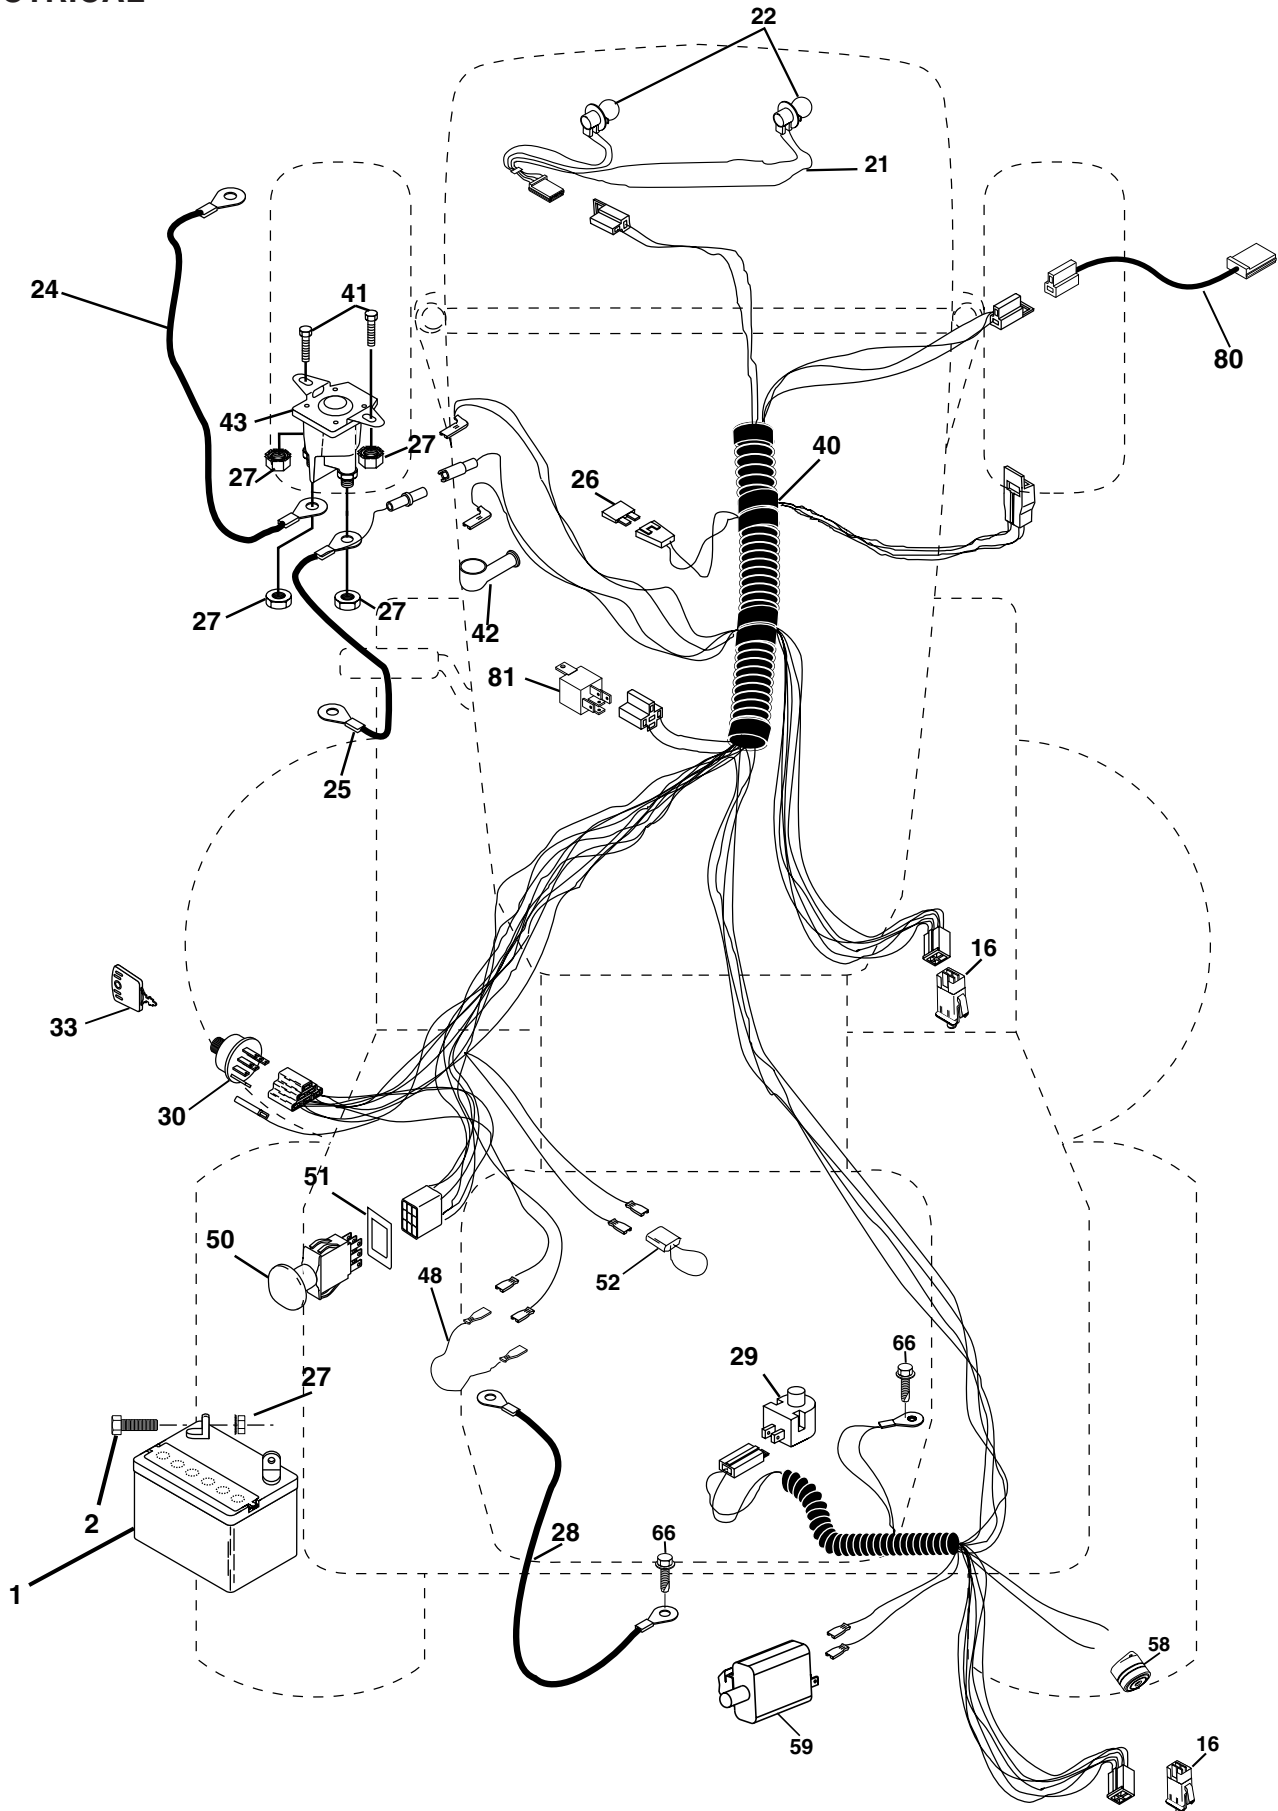


# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
ELECTRICAL

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                       |
|------------|--------------|-----------------------------------|
| 1          | 532 14 49-27 | Battery                           |
| 2          | 874 76 04-12 | Bolt Hex Hd 1/4-20 Unc X 3/4      |
| 16         | 532 17 61-38 | Switch Interlock Push-In          |
| 21         | 532 17 56-88 | Harness Asm Light W/4152J         |
| 22         | 532 0041-52  | Bulb Light #1156                  |
| 24         | 532 12 47-80 | Cable Starter 6Ga 11" Red         |
| 25         | 532 16 59-87 | Cable Battery Crd 56" Red         |
| 26         | 532 17 51-58 | Fuse 20 Amp                       |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 Unc           |
| 28         | 532 12 77-25 | Cable Ground 6Ga 18" Black        |
| 29         | 532 16 07-84 | Switch Plunger Normal Op Olive    |
| 30         | 532 17 55-66 | Switch Ignition                   |
| 33         | 532 14 04-01 | Key Ign                           |
| 40         | 532 17 97-27 | Harness Ign Crd Elect             |
| 41         | 871 11 04-08 | Bolt Flk Fin Hex 1/4-20 Unc X 1/2 |
| 42         | 532 13 15-63 | Cover Terminal Red                |
| 43         | 532 17 88-61 | Solenoid                          |
| 48         | 532 14 08-44 | Adapter Ammeter Rectangular       |
| 50         | 532 17 46-52 | Switch PTO                        |
| 51         | 532 14 04-05 | Ring Retainer PTO                 |
| 52         | 532 14 19-40 | Protection Wire Loop              |
| 58         | 532 16 94-19 | Buzzer Crd                        |
| 59         | 532 18 03-79 | Switch FBI CRD                    |
| 66         | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 Ty-Tt   |
| 80         | 532 14 66-85 | Harness Clutch EVX                |
| 81         | 532 10 97-48 | Relay Asm                         |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

**TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
CHASSIS AND ENCLOSURES**

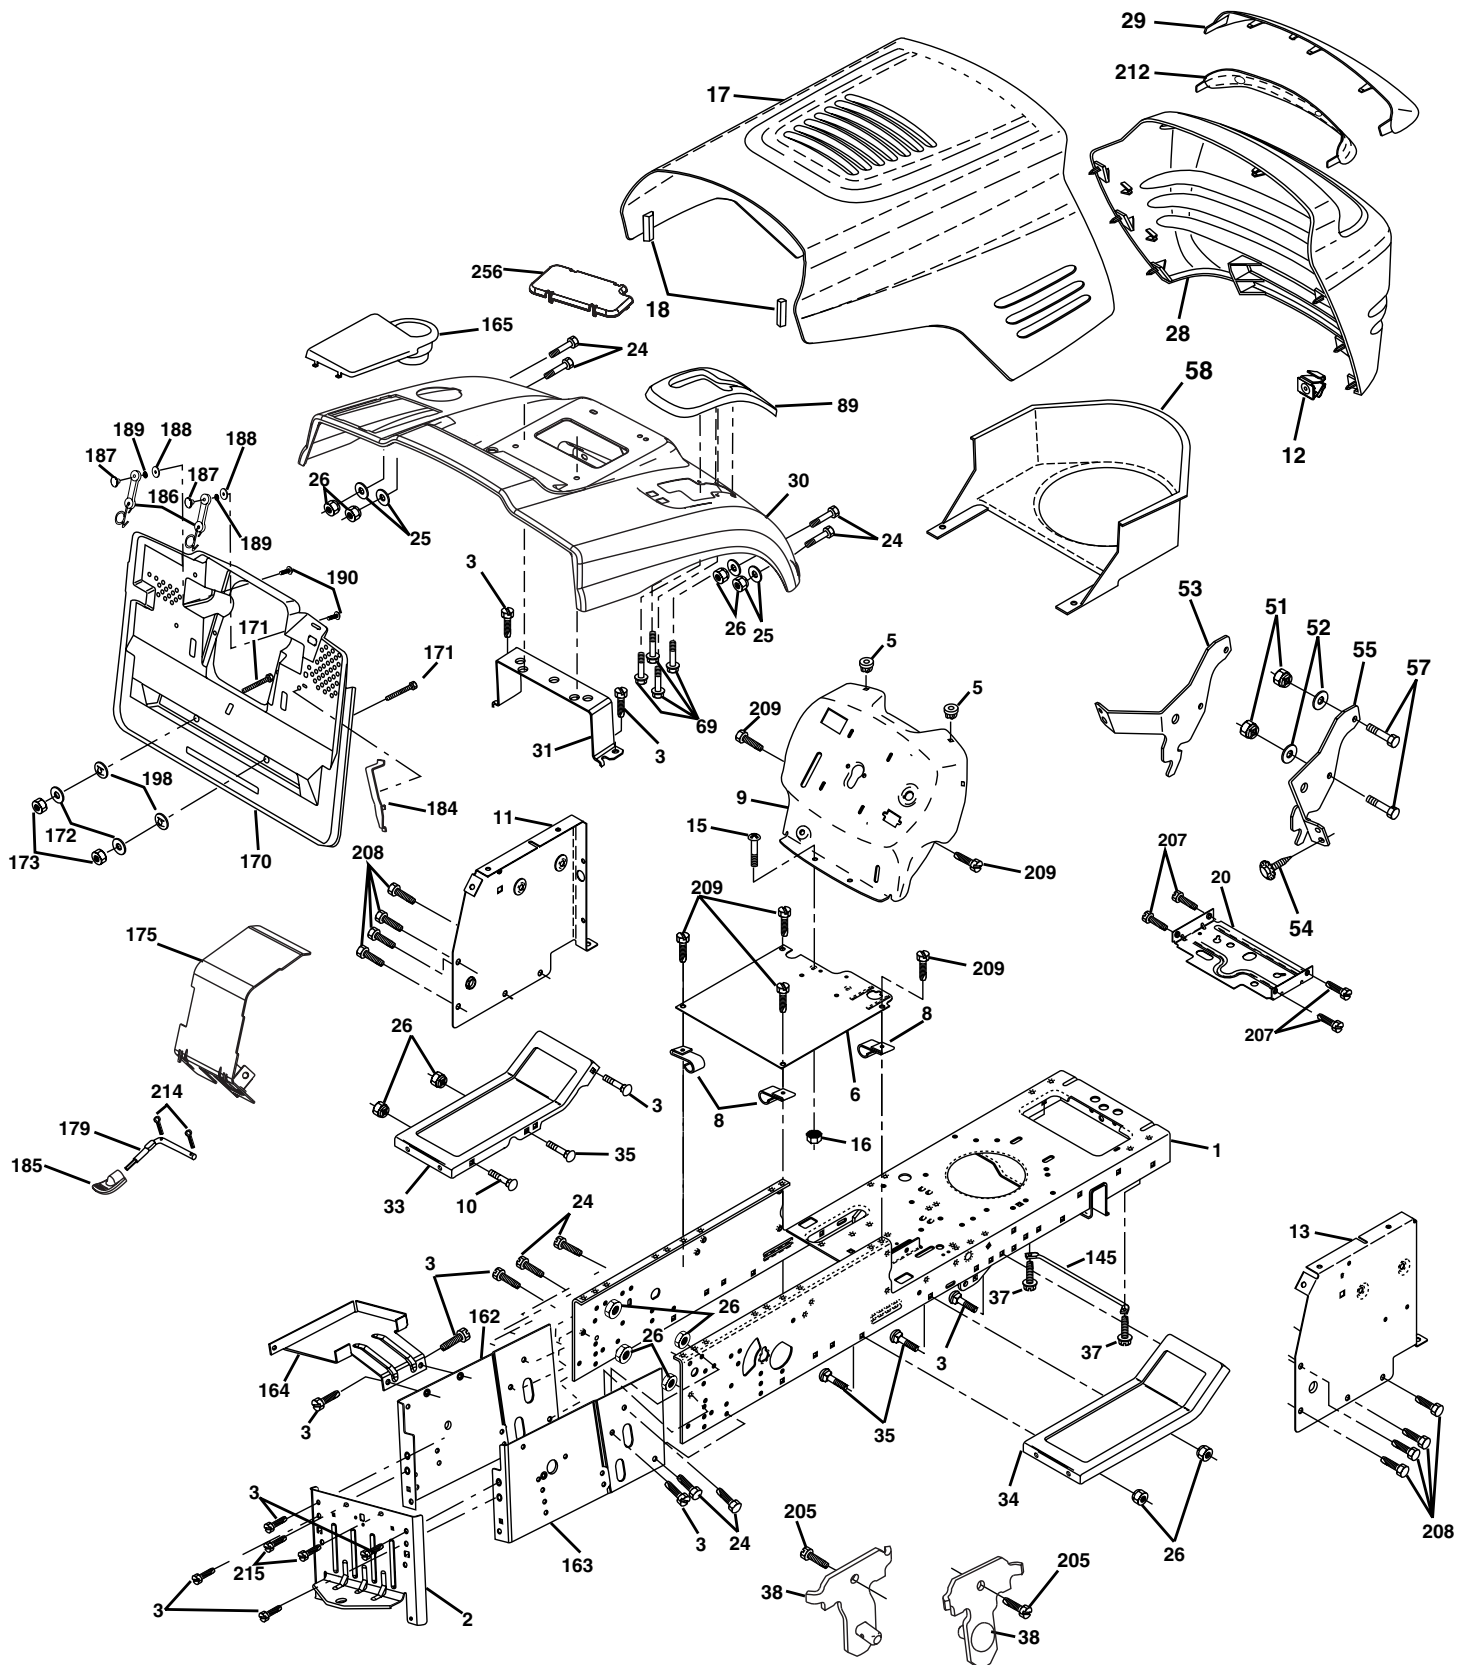

# REPAIR PARTS

## TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68 CHASSIS AND ENCLOSURES


| KEY NO. | PART NO.     | DESCRIPTION                                     |
|---------|--------------|-------------------------------------------------|
| 1       | 532 17 46-20 | Chassis                                         |
| 2       | 532 18 03-84 | Drawbar                                         |
| 3       | 817 06 06-12 | Screw 3/8-16 x 3/4                              |
| 5       | 532 15 52-72 | Bumper Hood/Dash                                |
| 6       | 532 15 59-23 | Saddle                                          |
| 8       | 532 12 64-71 | Clip Insulator 13/32 Mtg. Hole                  |
| 9       | 532 17 20-99 | Dash                                            |
| 10      | 872 14 06-08 | Bolt, Carriage 3/8-16 x 3/4                     |
| 11      | 532 15 59-27 | Panel, Dash, L.H.                               |
| 12      | 532 14 56-60 | Clip Tinnerman                                  |
| 13      | 532 17 21-08 | Panel, Asm. Dash R.H.                           |
| 15      | 874 18 05-12 | Screw, Machine, Truss Head<br>5/16-18 UNC x 3/4 |
| 16      | 873 51 05-00 | Nut                                             |
| 17      | 532 15 07-60 | Hood                                            |
| 18      | 532 12 69-38 | Bumper Hood                                     |
| 20      | 532 18 06-79 | Plate Mtg Battery/Tank Fuel Fr.                 |
| 24      | 874 78 06-16 | Bolt                                            |
| 25      | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Gauge                 |
| 26      | 873 80 06-00 | Nut                                             |
| 28      | 532 17 93-51 | Grille /Lens Asm                                |
| 29      | 532 17 90-14 | Lens, Grille                                    |
| 30      | 532 18 13-59 | Fender                                          |
| 31      | 532 16 51-56 | Bracket, Fender Support                         |
| 33      | 532 18 11-93 | Footrest, L.H.                                  |
| 34      | 532 18 11-94 | Footrest, R.H.                                  |
| 35      | 872 11 06-06 | Bolt                                            |
| 37      | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 TYT                  |
| 38      | 532 17 57-10 | Bracket Asm Pivot Mower Rear                    |
| 51      | 873 68 04-00 | Nut Crownlock 1/4-20 Unc                        |
| 52      | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga.                      |
| 53      | 532 14 52-01 | Bracket Pick Off LH                             |
| 54      | 532 16 14-64 | Screw Hex 8-18 x 7/8                            |
| 55      | 532 14 52-02 | Bracket Pick off RH                             |

| KEY NO. | PART NO.     | DESCRIPTION                         |
|---------|--------------|-------------------------------------|
| 57      | 874 78 04-12 | Bolt Fin Hex 1/4-20 Unc x .75       |
| 58      | 532 17 49-30 | Duct Air Engine                     |
| 69      | 532 14 24-32 | Screw Hex Wsh                       |
| 89      | 532 18 13-60 | Console                             |
| 145     | 532 15 65-24 | Rod Pivot Chassis/Hood              |
| 162     | 532 18 03-82 | Bracket Exten Chassis Lh CRD        |
| 163     | 532 18 03-83 | Bracket Exten Chassis Rh CRD        |
| 164     | 532 16 56-05 | Support Battery CRD                 |
| 165     | 532 18 13-56 | Cover Battery                       |
| 170     | 532 17 88-62 | Backplate                           |
| 171     | 872 14 06-20 | Bolt Rdhd Sqnk 3/8-16 x 2-1/2 Gr. 5 |
| 172     | 819 13 20-16 | Washer 13/32 x 1-1/4 x 16 Ga.       |
| 173     | 873 51 06-00 | Nut, Keps Hex 3/8-16 UNC            |
| 175     | 532 18 03-10 | Guard Trap                          |
| 179     | 532 18 03-76 | Rod Pivot FBI CRD                   |
| 184     | 532 17 46-62 | Bracket Actuator Bagger CRD         |
| 185     | 532 18 11-01 | Knob Rod Brake Parking              |
| 186     | 532 16 07-93 | Latch Asm Mulch/Bagger              |
| 187     | 532 12 50-04 | Nut Weld                            |
| 188     | 819 06 12-16 | Washer #10                          |
| 189     | 810 07 10-00 | Washer Lock #10                     |
| 190     | 871 08 10-10 | Screw Pan Hd Phillip 10-24 x 5/8    |
| 198     | 532 16 89-37 | Nut, Push                           |
| 205     | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2           |
| 207     | 817 67 05-08 | Screw Thdrol 5/16-18 x 1/2          |
| 208     | 817 67 06-08 | Screw Thdrol 3/8-16 x 1/2           |
| 209     | 817 00 06-12 | Screw Hex Wsh Thdrol 3/8-16         |
| 212     | 532 16 59-19 | Insert Lens Reflective              |
| 214     | 532 12 47-88 | Retainer Spring                     |
| 215     | 817 06 05-08 | Screw 5/16-18 x 1/2                 |
| 256     | 532 18 13-61 | Cover Fender Rack CRD               |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

## REPAIR PARTS

**TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
DRIVE**

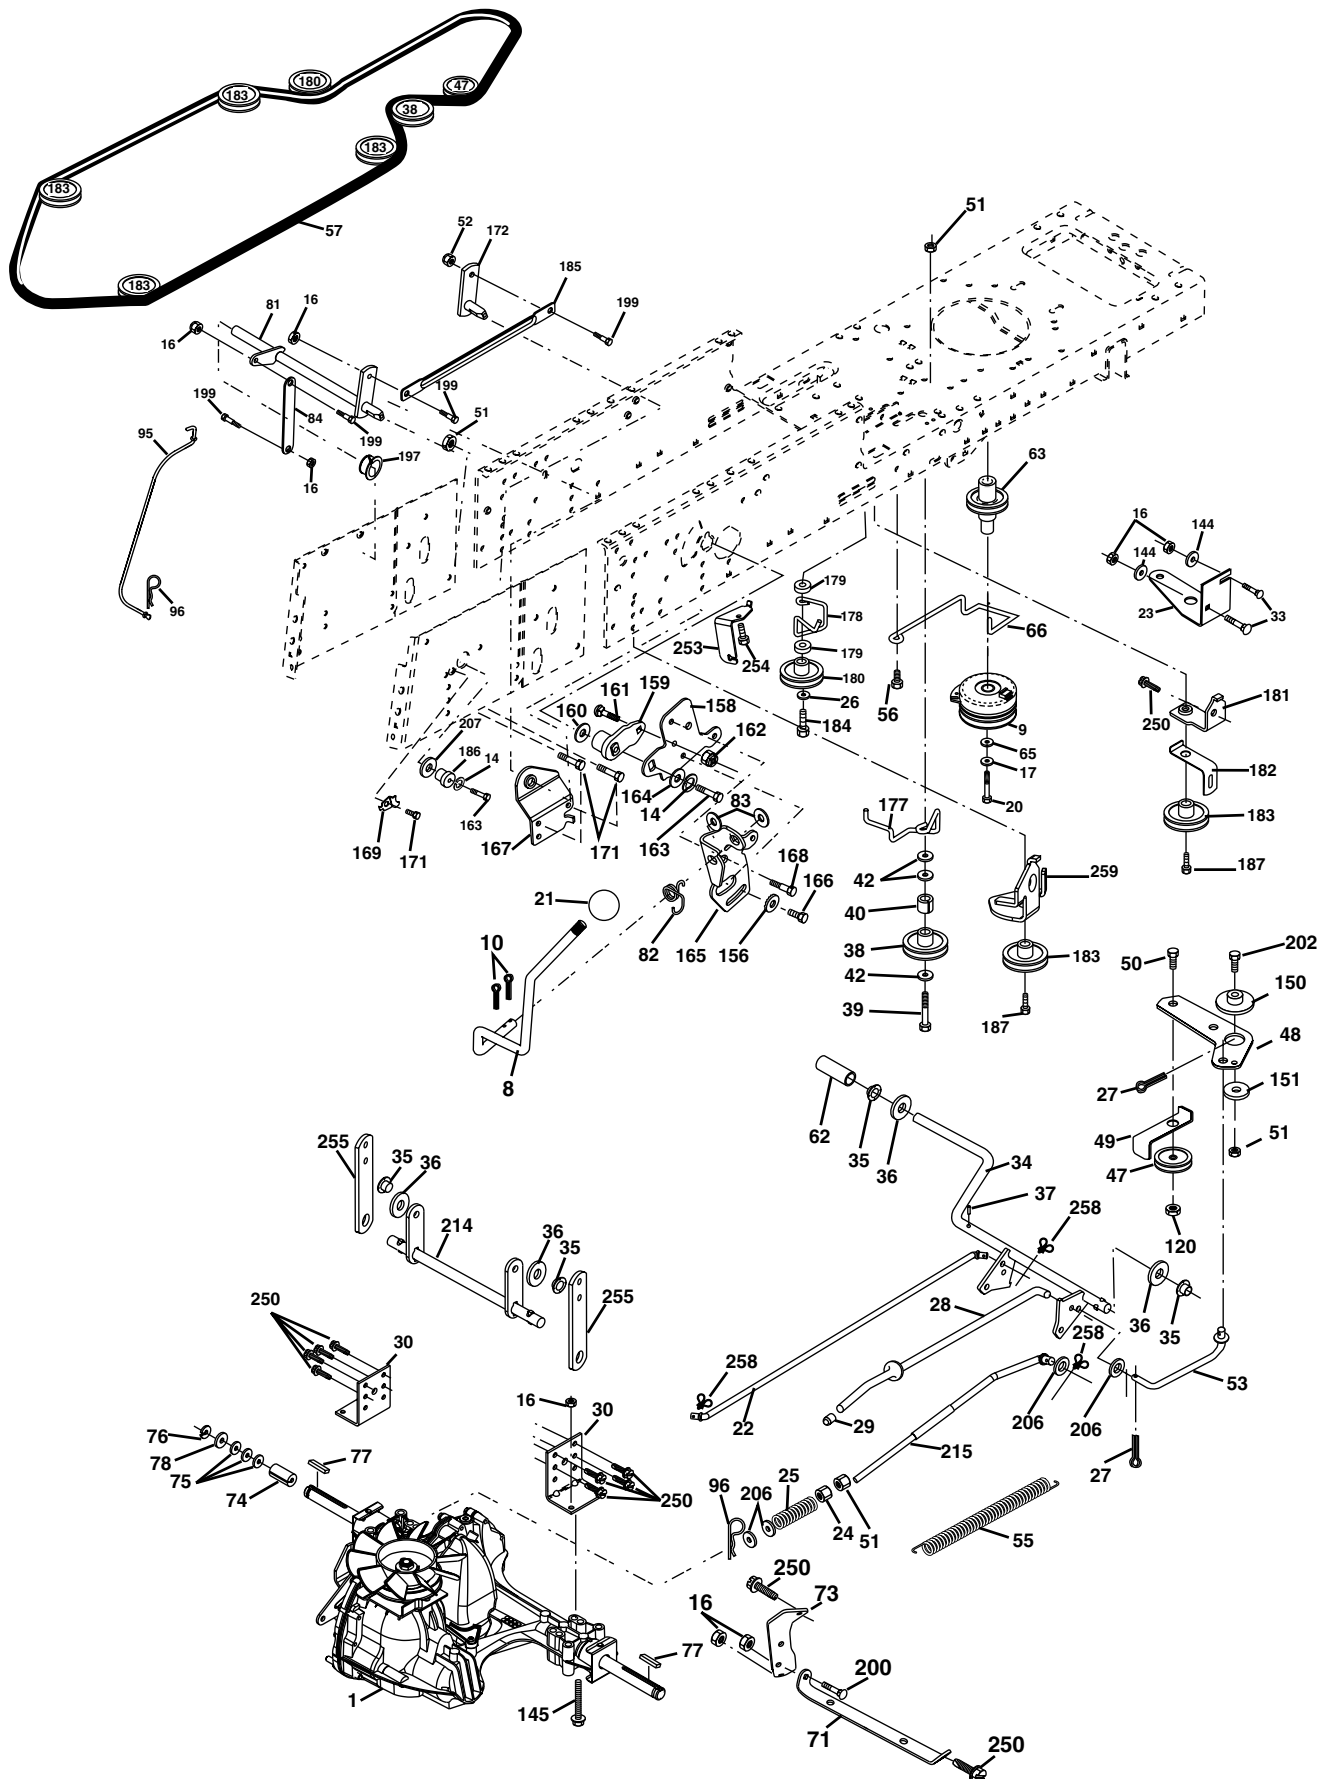

# REPAIR PARTS


**TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
DRIVE**

| KEY NO. | PART NO.     | DESCRIPTION                                                                |
|---------|--------------|----------------------------------------------------------------------------|
| 1       | -----        | Transaxle Hydro Gear 321-0510<br>(Order parts from transaxle manufacturer) |
| 8       | 532 16 56-19 | Rod, Shift Fender Adjust Lt                                                |
| 9       | 532 17 55-40 | Clutch Ele EVX                                                             |
| 10      | 876 02 04-16 | Pin, Cotter 1/8 x 1                                                        |
| 14      | 810 04 04-00 | Washer, Lock Hvy Helical                                                   |
| 16      | 873 80 05-00 | Nut, Lock Hex w/Ins 5/16-18 UNC                                            |
| 20      | 871 17 07-80 | Bolt, Hex 7/16-20 x 5                                                      |
| 21      | 532 13 05-64 | Knob Deluxe                                                                |
| 22      | 532 17 56-07 | Rod, Brake                                                                 |
| 23      | 532 17 01-71 | Bracket asm Anti-Rot                                                       |
| 24      | 873 35 06-00 | Nut                                                                        |
| 25      | 532 10 68-88 | Spring, Rod, Brake                                                         |
| 26      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.                                              |
| 27      | 876 02 04-12 | Pin, Cotter 1/8 x 3/4                                                      |
| 28      | 532 17 57-65 | Rod, Parking Brake                                                         |
| 29      | 532 07 16-73 | Cap, Parking Brake                                                         |
| 30      | 532 16 95-92 | Bracket, Mfg. Transaxle                                                    |
| 33      | 872 14 05-06 | Bolt Rdhd Sqnk 5/16-18 Unc x 3/4                                           |
| 34      | 532 17 55-78 | Shaft, Asm Pedal Foot CRD                                                  |
| 35      | 532 12 01-83 | Bearing, Nylon                                                             |
| 36      | 819 21 16-16 | Washer 21/32 x 1 x 16 Ga.                                                  |
| 37      | 532 12 49-63 | Pin, Roll 3/16 x 1"                                                        |
| 38      | 532 16 59-36 | Pulley Flat Composite 3.06"                                                |
| 39      | 874 76 06-44 | Bolt Fin Hex 3/8-16 Unc x 2-3/4                                            |
| 40      | 532 12 49-65 | Spacer, Split 395 x 59 Bzp                                                 |
| 42      | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga.                                              |
| 47      | 532 12 77-83 | Pulley, Idler, V Groove Plasic                                             |
| 48      | 532 15 44-07 | Bellcrank Clutch Grnd Drv                                                  |
| 49      | 532 12 32-05 | Retainer, Belt Style Spring                                                |
| 50      | 874 76 06-24 | Bolt Hex Hd 3/8-16 UNC x 1-1/2                                             |
| 51      | 873 68 06-00 | Nut, Crownlock 3/8-16 UNC                                                  |
| 52      | 873 68 05-00 | Nut Crownlock 5/16-18                                                      |
| 53      | 532 10 57-10 | Link, Clutch 7.66                                                          |
| 55      | 532 10 57-09 | Spring, Return, Clutch                                                     |
| 56      | 817 06 06-20 | Screw 3/8-16 x 1-1/4                                                       |
| 57      | 532 17 01-40 | V-Belt Kev 112" 0650 CRD                                                   |
| 62      | 532 12 35-33 | Cover, Pedal                                                               |
| 63      | 532 14 58-68 | Pulley, Clutch elect EVX 1"                                                |
| 65      | 810 04 07-00 | Washer                                                                     |
| 66      | 532 15 47-78 | Keeper, Belt Engine F-Proof                                                |
| 71      | 532 16 91-83 | Strap, Torque, Lh                                                          |
| 73      | 532 16 91-82 | Strap, Torque, Rh                                                          |
| 74      | 532 13 70-57 | Spacer, Split                                                              |
| 75      | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.                                              |
| 76      | 812 00 00-01 | Ring, E                                                                    |
| 77      | 532 12 35-83 | Key, Square                                                                |
| 78      | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.                                              |
| 81      | 532 17 00-06 | Asm, Shaft                                                                 |
| 82      | 532 16 57-11 | Spring, Torsion                                                            |

| KEY NO. | PART NO.     | DESCRIPTION                         |
|---------|--------------|-------------------------------------|
| 83      | 819 17 12-16 | Washer 17/32 x 3/4 x 16 Ga.         |
| 84      | 532 17 00-07 | Link, Transaxle                     |
| 95      | 532 17 00-15 | Control Asm Bypass Hydro            |
| 96      | 532 12 47-88 | Spring, Retainer 1"                 |
| 120     | 873 90 06-00 | Nut Lock Flg. 3/8-16 Unc            |
| 144     | 819 11 10-16 | Washer 11/32 x 5/8 x 16 Ga.         |
| 145     | 874 49 05-44 | Bolt Hex FGHD 5/16-18 x Gr 5        |
| 150     | 532 16 58-50 | Bushing, Bellcrank Grnd Dr          |
| 151     | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga.           |
| 156     | 532 16 60-02 | Washer Srted 5/16ID x 1.125         |
| 158     | 532 16 55-89 | Bracket Shift Mount                 |
| 159     | 532 16 54-94 | Hub Tapered Flange Shift Lt         |
| 160     | 819 29 20-16 | Washer 29/32 x 1-1/4 x 16 Ga.       |
| 161     | 872 14 04-06 | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5    |
| 162     | 873 68 04-00 | Nut Crownlock 1/4-20 Unc            |
| 163     | 874 78 04-16 | Bolt Hex Fin 1/4-20 Unc x 1 Gr 5    |
| 164     | 819 09 10-10 | Washer 5/8 x .281 x 10 Ga.          |
| 165     | 532 16 56-23 | Bracket Pivot Lever                 |
| 166     | 532 16 68-80 | Screw 5/16-18 x 5/8                 |
| 167     | 532 16 55-88 | Bracket Support Shift CRD           |
| 168     | 532 16 54-92 | Bolt Shoulder 5/16-18 x .561        |
| 169     | 532 16 55-80 | Plate Fastening Lt                  |
| 171     | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 Ty-Tt     |
| 172     | 532 17 02-71 | Shaft Asm Shifter Frt CRD           |
| 177     | 532 16 59-32 | Keeper Flat Idler 3.06" CRD         |
| 178     | 532 16 59-33 | Keeper Belt Idler 1.88" CRD         |
| 179     | 532 12 09-58 | Washer Sintered                     |
| 180     | 532 16 56-30 | Pulley, Idler, Flat 1.88" CRD       |
| 181     | 532 18 02-11 | Bracket Idler Ground Drive CRD      |
| 182     | 532 16 56-34 | Keeper Belt 2.5" Od V-Idler CRD     |
| 183     | 532 17 90-50 | Pulley V-Idler 2.50" Od CRD         |
| 184     | 817 49 06-44 | Screw Hexwsh Thdrol 3/8-16 x 2-3/4  |
| 185     | 532 17 00-08 | Link Shift                          |
| 186     | 532 16 56-14 | Hub Tapered Round CRD               |
| 187     | 817 58 05-20 | Screw Thdrol 5/16-18 x 1.25         |
| 197     | 532 16 96-13 | Nyliner Snap-In 5/8                 |
| 199     | 532 16 96-12 | Bolt Shoulder 5/16-18 Unc           |
| 200     | 872 14 05-08 | Bolt RDHD SQNK 5/16-18 x 1          |
| 202     | 872 11 06-12 | Bolt Carr. Sh. 3/8-16 x 1-1/2 Gr. 5 |
| 206     | 819 13 14-16 | Washer 13/32 x 7/8 x 16 Ga.         |
| 207     | 532 16 98-45 | Washer Nylon Rear                   |
| 214     | 532 17 56-09 | Shaft Asm. Brake                    |
| 215     | 532 17 56-52 | Rod Brake Hydro                     |
| 250     | 817 06 06-12 | Screw 3/8-16 x 3/4                  |
| 253     | 532 17 50-28 | Bracket Cable Chassis               |
| 254     | 817 06 06-16 | Screw 3/8-16 x 1                    |
| 255     | 532 17 56-08 | Brace Shaft Brake Mtg.              |
| 258     | 532 17 80-62 | Clip Retainer                       |
| 259     | 532 18 02-12 | Bracket Pulley                      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68**  
**STEERING ASSEMBLY**

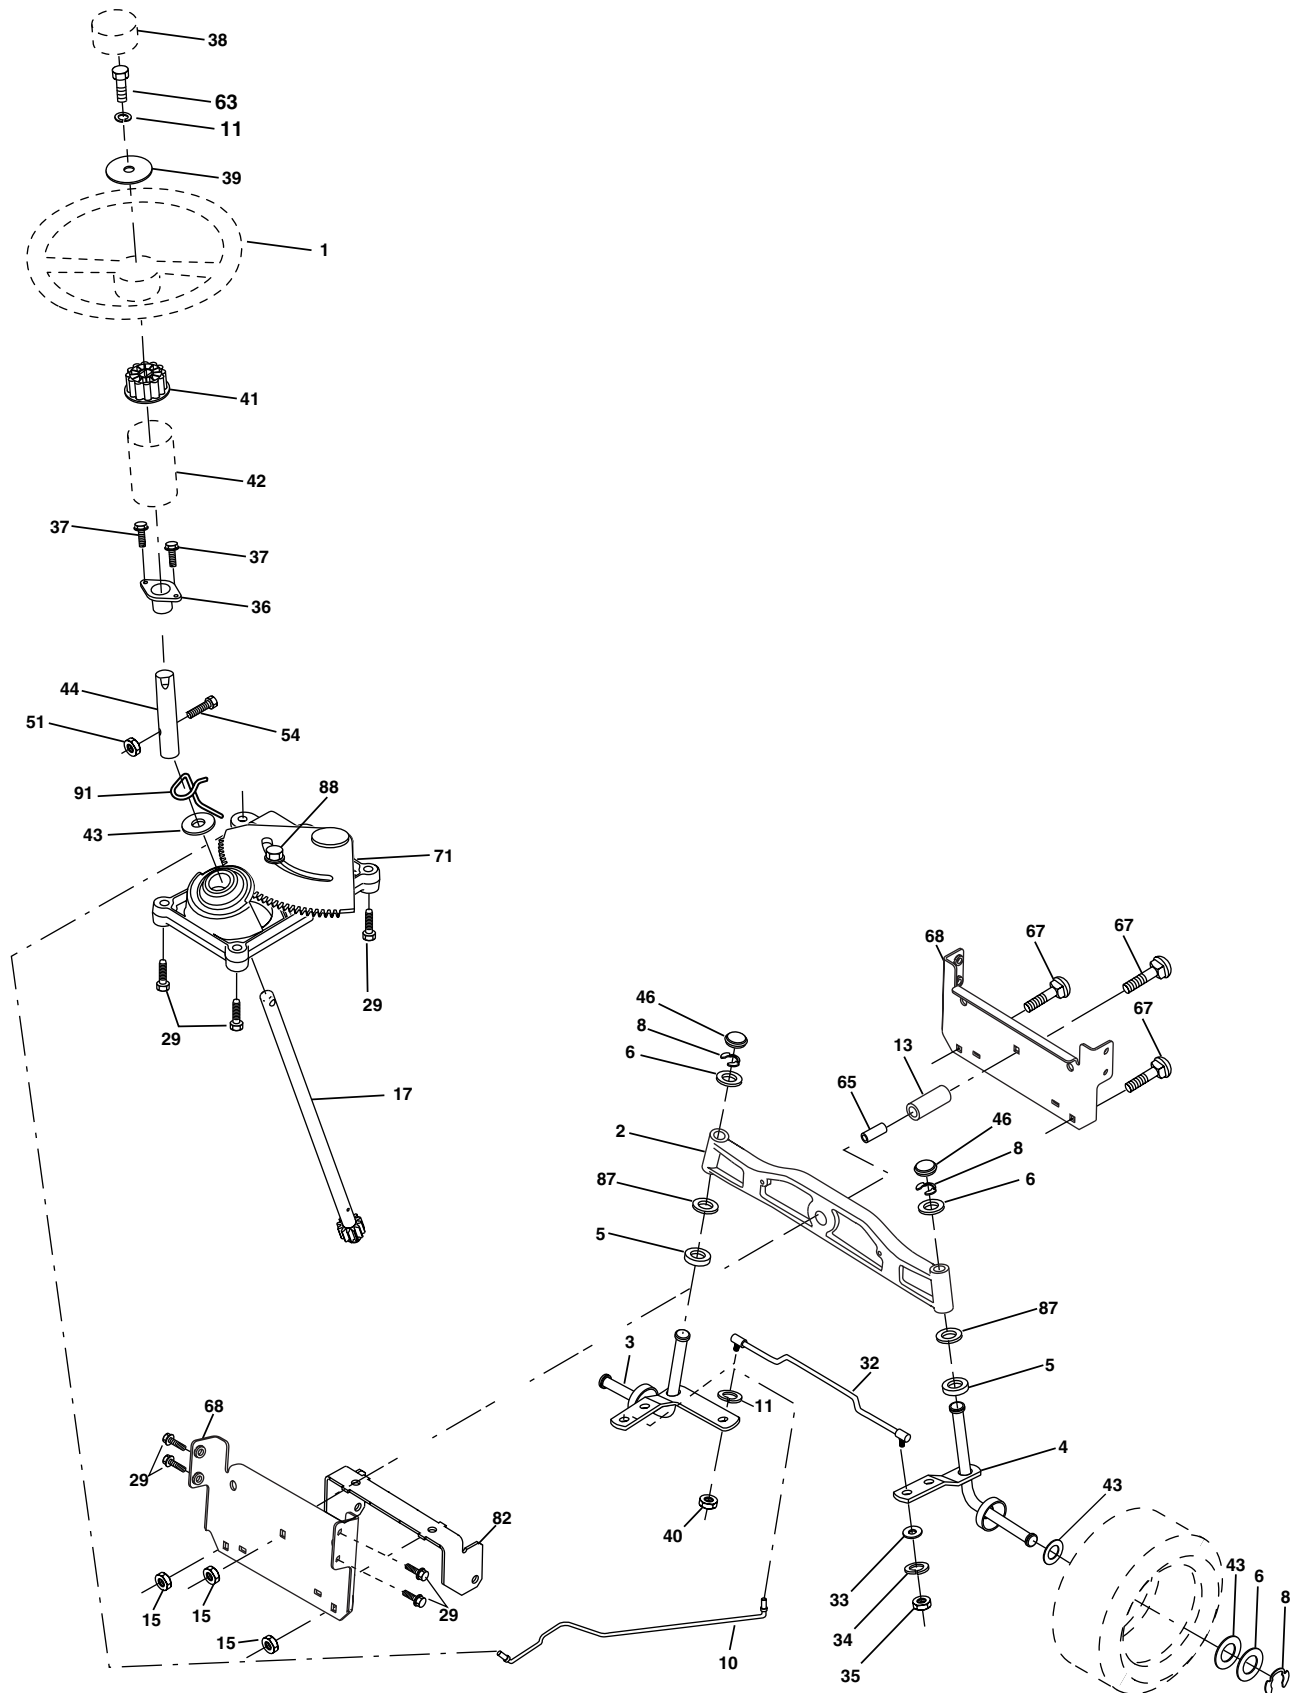

# REPAIR PARTS


## TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68 STEERING ASSEMBLY

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                        |
|------------|--------------|------------------------------------|
| 1          | 532 17 20-92 | Steering Wheel                     |
| 2          | 532 17 23-93 | Front Axle Assembly                |
| 3          | 532 16 98-40 | Spindle Assembly, L.H.             |
| 4          | 532 16 98-39 | Spindle Assembly, R.H.             |
| 5          | 532 12 49-31 | Bearing, Race, Thrust, Hardened    |
| 6          | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Gauge    |
| 8          | 812 00 00-29 | Ring, Klip                         |
| 10         | 532 17 51-21 | Link, Drag                         |
| 11         | 810 04 06-00 | Washer, Lock                       |
| 13         | 532 13 65-18 | Spacer Axle                        |
| 15         | 532 14 52-12 | Nut Hex Flange Lock                |
| 17         | 532 17 78-76 | Shaft Assembly, Steering           |
| 29         | 817 06 06-12 | Screw 3/8-16 x 3/4                 |
| 32         | 532 17 01-62 | Rod, Tie                           |
| 33         | 819 11 12-16 | Washer 11/32 x 3/4 x 16 Ga.        |
| 34         | 810 04 05-00 | Washer Lock Hvy Hlcl Spr 5/16      |
| 35         | 873 54 05-00 | Crownlock Nut 5/16-24 Unf          |
| 36         | 532 15 50-99 | Bushing, Steering                  |
| 37         | 532 15 29-27 | Screw TT #10-32 x 5 x 3/8 Flange   |
| 38         | 532 17 20-93 | Cap Wheel Steer                    |
| 39         | 819 13 24-11 | Washer 13/32 x 1-1/20 x 11 Gauge   |
| 40         | 532 12 47-01 | Nut Lock Center 3/8-24 Unf         |
| 41         | 532 15 99-45 | Adaptor, Steering Wheel            |
| 42         | 532 16 96-33 | Boot, Steering Dash P/L Mtl        |
| 43         | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Gauge    |
| 44         | 532 15 37-20 | Extension Steering                 |
| 46         | 532 12 12-32 | Cap, Spindle                       |
| 51         | 873 80 05-00 | Nut Lock Hx W/Ins 5/16-18 UNC      |
| 54         | 874 78 05-20 | Bolt Fin Hex 5/16-18 UNC x 1-1/4   |
| 63         | 874 78 06-16 | Bolt Fin Hex 3/8-16 unc. x 1 Gr. 5 |
| 65         | 532 16 03-67 | Spacer Axle                        |
| 67         | 872 14 06-18 | Bolt Rdhd Sq 3/8-16 x 2-1/4        |
| 68         | 532 16 98-27 | Brace Axle                         |
| 71         | 532 17 51-46 | Steering Asm.                      |
| 82         | 532 16 98-35 | Bracket Susp. Chassis Front        |
| 87         | 532 17 39-66 | Washer Flat .781 x 1-1/2 x .14     |
| 88         | 532 17 51-18 | Bolt Shoulder 7/16-20 Unc          |
| 91         | 532 17 55-53 | Clip Steering                      |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
SEAT ASSEMBLY

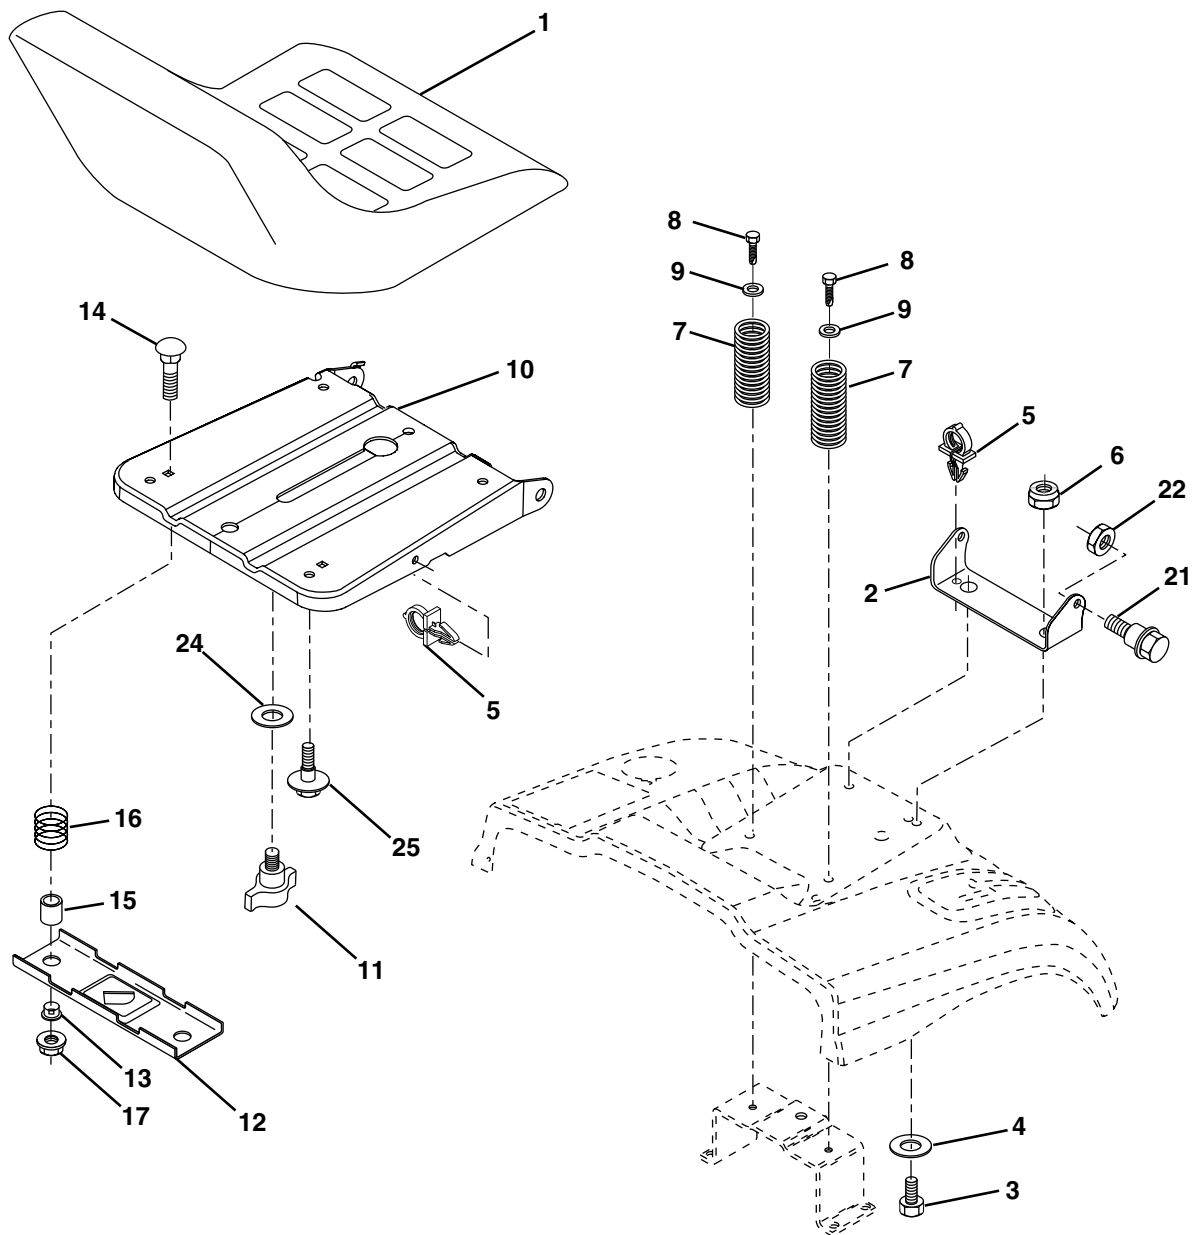


| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 1       | 532 14 01-18 | Seat                           |
| 2       | 532 14 05-51 | Bracket Pnt Pivot Seat (blk )  |
| 3       | 871 11 06-16 | Bolt Fin Hex 3/8-16 x 1        |
| 4       | 819 13 16-10 | Washer flat 13/32 x 1 x 10 Ga. |
| 5       | 532 14 50-06 | Clip Push In Hinged            |
| 6       | 873 80 06-00 | Nut Lock Hex 3/8-16 Unc        |
| 7       | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8       | 817 00 06-16 | Screw 3/8-16 X 1-1/2           |
| 9       | 819 13 16-14 | Washer 13/32 X 1 X 14 Ga       |
| 10      | 532 17 48-94 | Pan Pnt Seat (blk )            |
| 11      | 532 16 63-69 | Knob Seat Adj. Wingnut         |
| 12      | 532 12 12-46 | Bracket Pnt Mounting Switch    |

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 13      | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id     |
| 14      | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20x1-1/2  |
| 15      | 532 12 12-49 | Spacer Split 28 X 88 Zinc      |
| 16      | 532 12 37-40 | Spring Cprsn                   |
| 17      | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21      | 532 17 18-52 | Bolt Shoulder 5/16-18 Unc-2A   |
| 22      | 873 80 05-00 | Nut Hex Lock w/Ins 5/16-18     |
| 24      | 819 17 19-12 | Washer 17/32 X 1-3/16 X 12 Ga. |
| 25      | 532 12 70-18 | Bolt Shoulder 5/16-18 X 62     |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# REPAIR PARTS


TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
DECALS

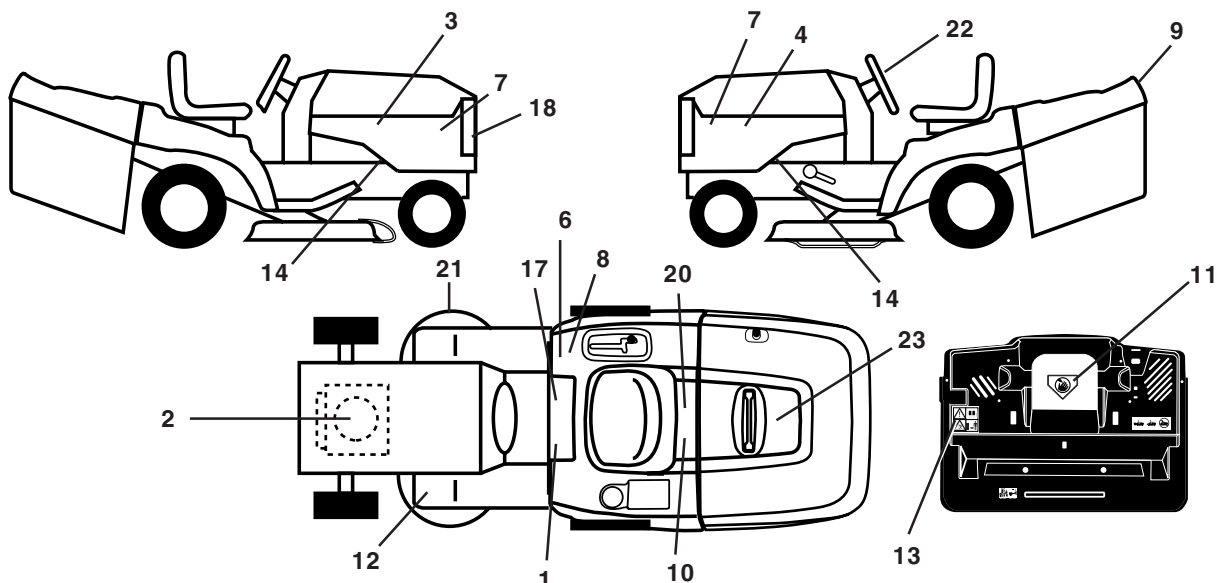

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 1       | 532 14 54-98 | Decal Read Owner's Manual Sym |
| 2       | 532 18 07-09 | Decal Hp Engine               |
| 3       | 532 17 96-25 | Decal Hood Rh                 |
| 4       | 532 17 96-26 | Decal Hood Lh                 |
| 6       | 532 12 61-87 | Decal 100 DBA                 |
| 7       | 532 16 29-27 | Decal Hood Insert             |
| 8       | 532 14 54-37 | Decal Europe Stand Ce         |
| 9       | 532 14 17-61 | Decal Fender Logo             |
| 10      | 532 14 50-05 | Decal Bat Dan/Poi P/L Sym Wpn |
| 11      | 532 14 54-94 | Decal Mower Cut Finger Symbol |
| 12      | 532 15 97-37 | Decal Brake/Clutch Symbol Lt  |
| 13      | 532 18 04-35 | Decal Rear Plate CRD          |

| KEY NO. | PART NO.     | DESCRIPTION                |
|---------|--------------|----------------------------|
| 14      | 532 15 97-36 | Decal Chassis Hot Muffler  |
| 17      | 532 14 08-37 | Decal Saddle Brake Parking |
| 18      | 532 15 22-62 | Decal Grille               |
| 20      | 532 16 69-60 | Decal Bypass Fender CRD    |
| 21      | 532 16 62-86 | Decal Hex Belt Sch CRD     |
| 22      | 532 17 05-65 | Decal Ins Strg Whl         |
| 23      | 532 17 06-54 | Decal Bagger Top CRD       |
| —       | 532 13 83-11 | Decal Lift Handle          |
| —       | 532 18 10-91 | Pad Footrest LH            |
| —       | 532 18 10-90 | Pad Footrest RH            |
| —       | 532 18 00-27 | Manual Operator's (Euro)   |
| —       | 532 18 00-28 | Manual Operator's (Scan)   |

## WHEELS & TIRES

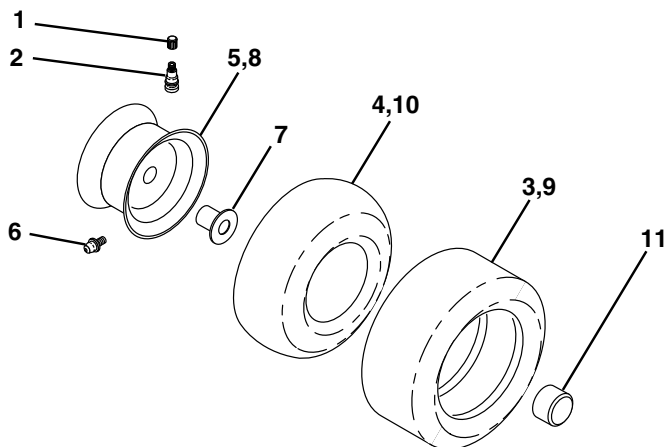


| KEY NO. | PART NO.     | DESCRIPTION                     |
|---------|--------------|---------------------------------|
| 1       | 532 05 91-92 | Cap Value Tire                  |
| 2       | 532 06 51-39 | Stem Value                      |
| 3       | 532 10 62-22 | Tire F Ts 15 X 6 0 - 6 Service  |
| 4       | 532 05 99-04 | Tube Inner Front #35060         |
| 5       | 532 13 83-36 | Rim Asm 6" front Silver Service |
| 6       | 532 12 49-57 | Fitting Grease                  |
| 7       | 532 12 49-59 | Bearing Flange                  |
| 8       | 532 13 83-37 | Rim Asm 8" rear Silver Service  |
| 9       | 532 13 84-68 | Tire R Ts 20 x 8-8 Service      |
| 10      | 532 12 49-26 | Tube Rear 9 5 X 8 Service       |
| 11      | 532 17 50-39 | Cap Axle Blk 1 50 X 1 00        |
| --      | 532 14 43-34 | Sealant, Tire (10 oz. tube)     |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
ENGINE

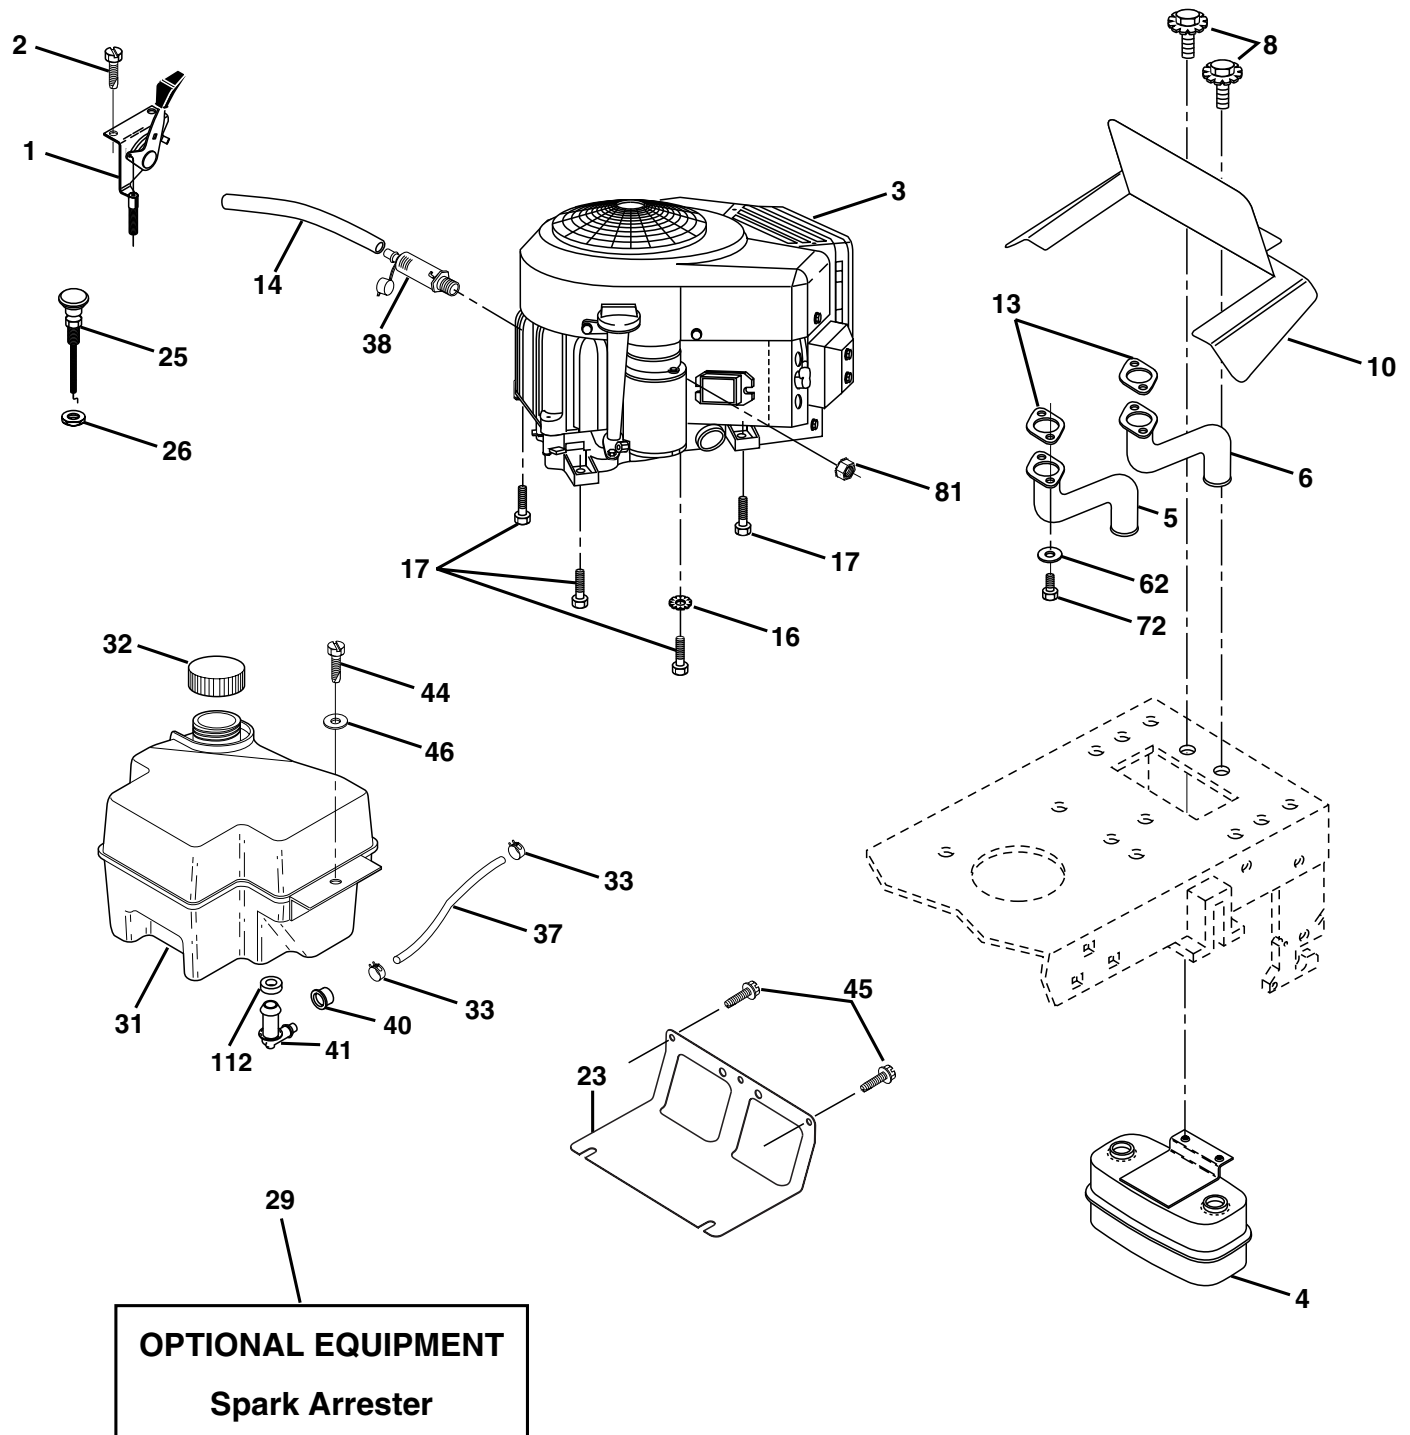

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
ENGINE

**Correction:**

**Key No**

**10**      **532 16 27-97**

**KEY PART**


**NO. NO. DESCRIPTION**

|     |                     |                                                                                     |
|-----|---------------------|-------------------------------------------------------------------------------------|
| 1   | 532 17 07-71        | Control Throt                                                                       |
| 2   | 817 72 04-08        | Screw Hex Thd Cut 1/4-20x5/8 T                                                      |
| 3   | -----               | Engine Briggs & Stratton Model No. 446777<br>(Order parts from engine manufacturer) |
| 4   | 532 14 97-23        | Muffler Twin Lo-Twin                                                                |
| 5   | 532 15 99-55        | Tube, Manifold Lh                                                                   |
| 6   | 532 16 05-89        | Tube, Manifold Rh                                                                   |
| 8   | 532 17 18-77        | Bolt 5/16-18 Unc x 3/4 w/Sems                                                       |
| 10  | <b>532 14 55-52</b> | Shield Browning Intek                                                               |
| 13  | 532 16 53-91        | Gasket Muffler                                                                      |
| 14  | 532 14 84-56        | Tube Drain Oil Easy                                                                 |
| 16  | 811 05 06-00        | Washer Lock Ext Tooth 3/8                                                           |
| 17  | 817 06 06-24        | Screw, Thdrol 3/8-16 x 1-1/2 Tytt                                                   |
| 23  | 532 16 98-37        | Shield Brn/Dbr Guard                                                                |
| 25  | 532 14 59-96        | Choke Control 37"                                                                   |
| 26  | 873 92 06-00        | Nut, Keps 3/8-24 Unf                                                                |
| 29  | 532 13 71-80        | Kit Spark Arrestor (Flat Scrn)                                                      |
| 31  | 532 18 06-45        | Tank Fuel 2.00                                                                      |
| 32  | 532 14 05-27        | Cap Asm Fuel W/sym Vented                                                           |
| 33  | 532 12 34-87        | Clamp Hose Blk                                                                      |
| 37  | 532 13 70-40        | Line Fuel                                                                           |
| 38  | 532 14 83-15        | Plug Drain Oil Easy                                                                 |
| 40  | 532 12 40-28        | Bushing Snap                                                                        |
| 41  | 532 13 92-77        | Stem Tank Fuel                                                                      |
| 44  | 817 67 04-12        | Screw Hexwsh Thdrol 1/4-20 x 3/4                                                    |
| 45  | 817 00 06-12        | Screw Hexwsh Thdrol 3/8-16 x 3/4                                                    |
| 46  | 819 09 14-16        | Washer 9/32 x 7/8 x 16 Ga.                                                          |
| 62  | 810 04 05-00        | Washer, Lock Hvy. Hlcl Spr 5/16                                                     |
| 72  | 871 07 05-12        | Screw Hex Hd Cap 5/16-18 x 3/4                                                      |
| 81  | 873 51 04-00        | Nut Keps Hex 1/4-20 Unc                                                             |
| 112 | 532 12 49-52        | Bushing                                                                             |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
MOWER LIFT

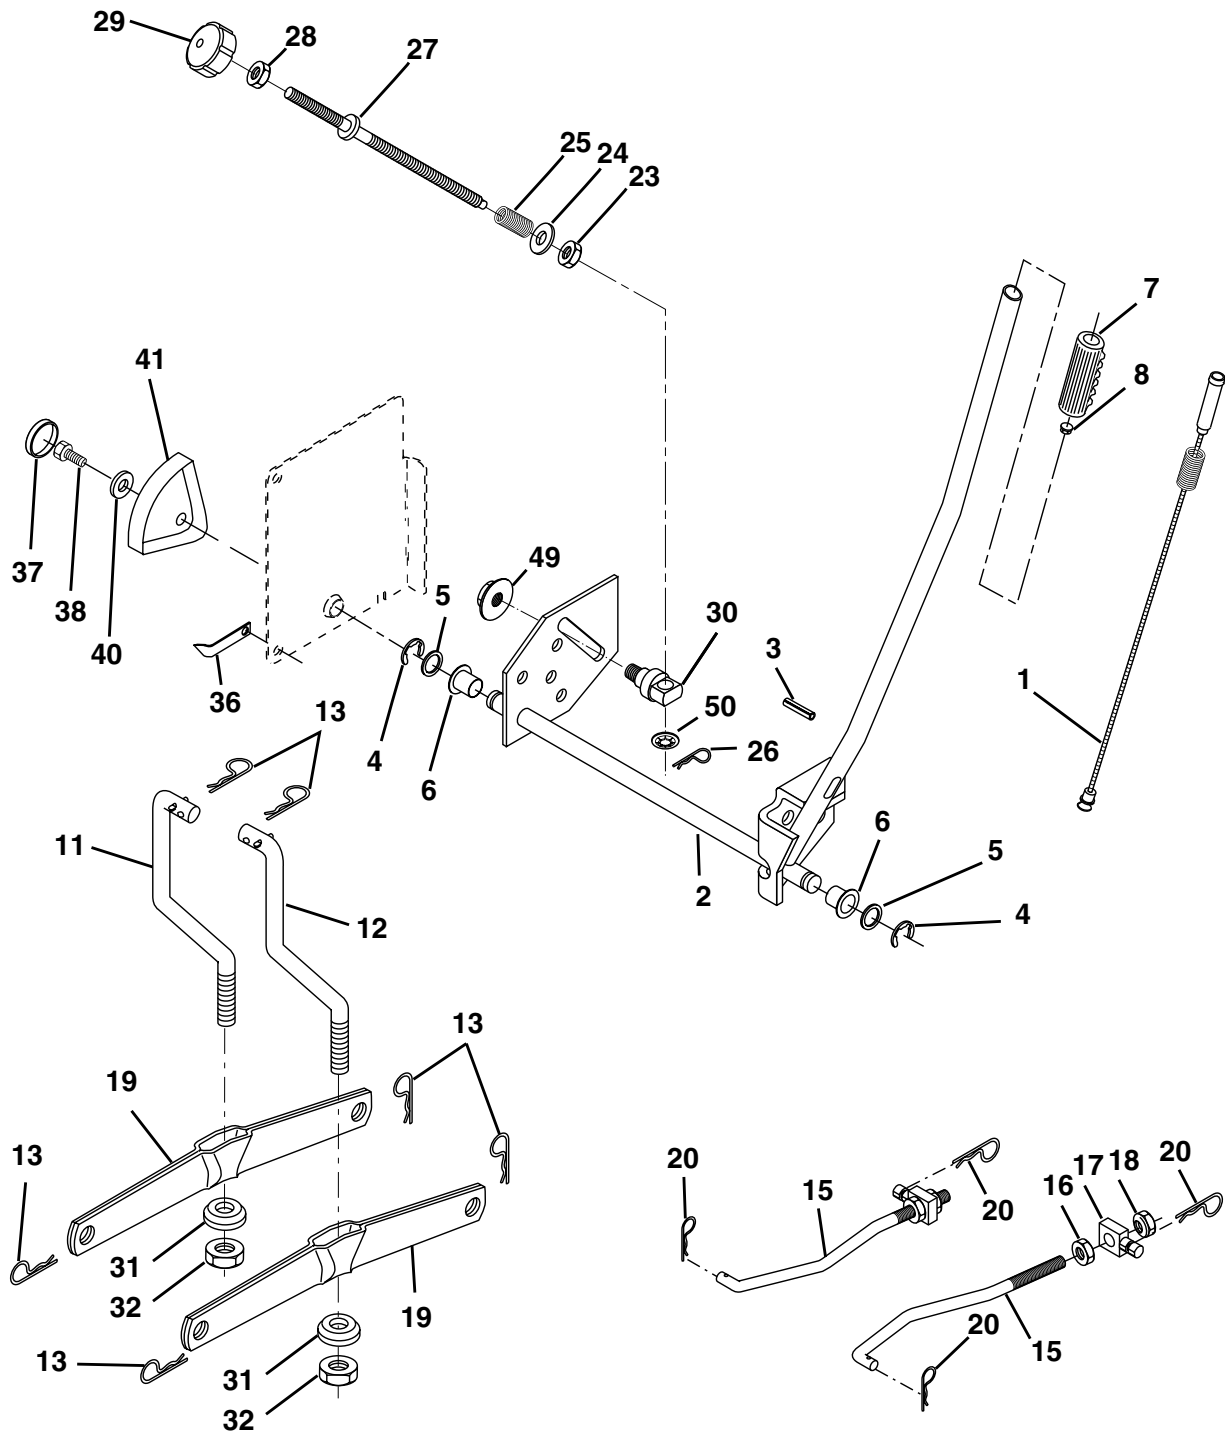

# REPAIR PARTS


TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
MOWER LIFT

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                       |
|------------|--------------|-----------------------------------|
| 1          | 532 1594-60  | Washer Asm Inner Spring W/Plunger |
| 2          | 532 1594-71  | Shaft Asm. Lift                   |
| 3          | 532 1057-67  | Pin Groove                        |
| 4          | 812 00 00-02 | E Ring #5133-62                   |
| 5          | 819 21 16-21 | Washer 21/32 x 1 x 21 Ga.         |
| 6          | 532 1201-83  | Bearing Nylong                    |
| 7          | 532 1256-31  | Grip Handle Fluted                |
| 8          | 532 1245-26  | Button Plunger Black              |
| 11         | 532 1658-29  | Link Asm Lift L.H.                |
| 12         | 532 1658-31  | Link Asm Lift R.H.                |
| 13         | 532 1246-70  | Retainer Spring                   |
| 15         | 532 1732-88  | Link Front                        |
| 16         | 873 3508-00  | Nut Jam Hex 1/2-13 Unc            |
| 17         | 532 1756-89  | Trunnion Blk Zinc                 |
| 18         | 873 8008-00  | Nut Lock W/Wsh 1/2-13 Unc         |
| 19         | 532 1398-68  | Arm Suspension Mower              |
| 20         | 532 1635-52  | Retainer Spring                   |
| 23         | 532 1108-07  | Nut Special                       |
| 24         | 819 1310-16  | Washer 13/32 x 5/8 x 16 Ga.       |
| 25         | 532 1248-74  | Spring 2-1/8"                     |
| 26         | 532 1694-84  | Retainer Clip                     |
| 27         | 532 1269-71  | Rod Adj Lift Zinc 7.49 Wrk Lg     |
| 28         | 873 3506-00  | Nut Hex Jam 3/8-16 Unc            |
| 29         | 532 1380-57  | Knob Inf 3/8-16 Unc Blk w/sym     |
| 30         | 532 1502-33  | Trunnion Infin Height             |
| 31         | 532 1698-65  | Bearing, Pvt. Lift.               |
| 32         | 873 5406-00  | Nut Crownlock 3/8-24              |
| 36         | 532 1550-97  | Pointer Height Indicator          |
| 37         | 532 1239-35  | Plug Hole Blk 1.485/1.515 Dia     |
| 38         | 817 0605-16  | Screw 5/16-18 x 1                 |
| 40         | 819 1124-10  | Washer 11/32 x 1-1/2 x 10 Ga.     |
| 41         | 532 1239-34  | Scale Ind Height Blk              |
| 49         | 532 1452-12  | Nut hex Flange Lock               |
| 50         | 532 1104-52  | Nut Push Phos & Oil               |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
MOWER

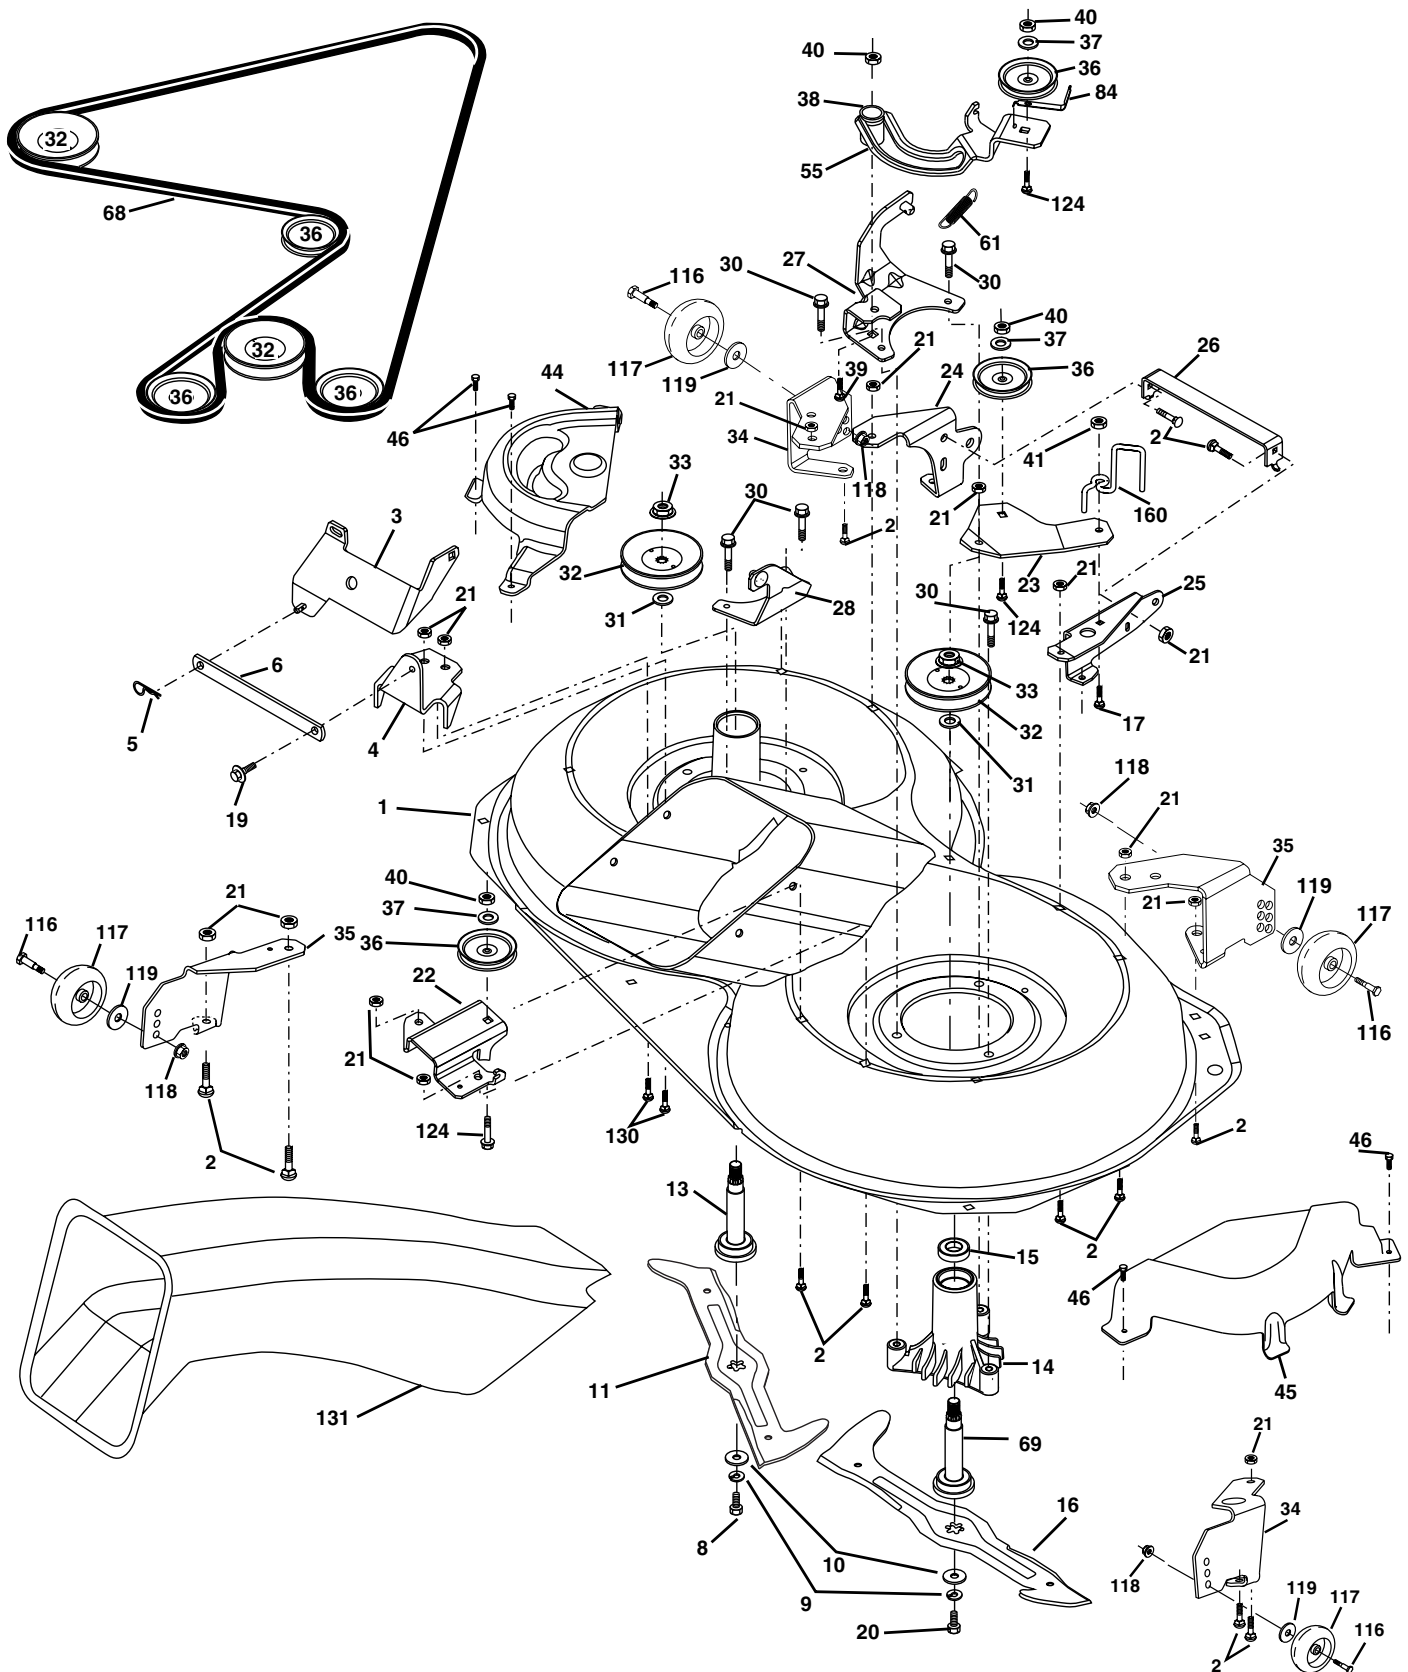

# REPAIR PARTS

**TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
MOWER**


| KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------|
| 1       | 532 16 91-60 | Housing Asm. Mower 107 CRD        |
| 2       | 872 14 05-06 | Bolt Rdhd Sqnk 5/16-18 Unc x 3/4  |
| 3       | 532 16 55-69 | Bracket Asm. S-Bar Chass 92 CRD   |
| 4       | 532 16 91-67 | Bracket Bar Sway Deck 107 CRD     |
| 5       | 532 12 46-70 | Retainer Spring                   |
| 6       | 532 16 55-57 | Bar Sway CRD                      |
| 8       | 532 85 08-57 | Bolt 3/8-24 x 1.25 Gr8 Patched    |
| 9       | 810 03 06-00 | Washer Lock Hvy 3/8 Unplated      |
| 10      | 532 14 02-96 | Washer Hard Blade Mower vented    |
| 11      | 532 17 54-50 | Blade 3-1 Lh 107 CRD              |
| 13      | 532 13 76-45 | Shaft Asm. W/Lower Bearing        |
| 14      | 532 12 87-74 | Housing Mandrel Vented (Machd)    |
| 15      | 532 11 04-85 | Bearing Ball Mandrel              |
| 16      | 532 17 54-51 | Blade 3-1 Rh 107 CRD              |
| 17      | 872 14 06-10 | Bolt Carr 3/8-16 x1-1/4           |
| 19      | 532 13 28-27 | Bolt Shoulder 5/16-18 Thd Form    |
| 20      | 532 16 54-84 | Bolt 3/8-24 x 1.25 Gr8 Ptch Lhthd |
| 21      | 873 68 05-00 | Nut Crown Lock 5/16-18            |
| 22      | 532 16 91-65 | Bracket Idler Sprt RR 107 CRD     |
| 23      | 532 16 91-66 | Bracket Idler Sprt RF 107 CRD     |
| 24      | 532 16 91-70 | Bracket Suspension LF 107 CRD     |
| 25      | 532 16 91-71 | Bracket Suspension RF 107 CRD     |
| 26      | 532 16 52-37 | Brace Support Susp Frt CRD        |
| 27      | 532 16 91-72 | Bracket Asm. Susp RR 107 CRD      |
| 28      | 532 16 91-68 | Bracket Asm. Susp LR 107 CRD      |
| 30      | 532 17 39-84 | Screw Thd Rolling Hex             |
| 31      | 532 12 99-63 | Washer Spacer Mower Vented        |
| 32      | 532 17 57-07 | Mandrel Pulleys                   |
| 33      | 532 17 83-42 | Nut Flg Top Lock                  |

| KEY NO. | PART NO.     | DESCRIPTION                        |
|---------|--------------|------------------------------------|
| 34      | 532 17 95-09 | Bracket Gauge Wheel Lf 107 CRD     |
| 35      | 532 17 62-92 | Bracket Gauge Wheel Rf 107 CRD     |
| 36      | 532 14 67-63 | Pulley Idler V-Groove Dim 4.25     |
| 37      | 819 13 13-16 | Washer 11/32 x 13/16 x 16 Ga       |
| 38      | 532 16 98-51 | Spacer Hub Arm Idler 107 CRD       |
| 39      | 872 11 06-22 | Bolt Rdhd 3/8-16 Unc x 2-3/4 Gr. 5 |
| 40      | 873 68 06-00 | Nut Crownlock 3/8-16 Unc           |
| 41      | 873 90 06-00 | Nut Lock FLG 3/8-16 UNC            |
| 44      | 532 17 55-38 | Cover Mandrel Lh 107 CRD           |
| 45      | 532 17 55-39 | Cover Mandrel Rh 107 CRD           |
| 46      | 532 13 77-29 | Screw Thd Roll 1/4-20 x 5/8        |
| 55      | 532 16 98-49 | Arm Idler 107 CRD                  |
| 61      | 532 17 51-59 | Spring Tension Belt                |
| 68      | 532 16 91-78 | Hex-Belt 107 Mower                 |
| 69      | 532 16 54-82 | Shaft Asm W/Lwr Brg Rh Thd CRD     |
| 84      | 532 15 60-85 | Keeper Belt Idler                  |
| 116     | 532 13 76-44 | Bolt Shoulder                      |
| 117     | 532 13 39-57 | Wheel Gage Donut Wide              |
| 118     | 873 93 06-00 | Nut Centerlock 3/8-16 Unc          |
| 119     | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga.          |
| 124     | 872 11 06-12 | Bolt Carr Sh 3/8-16 x 1-1/2 Gr5    |
| 130     | 872 11 05-06 | Bolt Rdhdsqnk 5/16-18 Unc x 3/4    |
| 131     | 532 16 56-61 | Chute Bagger CRD 92cm              |
| 160     | 532 17 51-60 | Guide Belt CRD                     |
| —       | 532 13 07-94 | Mandrel Asm Service                |
| —       | 532 16 55-79 | Mandrel Asm CRD Lh Threads SVC     |
| —       | 532 18 03-87 | Replacement Mower Complete         |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
BAGGER

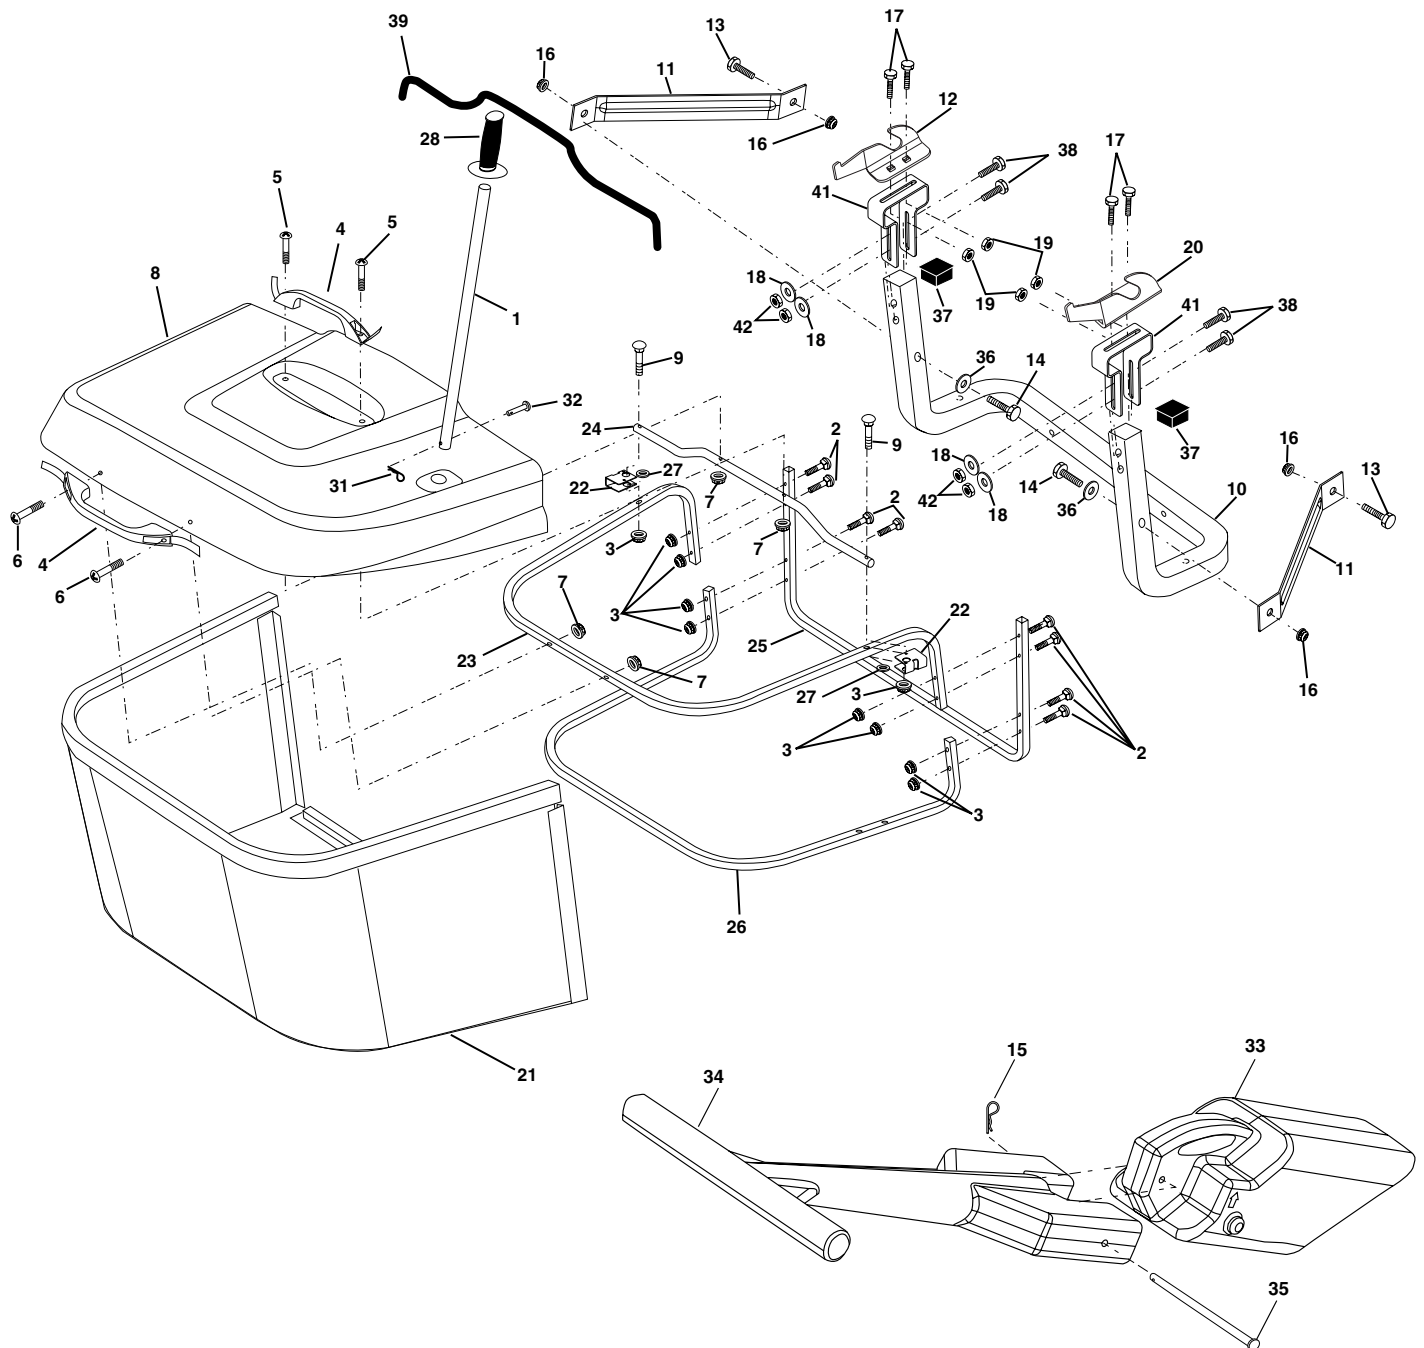



# REPAIR PARTS

TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68  
BAGGER

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                           |
|------------|--------------|---------------------------------------|
| 1          | 532 16 52-49 | Tube Handle Bagger CRD                |
| 2          | 872 14 04-16 | Bolt Carriage 1/4-20 x 2.0 Gr.5       |
| 3          | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc       |
| 4          | 532 16 99-16 | Handle Bagger w/Lvrs Blk CRD          |
| 5          | 874 98 10-24 | Screw Pan Head #10-24 x 1.50 Blk      |
| 6          | 874 98 10-32 | Screw Pan Hd                          |
| 7          | 873 40 10-00 | Nut Wiz Lock Hex Serr/Hd 10-24        |
| 8          | 532 16 99-63 | Cover Bagger                          |
| 9          | 872 16 99-63 | Bolt Carriage 1/4-20 x 2.25d x Gr.5   |
| 10         | 532 18 12-82 | Tube Support Bagger CRD               |
| 11         | 532 16 57-19 | Bracket Support Upper Bag CRD         |
| 12         | 532 16 96-85 | Bracket Horiz Adj Bagger Lh           |
| 13         | 872 11 06-06 | Bolt Rdhd Sht Sqnk 3/8-16 x 3/4       |
| 14         | 872 14 06-20 | Bolt RDHD SQNK 3/8-16 x 2-1/2 Gr.5    |
| 15         | 532 12 46-70 | Retainer Spring                       |
| 16         | 873 90 06-00 | Nut Lock Flg 3/8-16 Unc               |
| 17         | 872 14 05-06 | Bolt Rdhd Sht Sqnk 5/16 -18 Unc x 3/4 |
| 18         | 819 11 12-16 | Washer 11/32 x 3/4 x 16 Ga.           |
| 19         | 873 90 05-00 | Nut Lock Hex Flange 5/16-18           |
| 20         | 532 16 96-84 | Bracket Horiz Adj Bagger Rh           |
| 21         | 532 18 08-80 | Bag Asm CRD                           |
| 22         | 532 16 57-81 | Bracket Side Bagger CRD               |
| 23         | 532 16 57-82 | Tube Upper Bagger CRD                 |
| 24         | 532 16 57-83 | Tube Pivot Bagger CRD                 |
| 25         | 532 18 01-24 | Tube Front Bagger CRD                 |
| 26         | 532 16 57-85 | Tube Lower Bagger CRD                 |
| 27         | 532 16 96-92 | Bushing Snap Bagger CRD               |
| 28         | 532 16 57-87 | Grip Handle Black                     |
| 31         | 532 12 47-88 | Retainer Spring 1" Zinc/Cad           |
| 32         | 532 12 68-75 | Rivet Rd Hd Drilled 3/8 Dia           |
| 33         | 532 16 93-80 | Plug Mulcher                          |
| 34         | 532 16 55-70 | Handle Mulcher                        |
| 35         | 532 16 55-72 | Pin Mulcher                           |
| 36         | 819 13 20-16 | Washer 13/32 x 1-1/4 x 16 Ga.         |
| 37         | 532 17 54-01 | Plug Support Bagger CRD               |
| 38         | 872 01 05-20 | Bolt 5/16-18 x 2-1/2                  |
| 39         | 532 18 09-85 | Seal Trim                             |
| 41         | 532 16 96-83 | Bracket Pnt Adj Pvt Bagger CRD        |
| 42         | 873 80 05-00 | Nut Crownlock 5/16-18 Blk D           |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


# TRACTOR- -MODEL NO. ICT19A (JICTH19A), PRODUCT NO. 954 13 00-68 SCHEMATIC

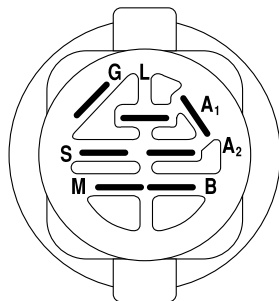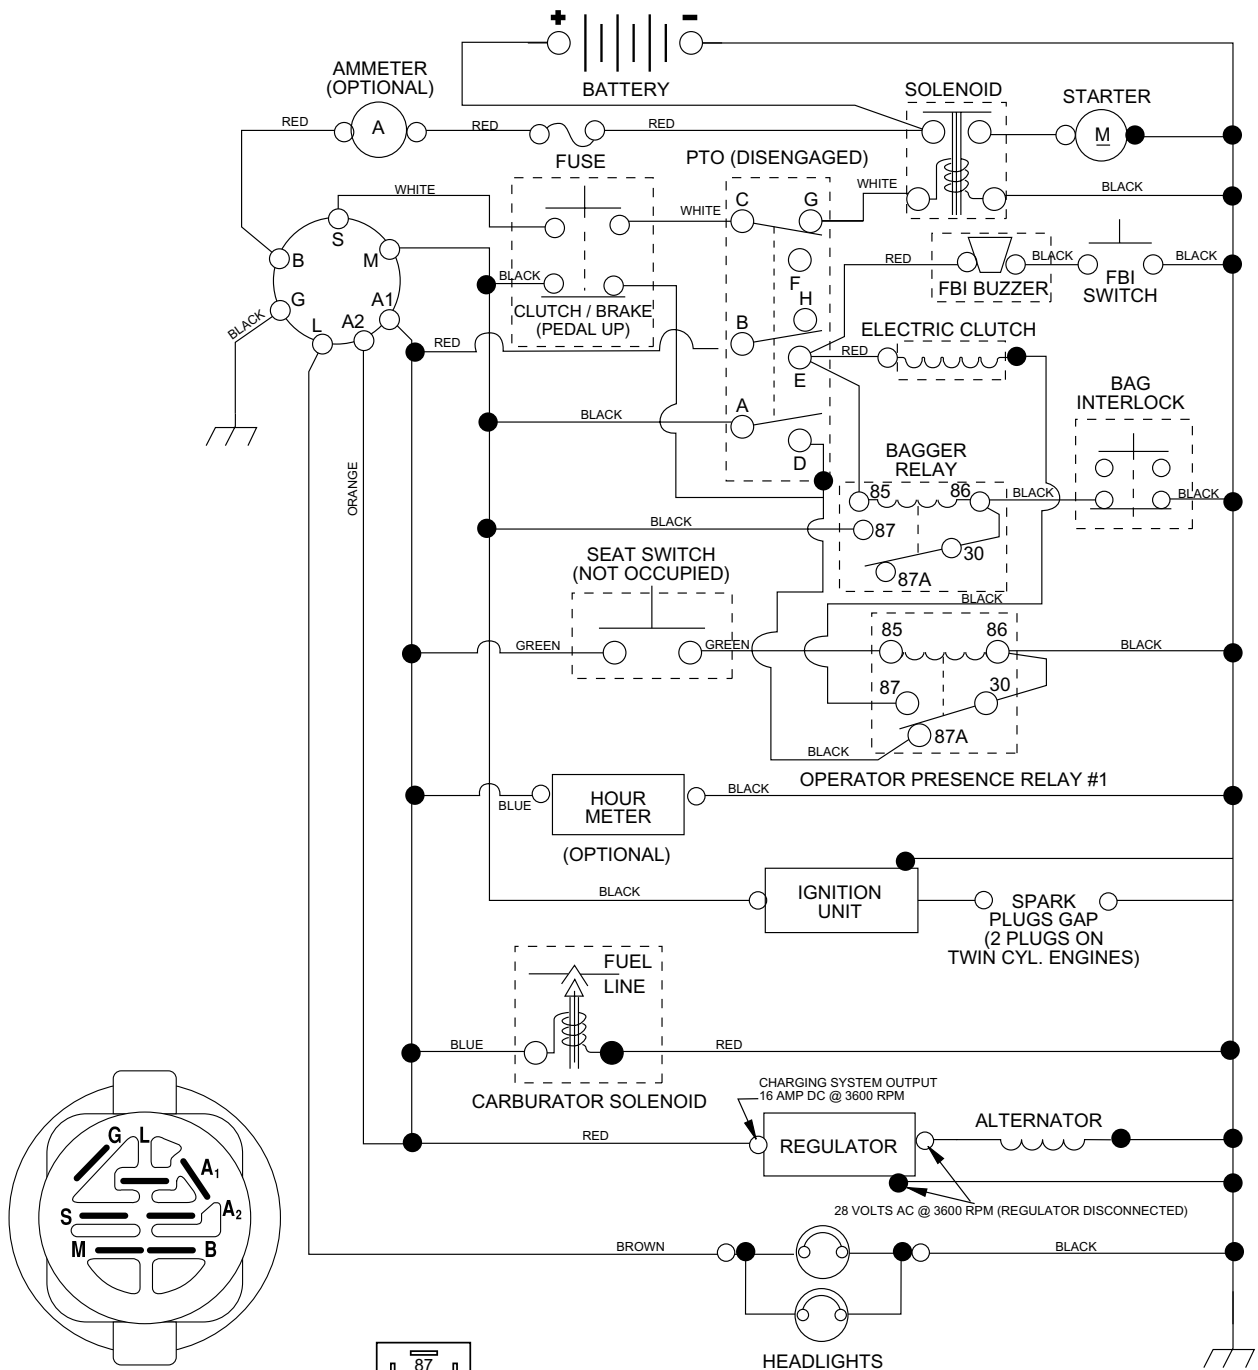


**IGNITION SWITCH**

| POSITION  | CIRCUIT    | "MAKE" |
|-----------|------------|--------|
| OFF       | M+G+A1     | NONE   |
| RUN/LIGHT | B+A1       | A2+L   |
| RUN       | B+A1       | NONE   |
| START     | B + S + A1 | NONE   |

 **WIRING INSULATED CLIPS**  
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.



**RELAY**

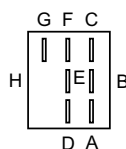

**PTO SWITCH**

| POSITION | CIRCUIT             |
|----------|---------------------|
| OFF      | C + G, B + H        |
| ON       | C + F, B + E, A + D |

●  
NON-REMOVABLE  
CONNECTIONS

○  
REMOVABLE  
CONNECTIONS