


HT25

Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar



WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

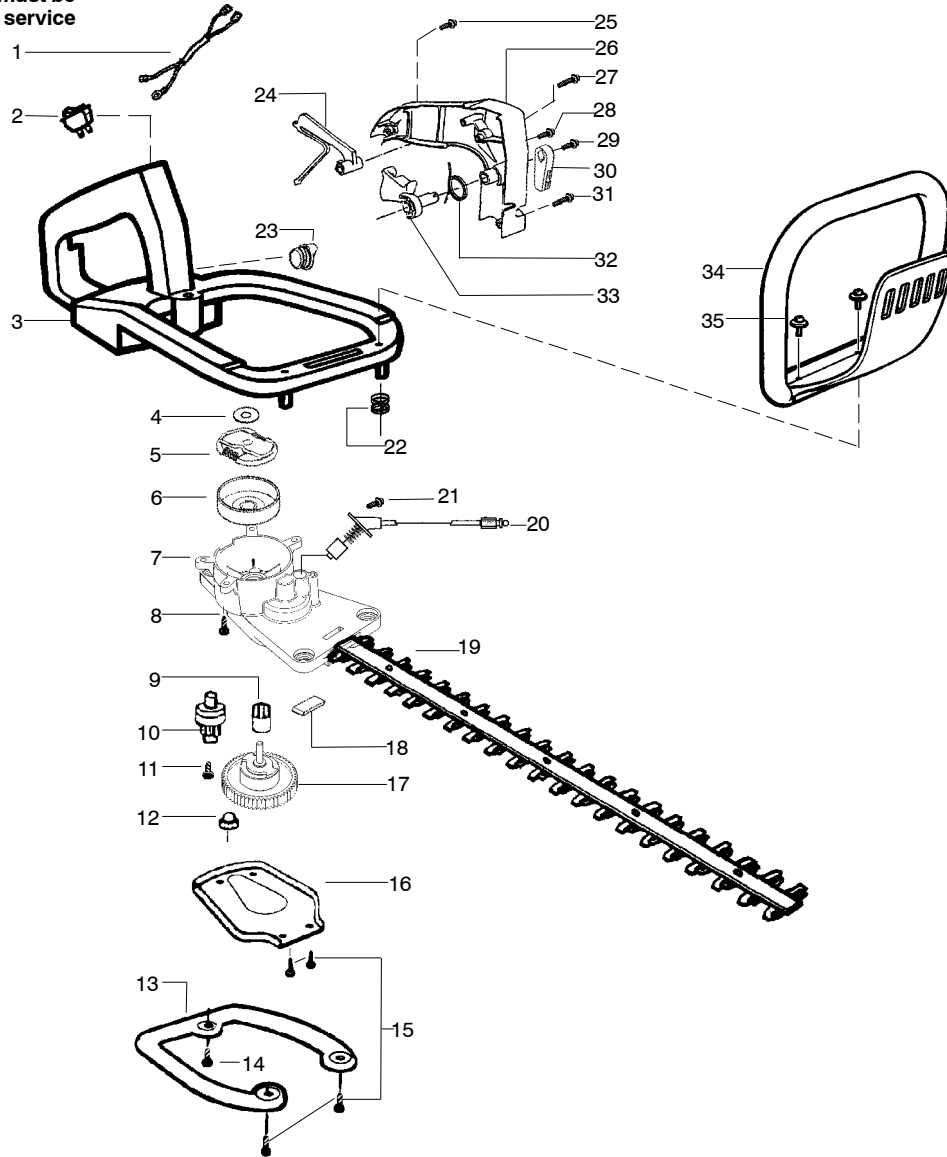

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530054133	Assy-Leadwire/Switch (Incl.#2)	19.	530403228	Assy-Blade 19"
2.	530029954	Switch-Ignition	20.	530057819	Assy-Cable Stop
3.	530071736	Assy-Rear Handle & Tank	21.	530015934	Screw
4.	530015828	Washer-Clutch	22.	530029946	Spring
5.	530014396	Kit-Clutch Assy.	23.	530014871	Assy-Fuel Cap
6.	530056069	Assy-Drum	24.	530059104	Lockout-Throttle
7.	530058833	Assy-Gear Box (incl.# 9-11)	25.	530015934	Screw
8.	530015886	Screw	26.	530057821	Cover-Handle
9.	530016013	Bearing-Gear	27.	530015940	Screw
10.	530096009	Assy-Pinion	28.	530015934	Screw
11.	530015805	Screw	29.	530015775	Screw
12.	530032121	Bushing-Blade	30.	530057818	Lever-Trigger
13.	530036046	Plate-Isolator	31.	530015770	Screw
14.	530015849	Screw	32.	530036123	Spring-Trigger
15.	530015934	Screw	33.	530053884	Trigger
16.	530029916	Cover-Gear Box Plate	34.	530094992	Handle-Front
17.	530071777	Kit-Drive Gear Ass'y. (Incl. #12)	35.	530015955	Screw
18.	530029948	Seal-Blade (Felt)			

✓ = NEW PART NUMBER FOR THIS IPL * = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
 ● = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.