


E0110-A012C

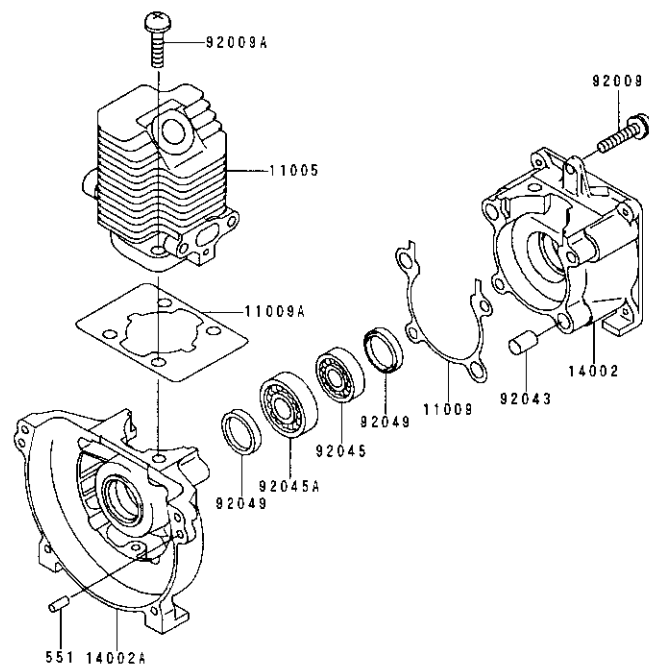


Ref No	Part No	Description
551	551A0410	Pin-dowel
11005	11005-2080	Cylinder-engine
11009	11009-2274	Gasket
11009a	11009-2732	Gasket,cylinder
14002	14002-2185	Crankcase
14002a	14002-2199	Crankcase
92009	92009-2115	Screw
92009a	92009-2143	Screw
92043	92043-1302	Pin
92045	92045-2006	Bearing-ball,6000c3
92045a	92045-2056	Bearing-ball,6200c3
92049	92049-2074	Seal-oil

Ref No	Part No	Description
--------	---------	-------------


13001	13001-2108	Piston-engine
13002	13002-2072	Pin-piston
13003	13003-2106	Ring-piston Top
49119	49119-6052	Crankshaft-assy
92025	92025-2124	Shim,t=0.10
92025a	92025-2125	Shim,t=0.20
92025b	92025-2126	Shim,t=0.40
92025c	92025-2127	Shim,t=0.60
92033	92033-2060	Ring-snap
92046	13033-2003	Bearing-needle


E0120-A009A

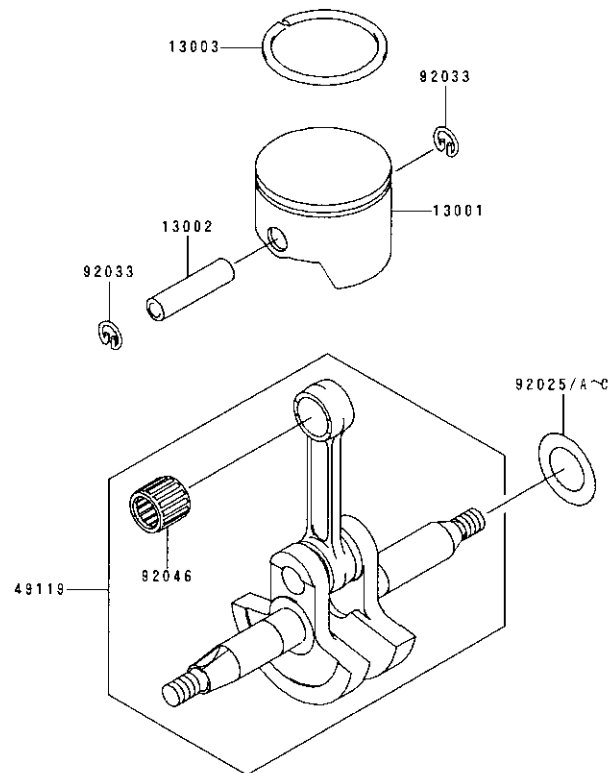


Ref No	Part No	Description
234	234B0516	Screw-pan-wsp+-
242	242B0412	Screw-pan-wsp+-
14024	14024-2103	Cover
49089	49089-2432	Shroud-engine
59066	59066-2395-9B	Housing-fan

E0150-A028A

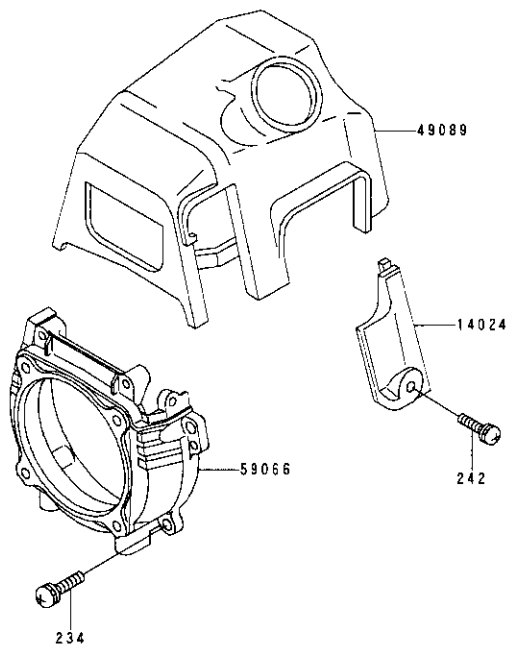

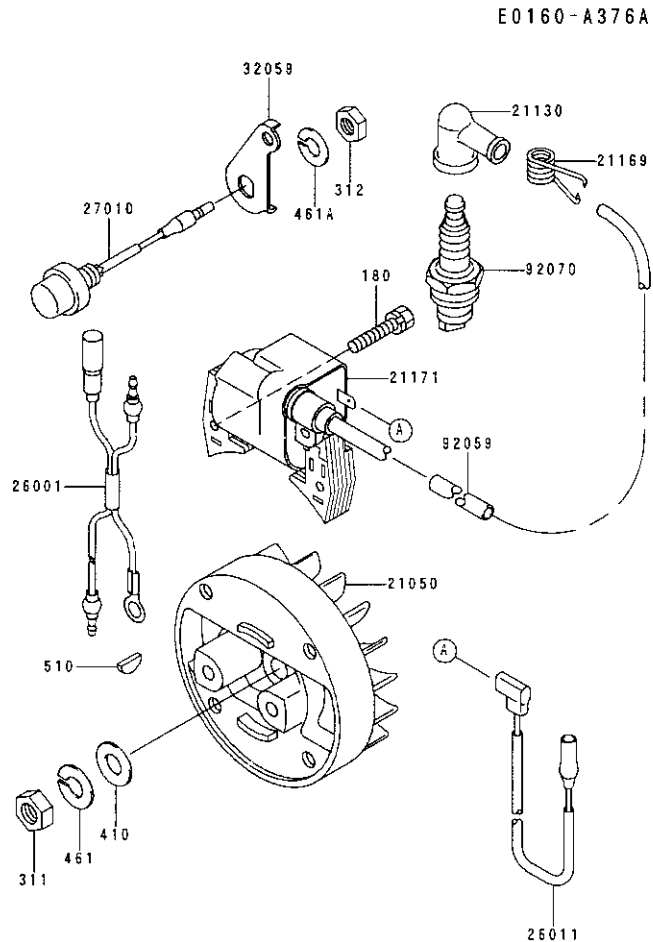


Ref No	Part No	Description
180	180B0524	Bolt-upset-ws
311	311B0600	Nut-hex
312	312B0800	Nut-hex
410	410B0600	W-plain-s
461	461F0600	Washer-spring
461a	461F0800	Washer-spring
510	510A3100	Key-woodruff
21050	21050-2255	Flywheel
21130	21130-2056	Cap-spark Plug
21169	21169-2051	Terminal
21171	21171-2204	Coil-assy-ignition
26001	26001-2203	Harness
26011	26011-2332	Wire-lead,l=200
27010	27010-2087	Switch
32059	32059-2056	Bracket-switch
92059	92059-2111	Tube
92070	92070-2060	Plug-spark,bmr6a(ngk)

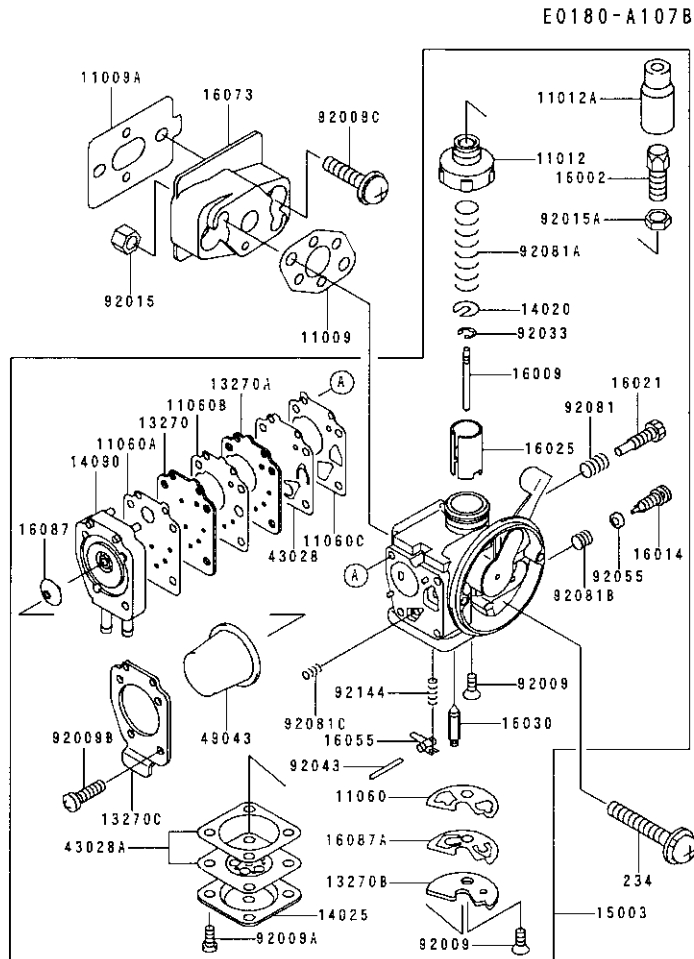


Ref No	Part No	Description
234	234B0543	Screw-pan-wsp+-
11009	11009-2727	Gasket,carburetor
11009a	11009-2733	Gasket,insulator
11012	11012-2185	Cap,body
11012a	11012-2230	Cap,carburetor
11060	11060-2307	Gasket
11060a	11060-2320	Gasket
11060b	11060-2321	Gasket
11060c	11060-2322	Gasket
13270	13270-2035	Plate
13270a	13270-2036	Plate
13270b	13270-2042	Plate
13270c	13270-2067	Plate
14020	14020-2009	Retainer,valve
14025	14025-2027	Cover
14090	14090-2066	Cover
15003	15003-2402	Carburetor-assy
16002	16002-2004	Adjuster-cable
16009	16009-2146	Needle-jet
16014	16014-2064	Screw-pilot Air
16021	16021-2008	Screw-throttle Stop
16025	16025-2180	Valve-throttle
16030	16030-2087	Valve-float
16055	13168-2118	Arm-float
16073	16073-2179	Insulator
16087	16087-2059	Valve-check
16087a	16087-2060	Valve-check
43028	43028-2084	Diaphragm
43028a	43028-2085	Diaphragm
49043	49043-2071	Pump-priming
92009	92009-2053	Screw
92009a	92009-2061	Screw
92009b	92009-2068	Screw
92009c	92009-2249	Screw,5x20
92015	92015-2097	Nut,m5
92015a	92015-2124	Nut
92033	92033-2070	Ring-snap
92043	92043-2099	Pin
92055	92055-2067	Ring-o
92081	92081-2245	Spring
92081a	92081-2246	Spring,throttle
92081b	92081-2249	Spring
92081c	92081-2340	Spring
92144	92144-2009	Spring

E0190-A011B

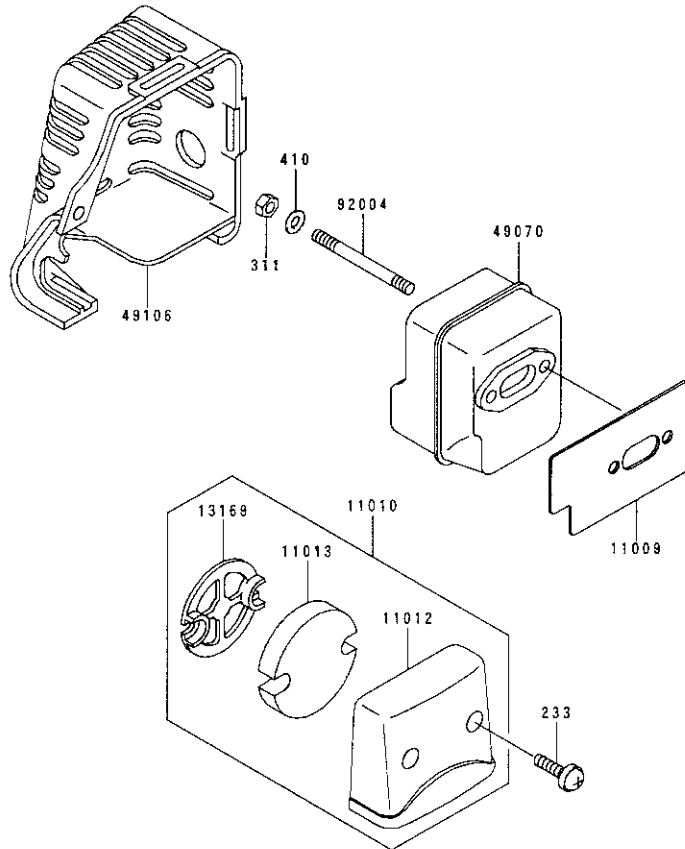


Ref No	Part No	Description
233	233B0416	Screw-pan-wp+-
311	311B0500	Nut-hex
410	410B0500	W-plain-s
11009	11009-2750	Gasket,muffler
11010	11010-2189	Filter-assy-air
11012	11012-2073	Cap
11013	11013-2080	Element-air Filter
13169	13169-2310	Plate
49070	49070-2452-9X	Muffler-comp
49106	49106-2420	Cover-muffler
92004	92004-2120	Stud

E0200-A180A

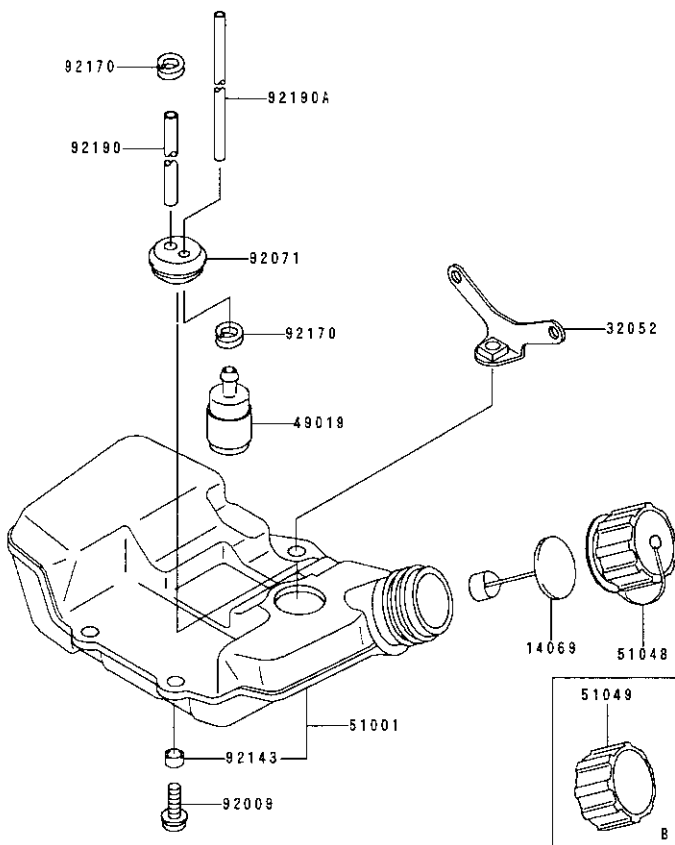

Ref No	Part No	Description
14069	14069-2056	Breather
32052	32052-2176	Bracket-tank
49019	49019-2111	Filter-fuel
51001	51001-2272	Tank-comp-fuel
51048	51048-2066	Cap-assy-tank
51049	51049-2057	Cap-tank
92009	92009-2319	Screw,5x14
92071	92071-2142	Grommet,fuel Tank
92143	92143-2163	Collar
92170	92170-2080	Clamp,fuel Filter
92190	92190-2174	Tube,3x6x90
92190a	92190-2177	Tube,3x5x160

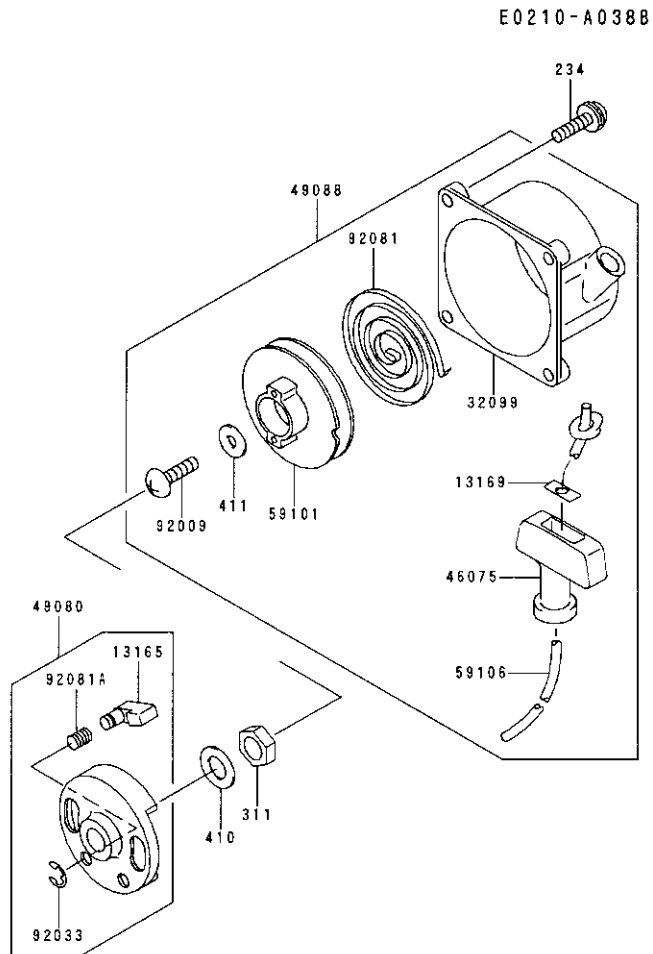

Ref No	Part No	Description
234	234B0518	Screw-pan-wsp+
311	311B0600	Nut-hex
410	410B0600	W-plain-s
411	411B0500	Washer-plain
13165	13165-2052	Pawl
13169	13169-2386	Plate, recoil Starter
32099	32099-2056	Case, recoil Starter
46075	46075-2056	Grip
49080	49080-2090	Pulley-starting
49088	49088-2241	Starter-recoil
59101	59101-2051	Reel
59106	59106-2057	Rope, 3x890
92009	92009-2206	Screw, 5x12
92033	92033-2010	Ring-snap
92081	92081-2238	Spring
92081a	92081-2253	Spring

Ref No	Part No	Description
13081	13081-2204	Clutch-assy
13270	13270-2048	Plate
49049	49049-2096	Shoe-clutch
92043	92043-2069	Pin
92144	92144-2086	Spring,clutch

E0220-A014A

