


RELAY IS TO BE TAPED TO CONDUIT OF WIRE HARNESS (829-04120). TAPE SHOULD WRAP AROUND RELAY AND BASE (MIN 1 WRAP) BEFORE BEING TAPED TO HARNESS (MIN 2 WRAPS).

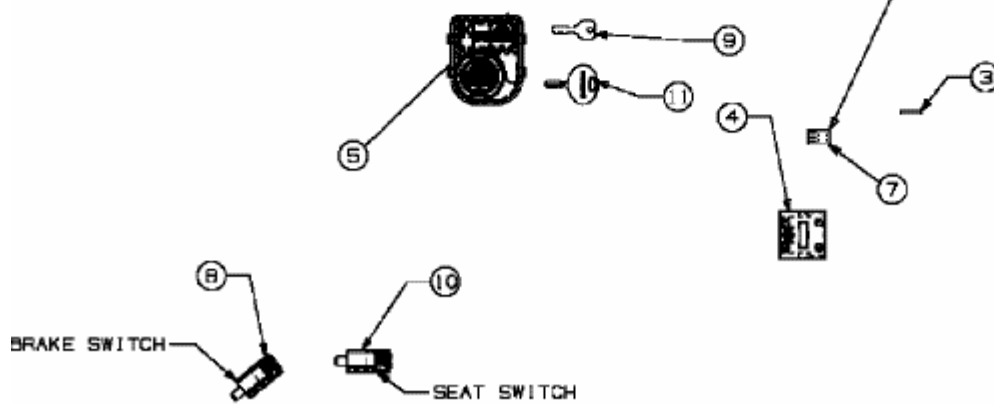

E3-02372A-01