


SN 210 A > 13BT508N678 (2003) > SITZWANNE

**500er Serie**  
**Fender , Auto Drive ,Rear Discharge**

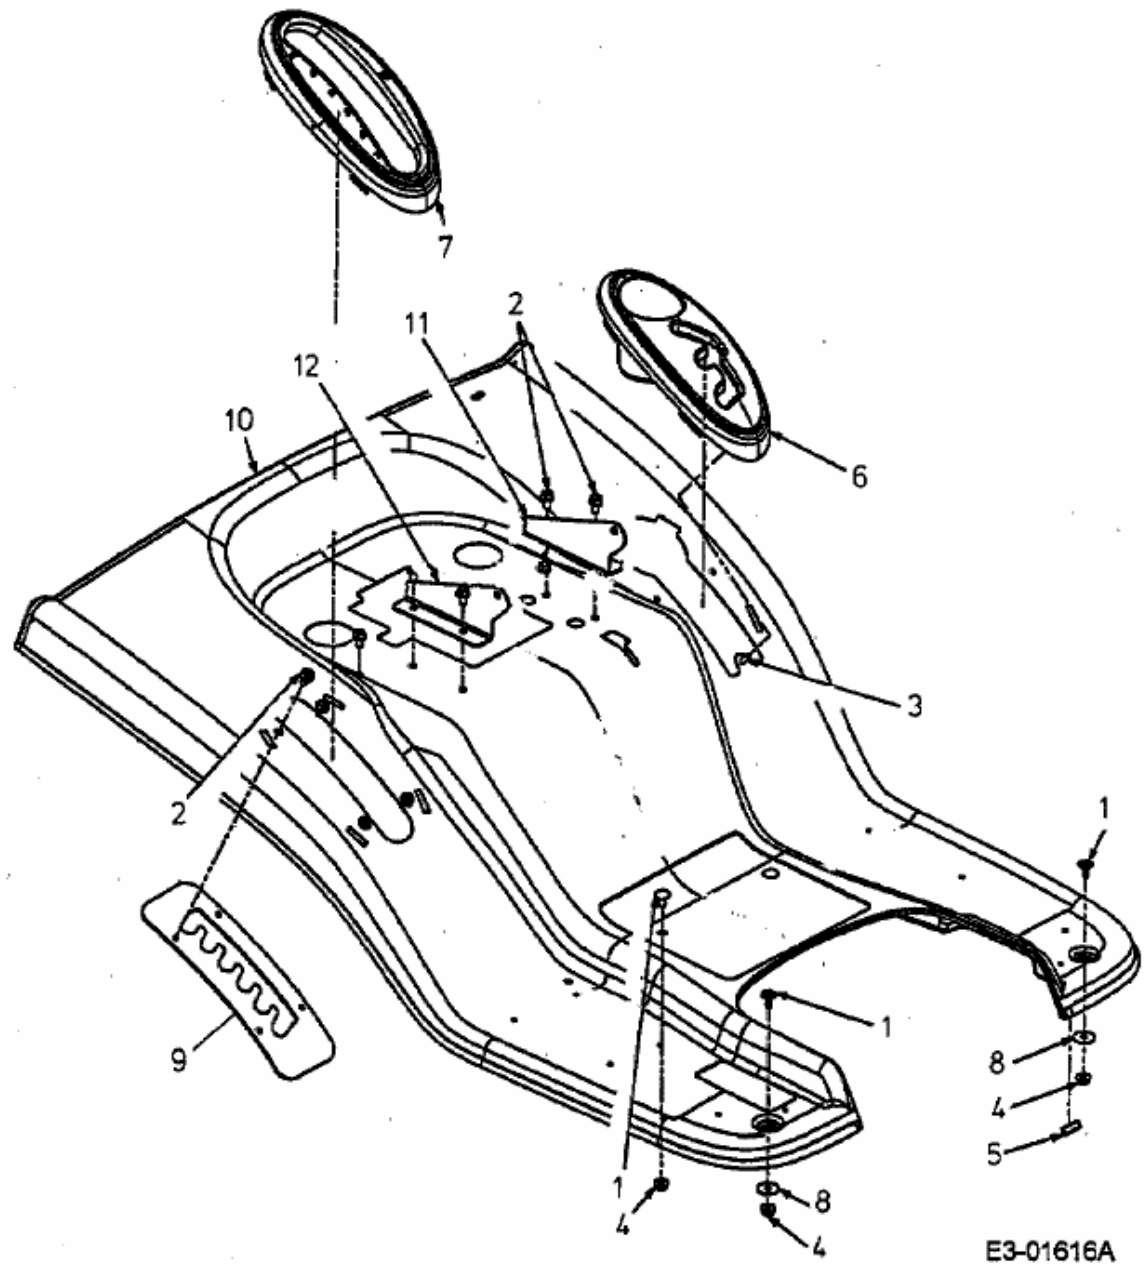

E3-01616A