


SPIDER 76 RDT > 13D1452C676 (2008) > SITZ

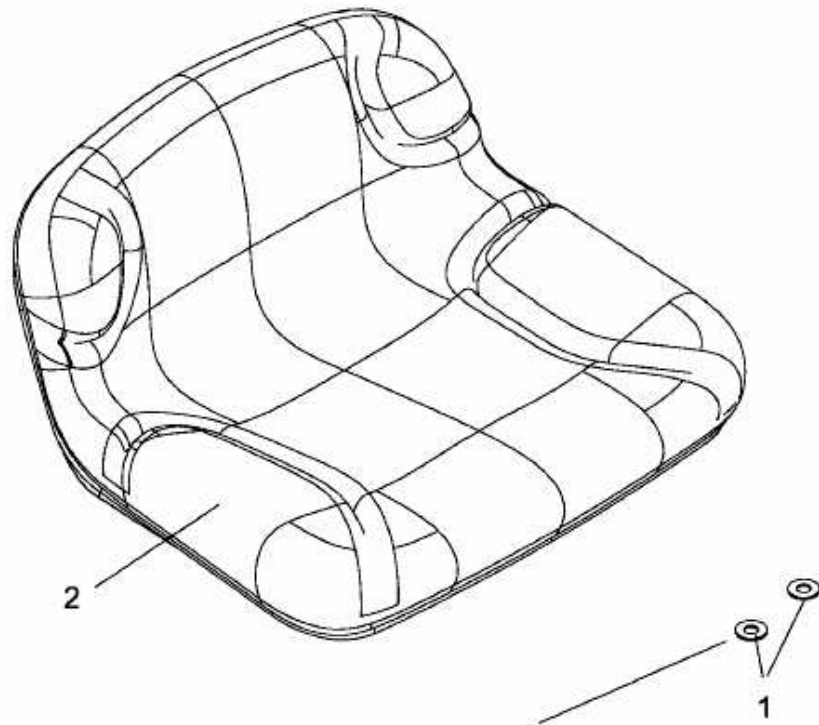

THESE WASHERS ARE TO BE USED  
IN BETWEEN FRONT TWO RIVET NUTS  
IN BOTTOM OF SEAT PAN AND SEAT  
MOUNTING PLATE.

E3-03973A-01