


SPIDER 76 RD > 13DH452C676 (2008) > SITZ

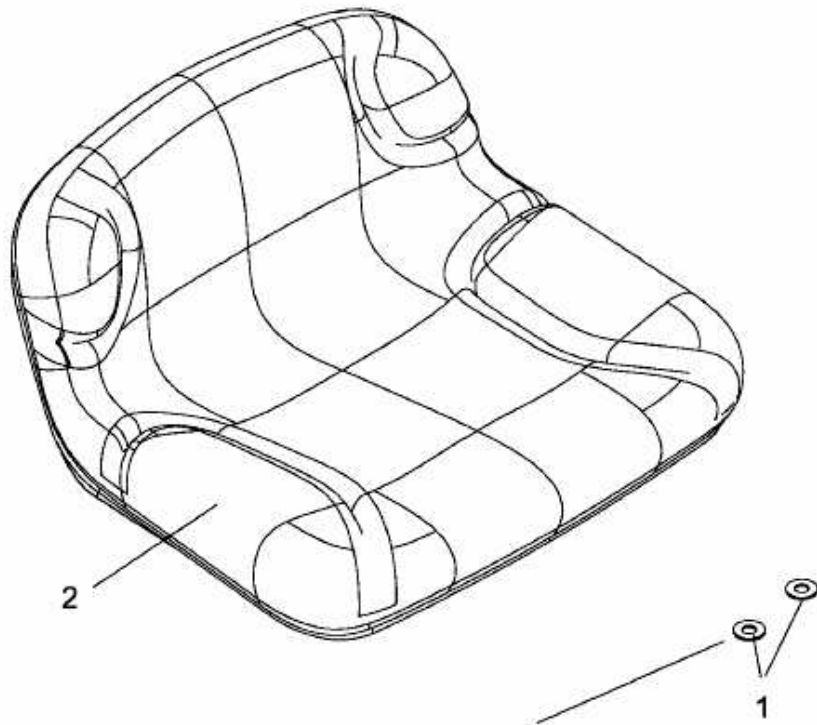

THESE WASHERS ARE TO BE USED
IN BETWEEN FRONT TWO RIVET NUTS
IN BOTTOM OF SEAT PAN AND SEAT
MOUNTING PLATE.

E3-03973A-01